

WALL MOUNTED SPLIT-TYPE AIR CONDITIONERS

# SERVICE MANUAL

---

No.200923

## **XIGMA** **TURBOCOOL series**

Models

**XG-TX21RHA**

**XG-TX27RHA**

**XG-TX35RHA**

**XG-TX50RHA**

**XG-TX70RHA**

## **CONTENTS**

- 1. IMPORTANT NOTICE**
- 2. PRODUCT DIMENSIONS**
- 3. REFRIGERATION CYCLE DIAGRAM**
- 4. OPERATION DETAILS**
- 5. WIRING DIAGRAM**
- 6. EXPLOSION VIEW AND PART LISTS**
- 7. PRECAUTION**
- 8. NAMES OF PARTS**
- 9. INSTALLATION**
- 10. TROUBLE SHOOTING**

## 1. IMPORTANT NOTICE

This service manual is intended for use by individuals possessing adequate backgrounds of electrical, electronic and mechanical experience. Any attempt to repair the appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

The information, specifications and parameters are subject to change due to technical modification or improvement without any prior notice. The accurate specifications are presented on the nameplate label.

### How to order spare parts

To have your order filled promptly and correctly, please furnish the following information:

Model No. with Indoor or Outdoor

Part No. in the Explosion View

Part Name


The quantity you ordered

### Ambient temperature


| Mode type           | Climate type |         |         |
|---------------------|--------------|---------|---------|
|                     | T1           | T2      | T3      |
| Cooling only        | 18-43°C      | 10-35°C | 21-52°C |
| Cooling and heating | -7-43°C      | -7-35°C | -7-52°C |
| Heater              | ~43° C       | ~35° C  | ~52° C  |

## 2. PRODUCT DIMENSIONS

### Indoor Unit:

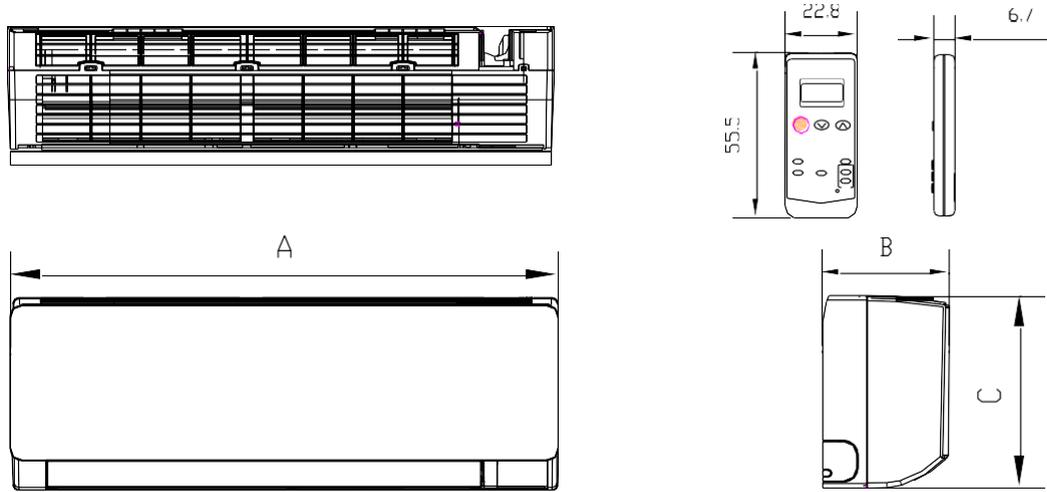


### Outdoor Unit:

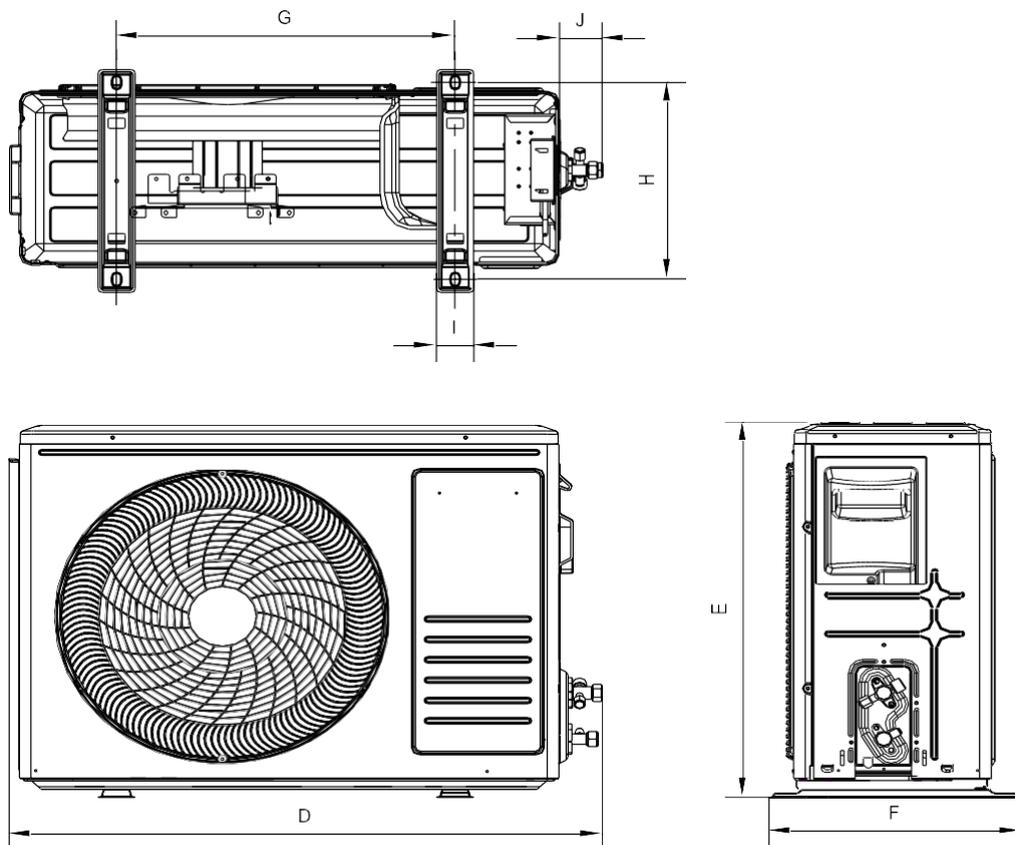


| Model      | Indoor unit |     |     |     |     | Outdoor unit |     |     |       |      |    |
|------------|-------------|-----|-----|-----|-----|--------------|-----|-----|-------|------|----|
|            | A           | B   | C   | D   | E   | F            | G   | H   | I     | J    | K  |
| XG-TX21RHA | 698         | 190 | 255 | 660 | 459 | 276          | 362 | 276 | 256.2 | 48   | 52 |
| XG-TX27RHA | 698         | 190 | 255 | 660 | 459 | 276          | 362 | 276 | 256.2 | 48   | 52 |
| XG-TX35RHA | 777         | 205 | 250 | 712 | 498 | 234          | 415 | 291 | 225   | 48.5 | 52 |
| XG-TX50RHA | 910         | 205 | 292 | 794 | 602 | 288          | 516 | 349 | 314   | 53.9 | 52 |
| XG-TX70RHA | 910         | 205 | 292 | 820 | 605 | 300          | 518 | 357 | 329   | 55   | 63 |

### 3. REFRIGERATION CYCLE DIAGRAM

#### Cooling only

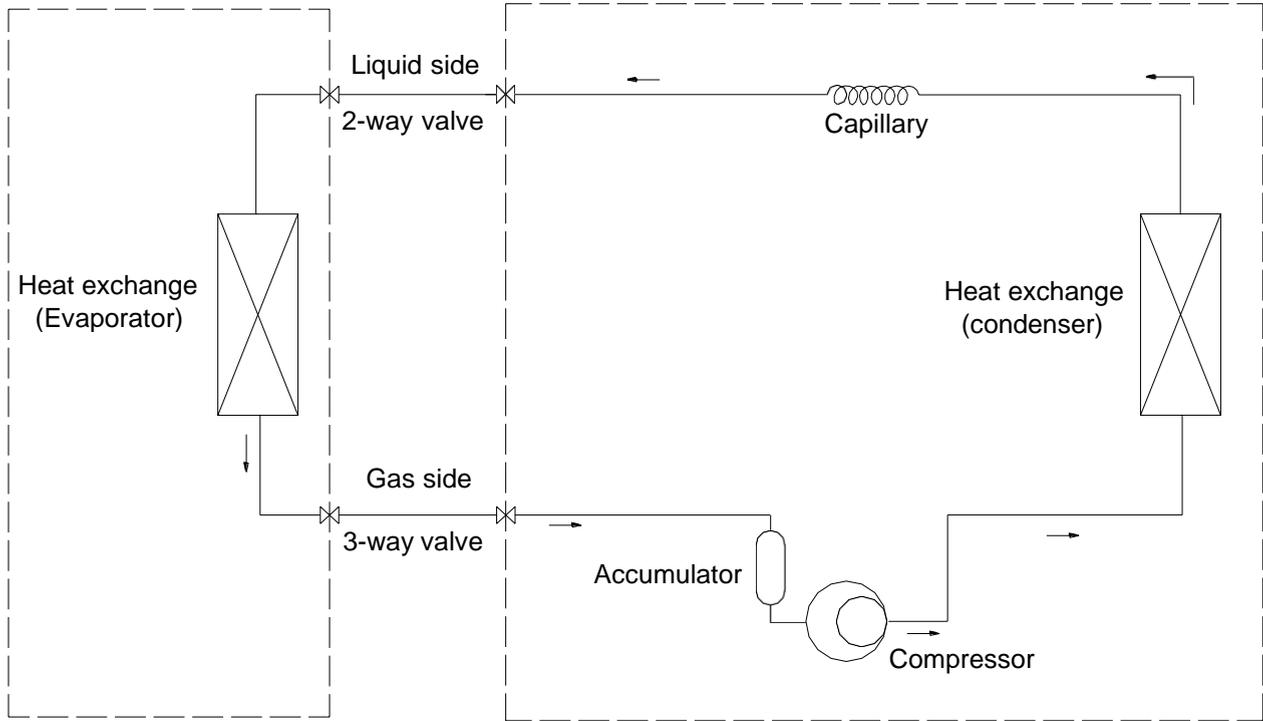

#### Heat pump

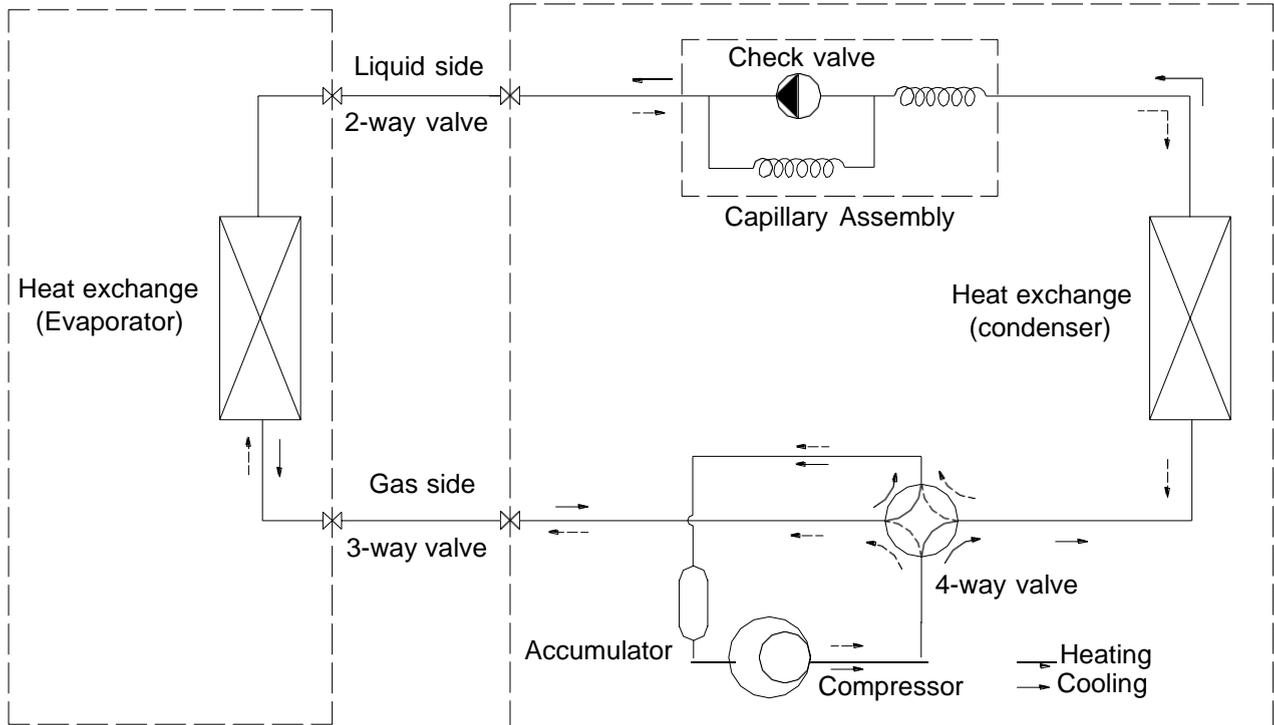

## 4 OPERATION DETAILS

### Failure code

The following table shows the fault protections.

When failures happens, the PCB alarms and buzzer rings three times, Failure code shows on display board, and the PCB operates protection procedures.

Failure code: For the machine with LED display (**88**), the code shows on LED, for machine without LED, the code reflects by the running light.

| Failure   | Running Light Flash | LED Display ( <b>88</b> ) |
|---|---------------------|---------------------------|
| IPT Sensor Failure                                    | Twice / cycle       | E2                        |
| System Protection                                     | 4 times/cycle       | E4                        |
| System Protection(high/low pressure protection model) | /                   | E5                        |
| Indoor Fan Motor Failure                              | 6 times / cycle     | E6                        |

While failure happens, the code displayed statically, if there are several failure codes reported at the same time, then failure codes appears by turns every eight seconds correspondingly.

a. Sensor's failure protection: when the sensor tested temperature out of the range ---  
 $50^{\circ}\text{C} \leq T \leq 110^{\circ}\text{C}$ , sensor failure is determined.


Once RT and/or IPT sensor failure appears, the compressor stops, and indoor and outdoor fan motors shut off. Remote controller doesn't response to any signal except for shutdown. During failure the machine can run in fan mode. After the failure is settled, the PCB restores to standby status.

b. Failure protection of Indoor PG fan motor: If there is no feedback signal of rotated speed within 5s, the indoor fan motor stops, meanwhile, the compressor, outdoor fan motor, four-way valve and/or auxiliary electric heater etc. also cut down.


The indoor fan motor restarts again 10 seconds later, if still there is no feedback signal of rotated speed within 5 seconds, the A/C stops and goes into indoor fan motor failure protection, buzzer rings three times, and running light flashes at 6 times per 8 seconds. Once there is feedback signal while the failure recovery, the failure will relieve automatically.

# 5. WIRING DIAGRAM

**MODEL:** XG-TX21RHA, XG-TX27RHA, XG-TX35RHA, XG-TX50RHA, XG-TX70RHA  
**INDOOR UNIT:**

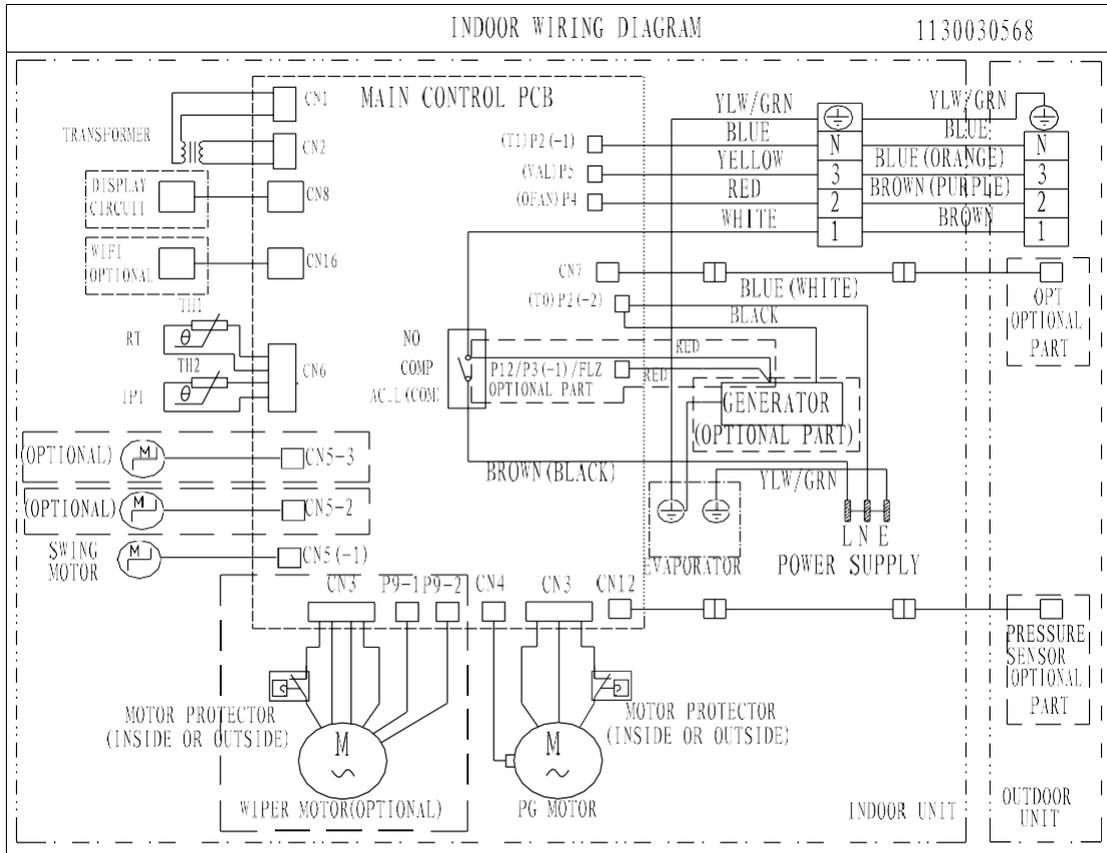


## OUTDOOR UNIT

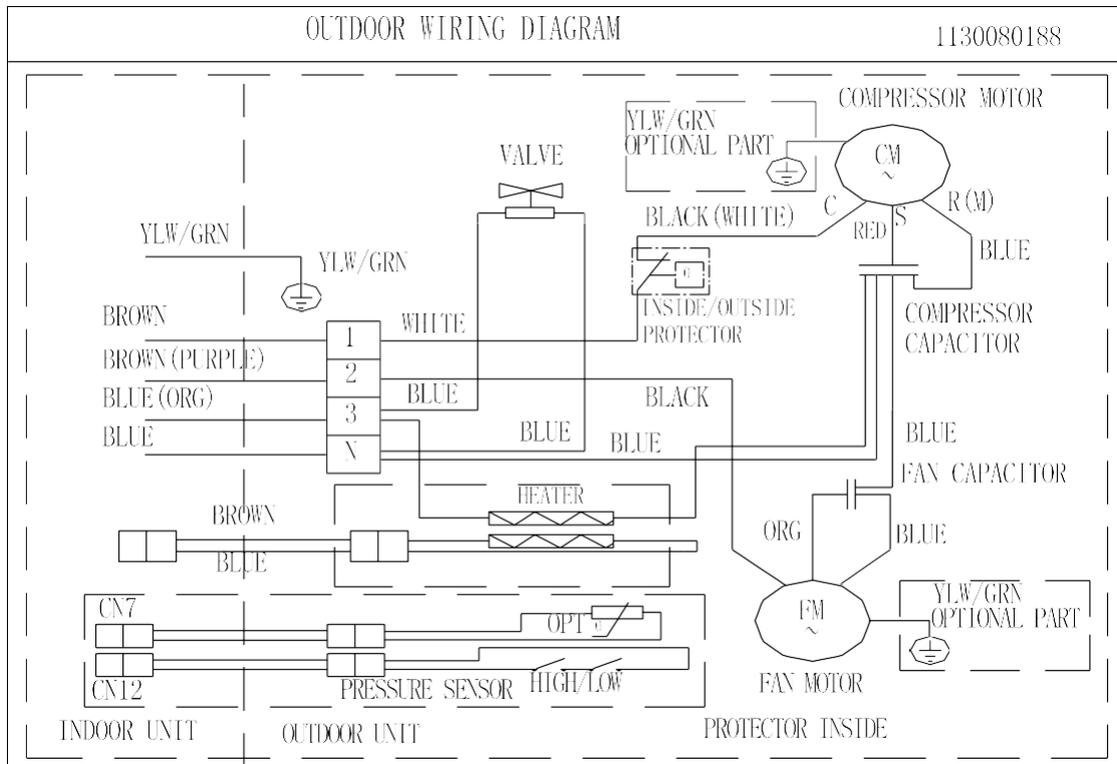


# a. EXPLOSION VIEW AND PARTS

Indoor Unit- XG-TX21RHA-IDU

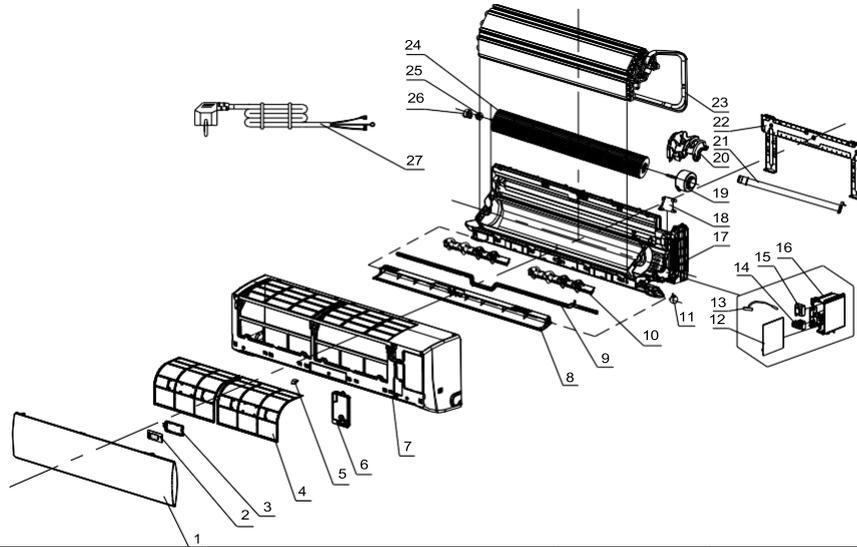


| No. | Part No.     | Part Name               | Q'ty | Remark                      |
|-----|--------------|-------------------------|------|-----------------------------|
| 1   | 41106-002092 | Front Panel             | 1    |                             |
| 2   | 31102-000085 | Display PCB             | 1    |                             |
| 3   | 42003-000001 | Display PCB Box         | 1    |                             |
| 4   | 42008-000070 | Air Filter              | 2    |                             |
| 5   | 41108-000066 | Screw Cover             | 1    |                             |
| 6   | 41105-000146 | Electrical Box Cover    | 1    |                             |
| 7   | 41106-002347 | Face Frame              | 1    |                             |
| 8   | 41103-000103 | Vane                    | 1    |                             |
| 9   | 41101-000189 | Vertical Vane Connector | 1    |                             |
| 10  | 41101-000042 | Vertical Vane Assembly  | 2    |                             |
| 11  | 22001-000313 | Vane Motor              | 1    |                             |
| 12  | 31101-000692 | Main PCB                | 1    |                             |
| 13  | 10104-100014 | Indoor Sensor Assembly  | 1    |                             |
| 14  | 11304-100023 | Terminal                | 1    |                             |
| 15  | 10502-100030 | Transformer             | 1    |                             |
| 16  | 41105-000361 | Electrical Box          | 1    |                             |
| 17  | 41199-003279 | Base                    | 1    |                             |
| 18  | 41101-000242 | In And Out Pipe Fixer   | 1    |                             |
| 19  | 22001-000273 | Indoor Motor            | 1    |                             |
| 20  | 42003-000060 | Indoor Motor Cover      | 1    |                             |
| 21  | 42009-000011 | Drainage Hose           | 1    |                             |
| 22  | 41109-000042 | Installation Plate      | 1    |                             |
| 23  | 92011-007510 | Evaporator              | 1    |                             |
| 24  | 42004-000040 | Cross Fan               | 1    |                             |
| 25  | 42007-000001 | Bearing Mount           | 1    |                             |
| 26  | 41101-000251 | Bearing Mount Supporter | 1    |                             |
| 27  | 22007-000015 | Power Supply Cord       | 1    |                             |
| 28  | 22013-000237 | Remote Controller       | 1    | Not shown in Explosion view |
| 29  | A1101-000547 | Indoor Carton           | 1    |                             |
| 30  | A2006-000050 | Left Foaming            | 1    |                             |
| 31  | A2006-000030 | Right Foaming           | 1    |                             |

Outdoor Unit- XG-TX21RHA-ODU

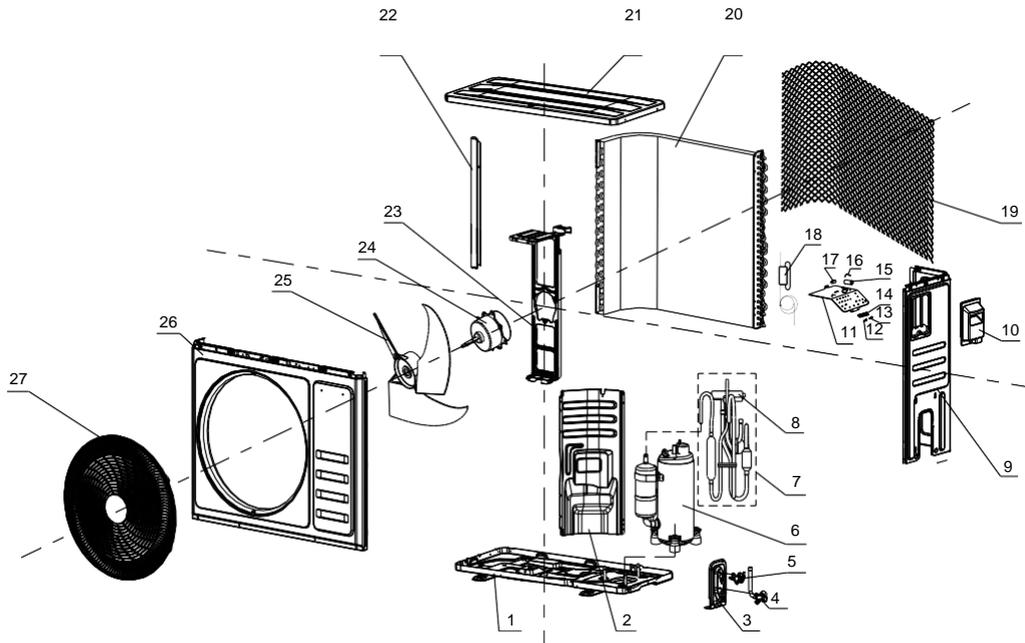


| No. | Part No.     | Part Name                     | Q'ty | Remark                      |
|-----|--------------|-------------------------------|------|-----------------------------|
| 1   | 41202-000412 | Base                          | 1    |                             |
| 2   | 41208-000225 | Partition plate               | 1    |                             |
| 3   | 41204-000018 | Valve Supporter               | 1    |                             |
| 4   | 92007-001041 | Three-way Valve               | 1    |                             |
| 5   | 92007-007328 | Two-way Valve                 | 1    |                             |
| 6   | 92014-000840 | Compressor And It Accessories | 1    |                             |
| 7   | 92007-009577 | 4-way Valve Assembly          | 1    |                             |
| 8   | 92008-000313 | 4-way Valve                   | 1    |                             |
| 9   | 41205-000212 | Right Plate                   | 1    |                             |
| 10  | 41201-000029 | Electrical Box Cover          | 1    |                             |
| 11  | 41214-001174 | Electrical Parts Fixing Plate | 1    |                             |
| 12  | 42001-000037 | Cable Clamp(φ6)               | 1    |                             |
| 13  | 42001-000035 | Cable Clamp(φ7)               | 1    |                             |
| 14  | 210902378    | Terminal                      | 1    |                             |
| 15  | 22003-000009 | Compressor Capacitor          | 1    |                             |
| 16  | 42001-000029 | Capacitor Strip               | 1    |                             |
| 17  | 10303-100020 | Fan Motor Capacitor           | 1    |                             |
| 18  | 92007-009192 | Capillary Assembly            | 1    |                             |
| 19  | 42011-000440 | Grille                        | 1    | Optional                    |
| 20  | 92011-006422 | Condenser                     | 1    |                             |
| 21  | 41207-000047 | Top Cover                     | 1    |                             |
| 22  | 41203-000112 | Outdoor Motor Supporter       | 1    |                             |
| 23  | 22001-000006 | Outdoor Motor                 | 1    |                             |
| 24  | 42004-000192 | Propeller Fan                 | 1    |                             |
| 25  | 41205-000213 | Left Grille Supporter         | 1    |                             |
| 26  | 41206-000074 | Front Plate                   | 1    |                             |
| 27  | 42011-000415 | Fan Guard                     | 1    |                             |
| 28  | A1201-012624 | Base Carton                   | 1    | Not shown in Explosion view |
| 29  | A1201-012623 | Cabinet Carton                | 1    |                             |
| 30  | A1202-000084 | Base Foaming                  | 1    |                             |
| 31  | A1202-000083 | Cover Forming                 | 1    |                             |

Indoor Unit- XG-TX27RHA-IDU

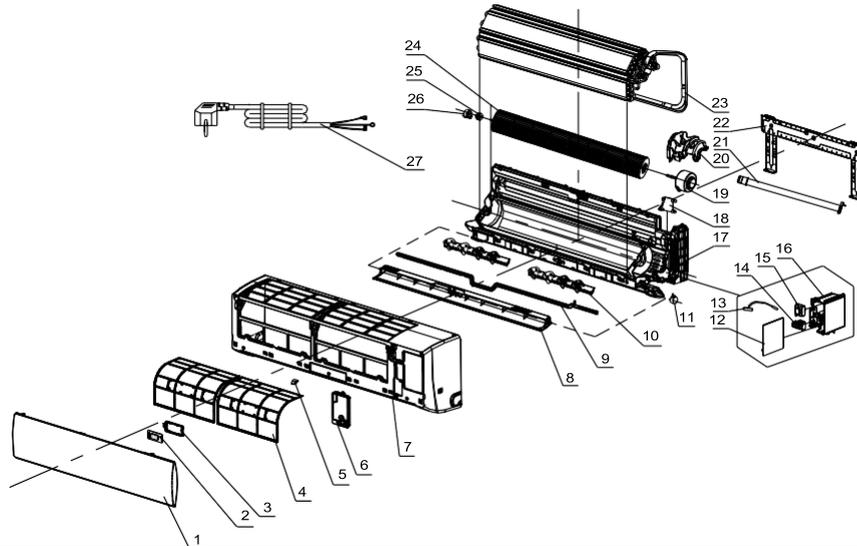


| No. | Part No.     | Part Name               | Q'ty | Remark                      |
|-----|--------------|-------------------------|------|-----------------------------|
| 1   | 41106-002092 | Front Panel             | 1    |                             |
| 2   | 31102-000085 | Display PCB             | 1    |                             |
| 3   | 42003-000001 | Display PCB Box         | 1    |                             |
| 4   | 42008-000070 | Air Filter              | 2    |                             |
| 5   | 41108-000066 | Screw Cover             | 1    |                             |
| 6   | 41105-000146 | Electrical Box Cover    | 1    |                             |
| 7   | 41106-002347 | Face Frame              | 1    |                             |
| 8   | 41103-000103 | Vane                    | 1    |                             |
| 9   | 41101-000189 | Vertical Vane Connector | 1    |                             |
| 10  | 41101-000042 | Vertical Vane Assembly  | 2    |                             |
| 11  | 22001-000313 | Vane Motor              | 1    |                             |
| 12  | 31101-000692 | Main PCB                | 1    |                             |
| 13  | 10104-100014 | Indoor Sensor Assembly  | 1    |                             |
| 14  | 11304-100023 | Terminal                | 1    |                             |
| 15  | 10502-100030 | Transformer             | 1    |                             |
| 16  | 41105-000361 | Electrical Box          | 1    |                             |
| 17  | 41199-003279 | Base                    | 1    |                             |
| 18  | 41101-000242 | In And Out Pipe Fixer   | 1    |                             |
| 19  | 22001-000273 | Indoor Motor            | 1    |                             |
| 20  | 42003-000060 | Indoor Motor Cover      | 1    |                             |
| 21  | 42009-000011 | Drainage Hose           | 1    |                             |
| 22  | 41109-000042 | Installation Plate      | 1    |                             |
| 23  | 92011-007510 | Evaporator              | 1    |                             |
| 24  | 42004-000040 | Cross Fan               | 1    |                             |
| 25  | 42007-000001 | Bearing Mount           | 1    |                             |
| 26  | 41101-000251 | Bearing Mount Supporter | 1    |                             |
| 27  | 22007-000015 | Power Supply Cord       | 1    |                             |
| 28  | 22013-000237 | Remote Controller       | 1    | Not shown in Explosion view |
| 29  | A1101-000547 | Indoor Carton           | 1    |                             |
| 30  | A2006-000050 | Left Foaming            | 1    |                             |
| 31  | A2006-000030 | Right Foaming           | 1    |                             |

Outdoor Unit- XG-TX27RHA-ODU

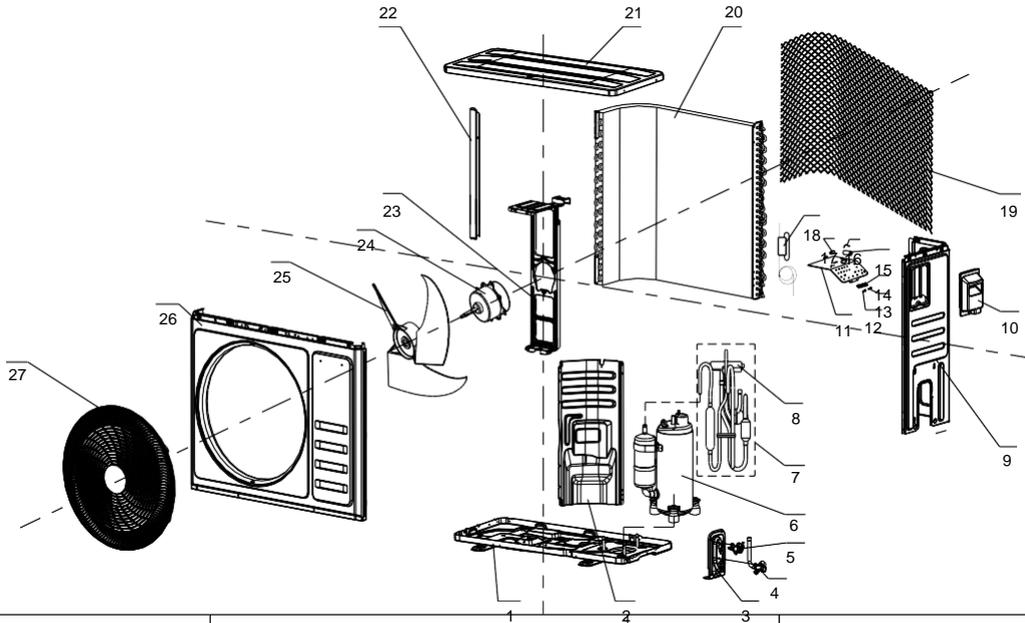


| No. | Part No.     | Part Name                     | Q'ty | Remark                      |
|-----|--------------|-------------------------------|------|-----------------------------|
| 1   | 41202-000412 | Base                          | 1    |                             |
| 2   | 41208-000225 | Partition plate               | 1    |                             |
| 3   | 41204-000018 | Valve Supporter               | 1    |                             |
| 4   | 92007-001041 | Three-way Valve               | 1    |                             |
| 5   | 92007-007328 | Two-way Valve                 | 1    |                             |
| 6   | 92014-000847 | Compressor And It Accessories | 1    |                             |
| 7   | 92007-009548 | 4-way Valve Assembly          | 1    |                             |
| 8   | 92008-000313 | 4-way Valve                   | 1    |                             |
| 9   | 41205-000212 | Right Plate                   | 1    |                             |
| 10  | 41201-000029 | Electrical Box Cover          | 1    |                             |
| 11  | 41214-001174 | Electrical Parts Fixing Plate | 1    |                             |
| 12  | 42001-000037 | Cable Clamp(φ6)               | 1    |                             |
| 13  | 42001-000035 | Cable Clamp(φ7)               | 1    |                             |
| 14  | 210902378    | Terminal                      | 1    |                             |
| 15  | 22003-000009 | Compressor Capacitor          | 1    |                             |
| 16  | 42001-000029 | Capacitor Strip               | 1    |                             |
| 17  | 10303-100020 | Fan Motor Capacitor           | 1    |                             |
| 18  | 92007-009192 | Capillary Assembly            | 1    |                             |
| 19  | 42011-000440 | Grille                        | 1    | Optional                    |
| 20  | 92011-006422 | Condenser                     | 1    |                             |
| 21  | 41207-000047 | Top Cover                     | 1    |                             |
| 22  | 41203-000112 | Outdoor Motor Supporter       | 1    |                             |
| 23  | 22001-000007 | Outdoor Motor                 | 1    |                             |
| 24  | 42004-000192 | Propeller Fan                 | 1    |                             |
| 25  | 41205-000213 | Left Grille Supporter         | 1    |                             |
| 26  | 41206-000074 | Front Plate                   | 1    |                             |
| 27  | 42011-000415 | Fan Guard                     | 1    |                             |
| 28  | A1201-012624 | Base Carton                   | 1    | Not shown in Explosion view |
| 29  | A1201-012623 | Cabinet Carton                | 1    |                             |
| 30  | A1202-000084 | Base Foaming                  | 1    |                             |
| 31  | A1202-000083 | Cover Forming                 | 1    |                             |

Indoor Unit- XG-TX35RHA-IDU

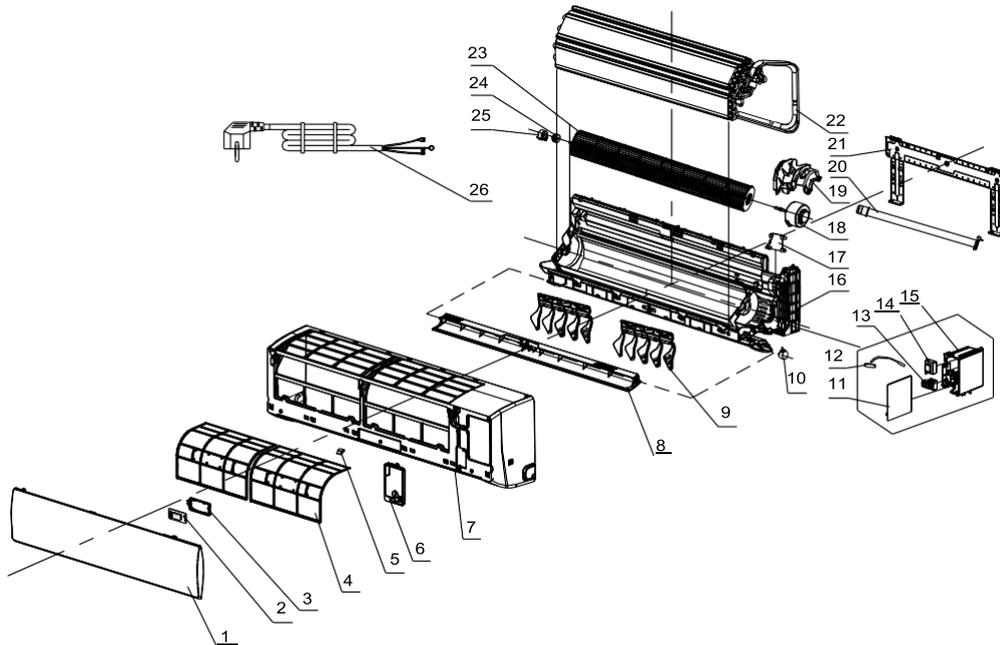


| No. | Part No.     | Part Name              | Q'ty | Remark                      |
|-----|--------------|------------------------|------|-----------------------------|
| 1   | 41106-002048 | Front Panel            | 1    |                             |
| 2   | 31102-000085 | Display PCB            | 1    |                             |
| 3   | 42003-000001 | Display PCB Box        | 1    |                             |
| 4   | 42008-000037 | Air Filter             | 2    |                             |
| 5   | 41108-000066 | Screw Cover            | 1    |                             |
| 6   | 41201-000068 | Electrical Box Cover   | 1    |                             |
| 7   | 41106-002371 | Face Frame             | 1    |                             |
| 8   | 41103-000101 | Vane                   | 1    |                             |
| 9   | 41101-000081 | Vertical Vane Assembly | 2    |                             |
| 10  | 22001-000313 | Vane Motor             | 1    |                             |
| 11  | 31101-000506 | Main PCB               | 1    |                             |
| 12  | 10104-100014 | Indoor Sensor Assembly | 1    |                             |
| 13  | 11304-100023 | Terminal               | 1    |                             |
| 14  | 41101-000242 | Transformer            | 1    |                             |
| 15  | 41105-000361 | Electrical Box         | 1    |                             |
| 16  | 41199-002735 | Base                   | 1    |                             |
| 17  | 41101-000242 | In And Out Pipe Fixer  | 1    |                             |
| 18  | 22001-000273 | Indoor Motor           | 1    |                             |
| 19  | 42003-000060 | Indoor Motor Cover     | 1    |                             |
| 20  | 42009-000011 | Drainage Hose          | 1    |                             |
| 21  | 41109-000042 | Installation Plate     | 1    |                             |
| 22  | 92011-002808 | Evaporator             | 1    |                             |
| 23  | 42004-000039 | Cross Fan              | 1    |                             |
| 24  | 42007-000001 | Bearing Mount          | 1    |                             |
| 25  | 41101-000251 | Bearing Mount holder   | 1    |                             |
| 26  | 22007-000015 | Power Supply Cord      | 1    |                             |
| 27  | 22013-000078 | Remote Controller      | 1    | Not shown in Explosion view |
| 28  | A1101-002013 | Indoor Carton          | 1    |                             |
| 29  | 41110-000221 | Left Foaming           | 1    |                             |
| 30  | 41110-000260 | Right Foaming          | 1    |                             |

Outdoor Unit- XG-TX35RHA-ODU

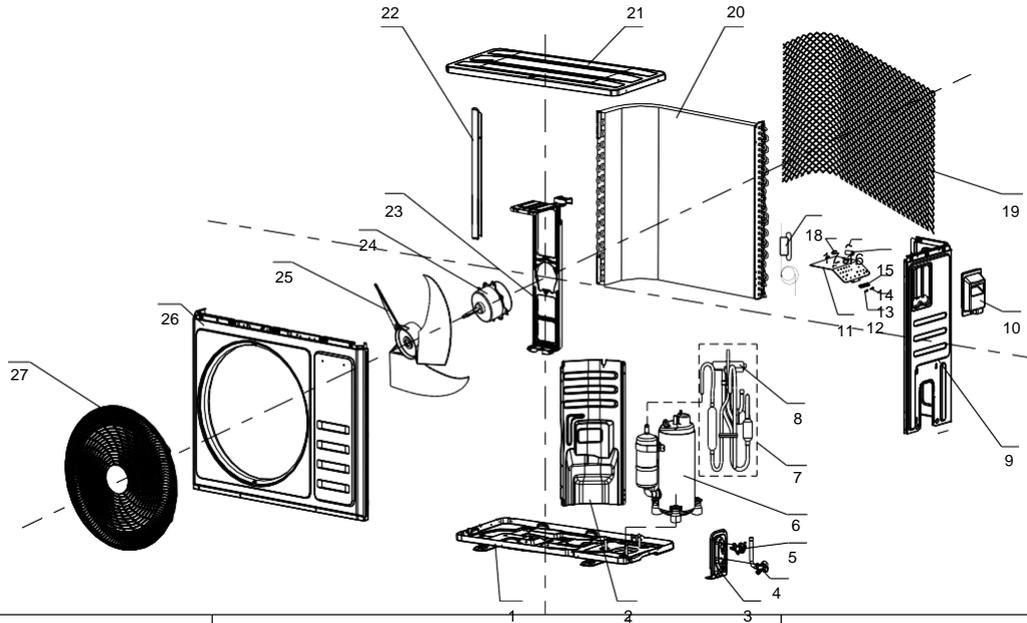


| No. | Part No.     | Part Name                     | Q'ty | Remark                      |
|-----|--------------|-------------------------------|------|-----------------------------|
| 1   | 41202-000177 | Base                          | 1    |                             |
| 2   | 41208-000139 | Partition plate               | 1    |                             |
| 3   | 41204-000018 | Valve Supporter               | 1    |                             |
| 4   | 92007-001041 | Three-way Valve               | 1    |                             |
| 5   | 92007-007317 | Two-way Valve                 | 1    |                             |
| 6   | 92014-000827 | Compressor And It Accessories | 1    |                             |
| 7   | 92007-009536 | 4-way Valve Assembly          | 1    |                             |
| 8   | 92008-000308 | 4-way Valve                   | 1    |                             |
| 9   | 41205-000206 | Right Plate                   | 1    |                             |
| 10  | 41201-000015 | Electrical Box Cover          | 1    |                             |
| 11  | 41214-000194 | Electrical Parts Box          | 1    |                             |
| 12  | 42001-000037 | Cable Clamp(φ6)               | 1    |                             |
| 13  | 42001-000035 | Cable Clamp(φ7)               | 1    |                             |
| 14  | 11304-100007 | Terminal                      | 1    |                             |
| 15  | 22003-000028 | Compressor Capacitor          | 1    |                             |
| 16  | 42001-000030 | Capacitor Strip               | 1    |                             |
| 17  | 10303-100015 | Fan Motor Capacitor           | 1    |                             |
| 18  | 92007-009155 | Capillary Assembly            | 1    |                             |
| 19  | 42011-000184 | Grille                        | 1    | Optional                    |
| 20  | 92011-007735 | Condenser                     | 1    |                             |
| 21  | 41207-000029 | Top Cover                     | 1    |                             |
| 22  | 41205-000133 | Left Grille Supporter         | 1    |                             |
| 23  | 41203-000054 | Outdoor Motor Supporter       | 1    |                             |
| 24  | 22001-000009 | Outdoor Motor                 | 1    |                             |
| 25  | 42004-000107 | Propeller Fan                 | 1    |                             |
| 26  | 41206-000054 | Front Plate                   | 1    |                             |
| 27  | 42011-000088 | Fan Guard                     | 1    |                             |
| 28  | A2005-000523 | Base Carton                   | 1    | Not shown in Explosion view |
| 29  | A1201-003463 | Cabinet Carton                | 1    |                             |
| 30  | A1202-000031 | Base Foaming                  | 1    |                             |
| 31  | 41213-000023 | Cover Forming                 | 1    |                             |

Indoor Unit- XG-TX50RHA-IDU

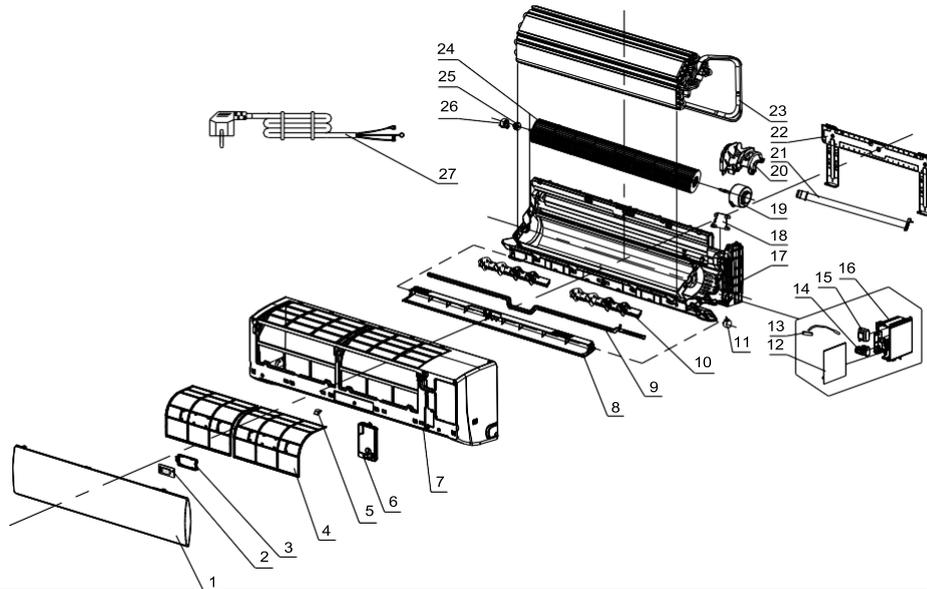


| No. | Part No.     | Part Name               | Q'ty | Remark                      |
|-----|--------------|-------------------------|------|-----------------------------|
| 1   | 41106-002078 | Front Panel             | 1    |                             |
| 2   | 31102-000085 | Display PCB             | 1    |                             |
| 3   | 42003-000001 | Display PCB Box         | 1    |                             |
| 4   | 42008-000075 | Air Filter              | 1    |                             |
| 5   | 41108-000066 | Screw Cover             | 2    |                             |
| 6   | 41105-000146 | Electrical Box Cover    | 1    |                             |
| 7   | 41106-002356 | Face Frame              | 1    |                             |
| 8   | 41103-000149 | Vane                    | 1    |                             |
| 9   | 41101-000193 | Vertical Vane Connector | 1    |                             |
| 10  | 41101-000067 | Vertical Vane Assembly  | 1    |                             |
| 11  | 22001-000321 | Vane Motor              | 1    |                             |
| 12  | 31101-000471 | Main PCB                | 1    |                             |
| 13  | 10104-100014 | Indoor Sensor Assembly  | 1    |                             |
| 14  | 11304-100023 | Terminal                | 1    |                             |
| 15  | 10502-100021 | Transformer             | 1    |                             |
| 16  | 41105-000104 | Electrical Box          | 1    |                             |
| 17  | 41102-000048 | Base                    | 1    |                             |
| 18  | 41101-000242 | In And Out Pipe Fixer   | 1    |                             |
| 19  | 22001-000268 | Indoor Motor            | 1    |                             |
| 20  | 41108-000013 | Indoor Motor Cover      | 1    |                             |
| 21  | 42009-000011 | Drainage Hose           | 1    |                             |
| 22  | 41109-000041 | Installation Plate      | 1    |                             |
| 23  | 92011-002773 | Evaporator              | 1    |                             |
| 24  | 42004-000010 | Cross Fan               | 1    |                             |
| 25  | 42007-000001 | Bearing Mount           | 1    |                             |
| 26  | 41101-000251 | Bearing Mount Supporter | 1    |                             |
| 27  | 22007-000055 | Power Supply Cord       | 1    |                             |
| 28  | 41101-000242 | In And Out Pipe Fixer   | 1    |                             |
| 29  | 22013-000237 | Remote Controller       | 1    | Not shown in Explosion view |
| 30  | A1101-000315 | Indoor Carton           | 1    |                             |
| 31  | A2006-000040 | Left Foaming            | 1    |                             |
| 32  | A2006-000019 | Right Foaming           | 1    |                             |

Outdoor Unit- XG-TX50RHA-ODU

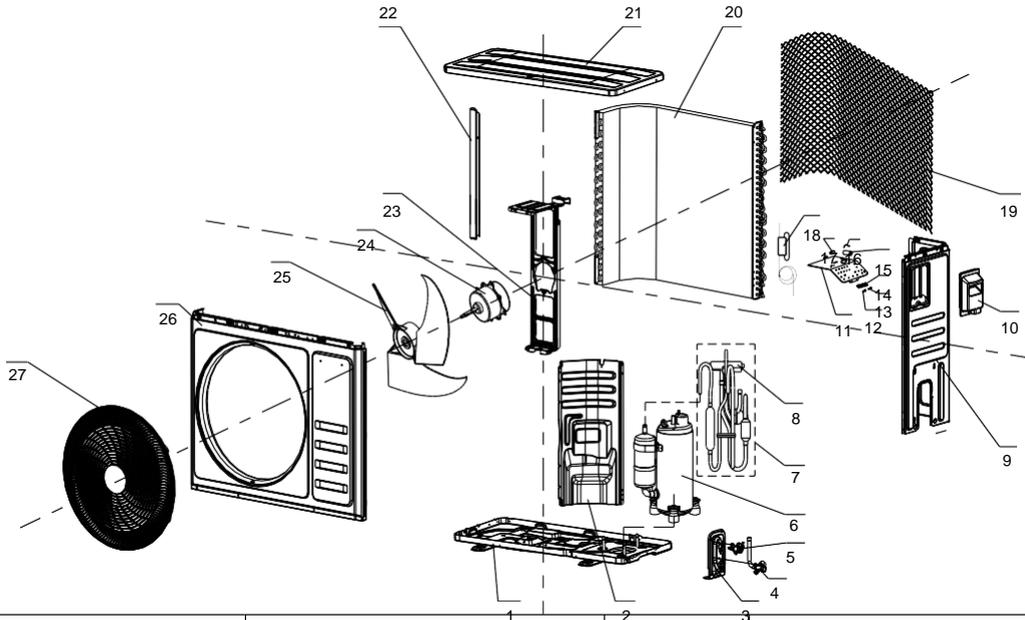


| No. | Part No.     | Part Name               | Q'ty | Remark                       |
|-----|--------------|-------------------------|------|------------------------------|
| 1   | 41202-000055 | Base                    | 1    |                              |
| 2   | 41208-000132 | Partition plate         | 1    |                              |
| 3   | 41204-000067 | Valve Supporter         | 1    |                              |
| 4   | 92008-000124 | Three-way Valve         | 1    |                              |
| 5   | 92008-000018 | Two-way Valve           | 1    |                              |
| 6   | 92014-000584 | Compressor              | 1    |                              |
| 7   | 92007-005092 | 4-way Valve Assembly    | 1    |                              |
| 8   | 92008-000193 | 4-way Valve             | 1    |                              |
| 9   | 41205-000054 | Right Plate             | 1    |                              |
| 10  | 41201-000005 | Electrical Box Cover    | 1    |                              |
| 11  | 41214-000342 | Electrical Parts Plate  | 1    |                              |
| 12  | 42001-000037 | Cable Clamp(φ6)         | 1    |                              |
| 13  | 42001-000038 | Cable Clamp(φ10)        | 1    |                              |
| 14  | 11304-100007 | Terminal                | 1    |                              |
| 15  | 22003-000004 | Compressor Capacitor    | 1    |                              |
| 16  | 42001-000030 | Capacitor Strip         | 1    |                              |
| 17  | 10303-100021 | Fan Motor Capacitor     | 1    |                              |
| 18  | 92007-001902 | Capillary Assembly      | 1    |                              |
| 19  | 42011-000159 | Back Grille             | 1    | Optional                     |
| 20  | 92011-000162 | Condenser               | 1    |                              |
| 21  | 41207-000015 | Top Cover               | 1    |                              |
| 22  | 41205-000124 | Left Grille Supporter   | 1    |                              |
| 23  | 41203-000037 | Outdoor Motor Supporter | 1    |                              |
| 24  | 22001-000008 | Outdoor Motor           | 1    |                              |
| 25  | 42004-000083 | Propeller Fan           | 1    |                              |
| 26  | 41206-000027 | Front Plate             | 1    |                              |
| 27  | 42011-000017 | Fan Guard               | 1    |                              |
| 28  | A2005-000519 | Base Carton             | 1    | Not shown in explosion view. |
| 29  | A1201-002588 | Cabinet Carton          | 1    |                              |
| 30  | A1202-000007 | Base Foaming            | 1    |                              |
| 31  | 41213-000002 | Cover Forming           | 1    |                              |

Indoor Unit- XG-TX70RHA-IDU

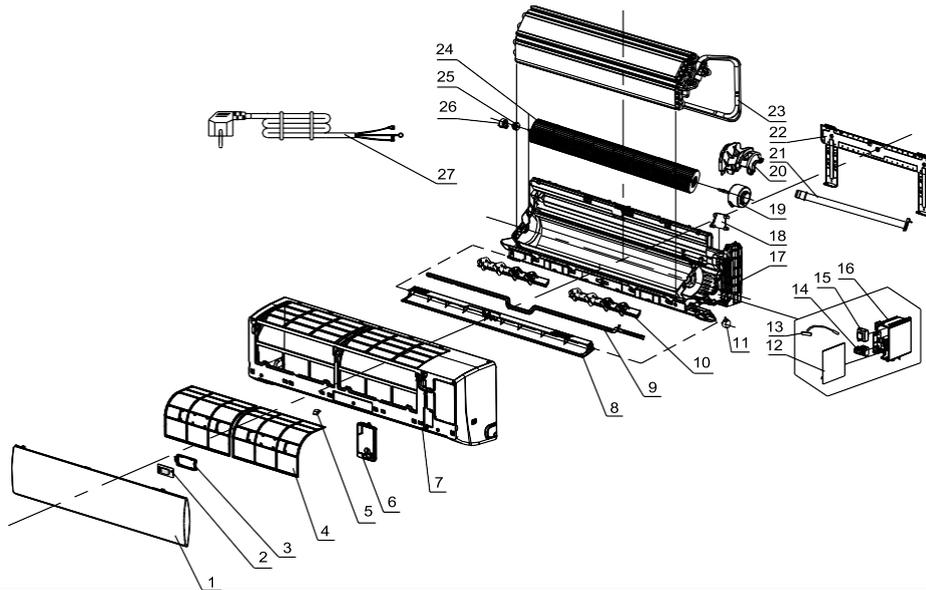

| No. | Part No.     | Part Name               | Q'ty | Remark                      |
|-----|--------------|-------------------------|------|-----------------------------|
| 1   | 41106-002078 | Front Panel             | 1    |                             |
| 2   | 31102-000085 | Display PCB             | 1    |                             |
| 3   | 42003-000001 | Display PCB Box         | 1    |                             |
| 4   | 42008-000075 | Air Filter              | 1    |                             |
| 5   | 41108-000066 | Screw Cover             | 2    |                             |
| 6   | 41105-000146 | Electrical Box Cover    | 1    |                             |
| 7   | 41106-002356 | Face Frame              | 1    |                             |
| 8   | 41103-000149 | Vane                    | 1    |                             |
| 9   | 41101-000193 | Vertical Vane Connector | 1    |                             |
| 10  | 41101-000067 | Vertical Vane Assembly  | 1    |                             |
| 11  | 22001-000321 | Vane Motor              | 1    |                             |
| 12  | 31101-000484 | Main PCB                | 1    |                             |
| 13  | 10104-100014 | Indoor Sensor Assembly  | 1    |                             |
| 14  | 11304-100023 | Terminal                | 1    |                             |
| 15  | 10502-100021 | Transformer             | 1    |                             |
| 16  | 41105-000104 | Electrical Box          | 1    |                             |
| 17  | 41102-000048 | Base                    | 1    |                             |
| 18  | 41101-000242 | In And Out Pipe Fixer   | 1    |                             |
| 19  | 22001-000272 | Indoor Motor            | 1    |                             |
| 20  | 41108-000013 | Indoor Motor Cover      | 1    |                             |
| 21  | 42009-000011 | Drainage Hose           | 1    |                             |
| 22  | 41109-000041 | Installation Plate      | 1    |                             |
| 23  | 92011-006083 | Evaporator              | 1    |                             |
| 24  | 42004-000012 | Cross Fan               | 1    |                             |
| 25  | 42007-000001 | Bearing Mount           | 1    |                             |
| 26  | 41101-000251 | Bearing Mount Supporter | 1    |                             |
| 27  | 22007-000055 | Power Supply Cord       | 1    |                             |
| 28  | 41101-000242 | In And Out Pipe Fixer   | 1    |                             |
| 29  | 22013-000237 | Remote Controller       | 1    | Not shown in Explosion view |
| 30  | A1101-000315 | Indoor Carton           | 1    |                             |
| 31  | A2006-000040 | Left Foaming            | 1    |                             |
| 32  | A2006-000019 | Right Foaming           | 1    |                             |

Outdoor Unit- XG-TX70RHA-ODU

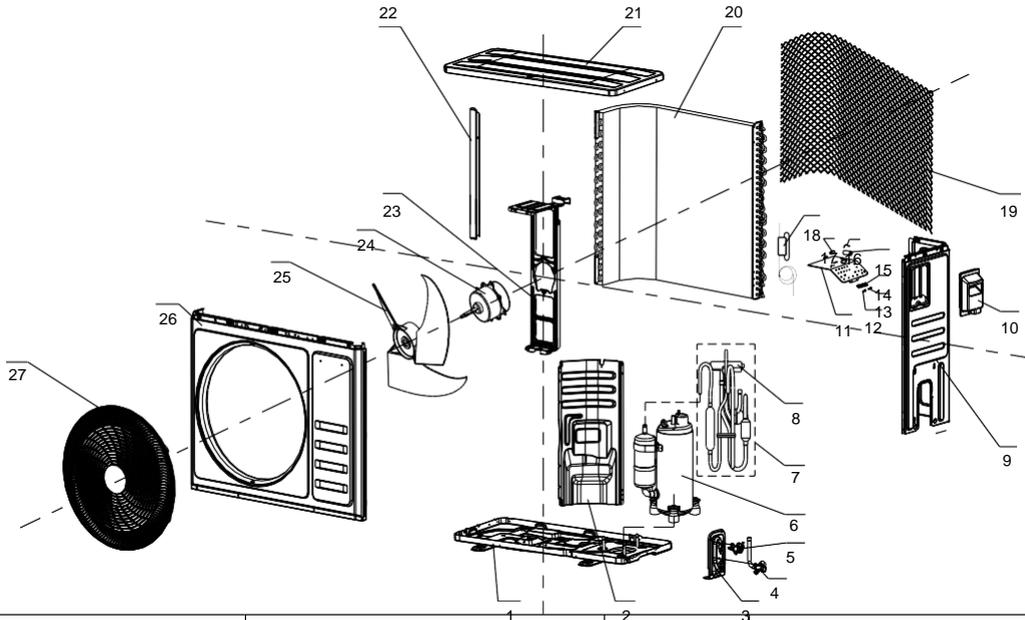

| No. | Part No.     | Part Name               | Q'ty | Remark                       |
|-----|--------------|-------------------------|------|------------------------------|
| 1   | 41202-000068 | Base                    | 1    |                              |
| 2   | 41208-000120 | Partition plate         | 1    |                              |
| 3   | 41204-000014 | Valve Supporter         | 1    |                              |
| 4   | 92008-000116 | Three-way Valve         | 1    |                              |
| 5   | 92008-000018 | Two-way Valve           | 1    |                              |
| 6   | 92014-000246 | Compressor              | 1    |                              |
| 7   | 92007-000794 | 4-way Valve Assembly    | 1    |                              |
| 8   | 92008-000180 | 4-way Valve             | 1    |                              |
| 9   | 41205-000058 | Right Plate             | 1    |                              |
| 10  | 41201-000005 | Electrical Box Cover    | 1    |                              |
| 11  | 41214-000342 | Electrical Parts Plate  | 1    |                              |
| 12  | 42001-000037 | Cable Clamp(φ6)         | 1    |                              |
| 13  | 42001-000038 | Cable Clamp(φ10)        | 1    |                              |
| 14  | 11304-100007 | Terminal                | 1    |                              |
| 15  | 22003-000007 | Compressor Capacitor    | 1    |                              |
| 16  | 42001-000030 | Capacitor Strip         | 1    |                              |
| 17  | 10303-100017 | Fan Motor Capacitor     | 1    |                              |
| 18  | 92007-001844 | Capillary Assembly      | 1    |                              |
| 19  | 42011-000152 | Back Grille             | 1    | Optional                     |
| 20  | 92011-000617 | Condenser               | 1    |                              |
| 21  | 41207-000019 | Top Cover               | 1    |                              |
| 22  | 41205-000128 | Left Grille Supporter   | 1    |                              |
| 23  | 41203-000040 | Outdoor Motor Supporter | 1    |                              |
| 24  | 22001-000019 | Outdoor Motor           | 1    |                              |
| 25  | 42004-000086 | Propeller Fan           | 1    |                              |
| 26  | 41206-000026 | Front Plate             | 1    |                              |
| 27  | 42011-000069 | Fan Guard               | 1    |                              |
| 28  | A2005-000513 | Base Carton             | 1    | Not shown in Explosion view. |
| 29  | A1201-000340 | Cabinet Carton          | 1    |                              |
| 30  | A1202-000023 | Base Foaming            | 1    |                              |
| 31  | 41213-000016 | Cover Forming           | 1    |                              |

## b. Precaution

### i. SAFETY RULES AND RECOMMENDATIONS FOR THE INSTALLATION


- Read this guide before installing and using the appliance.
- During the installation of the indoor and outdoor units the access to the working area should be forbidden to children.  
Unforeseeable accidents could happen.
- Make sure that the base of the outdoor unit is firmly fixed.
- Check that air cannot enter the refrigerant system and check for refrigerant leaks when moving the air conditioner.
- Check that air cannot enter the refrigerant system and check for refrigerant leaks when moving the air conditioner.
- The ratings of the fuse installed in the built in-control unit are T 5A / 250V.
- The user must protect the indoor unit with a fuse of suitable capacity for the maximum input current or with another overload protection device.
- Ensure that the mains voltage corresponds to that stamped on the rating plate. Keep the switch or power plug clean. Insert the power plug correctly and firmly into the socket, thereby avoiding the risk of electric shock or fire due to insufficient contact.
- Check that the socket is suitable for the plug, otherwise have the socket changed.
- The appliance must be fitted with means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under over voltage category III conditions, and these means must be incorporated in the fixed wiring in accordance with the wiring rules.
- The air conditioner must be installed by professional or qualified persons. Do not install the appliance at a distance of less than 50 cm from inflammable substances (alcohol, etc.) Or from pressurized containers (e.g. spray cans).
- If the appliance is used in areas without the possibility of ventilation, precautions must be taken to prevent any leaks of refrigerant gas from remaining in the environment and creating a danger of fire.
- The packaging materials are recyclable and should be disposed of in the separate waste bins. Take the air conditioner at the end of its useful life to a special waste collection center for disposal.
- Only use the air conditioner as instructed in this booklet. These instructions are not intended to cover every possible condition and situation. As with any electrical household appliance, common sense and caution are therefore always recommended for installation, operation and maintenance.
- The appliance must be installed in accordance with applicable national regulations.
- Before accessing the terminals, all the power circuits must be disconnected from the power supply.
- The appliance shall be installed in accordance with national wiring regulations.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


## ii. SAFETY RULES AND RECOMMENDATIONS FOR THE USER

- Do not try to install the conditioner alone; always contact specialized technical personnel. Cleaning and maintenance must be carried out by specialized technical personnel. In any case disconnect the appliance from the mains electricity supply before carrying out any cleaning or maintenance.
- Ensure that the mains voltage corresponds to that stamped on the rating plate. Keep the switch or power plug clean. Insert the power plug correctly and firmly into the socket, thereby avoiding the risk of electric shock or fire due to insufficient contact.
- Do not pull out the plug to switch off the appliance when it is in operation, since this could create a spark and cause a fire, etc.
- This appliance has been made for air conditioning domestic environments and must not be used for any other purpose, such as for drying clothes, cooling food, etc.
- The packaging materials are recyclable and should be disposed of in the separate waste bins. Take the air conditioner at the end of its useful life to a special waste collection center for disposal.
- Always use the appliance with the air filter mounted. The use of the conditioner without air filter could cause an excessive accumulation of dust or waste on the inner parts of the device with possible subsequent failures.
- The user is responsible for having the appliance installed by a qualified technician, who must check that it is earthed in accordance with current legislation and insert a thermomagnetic circuit breaker.
- The batteries in remote controller must be recycled or disposed of properly. Disposal of Scrap Batteries.  
--- Please discard the batteries as sorted municipal waste at the accessible collection point.
- Never remain directly exposed to the flow of cold air for a long time. The direct and prolonged exposition to cold air could be dangerous for your health. Particular care should be taken in the rooms where there are children, old or sick people.
- If the appliance gives off smoke or there is a smell of burning, immediately cut off the power supply and contact the Service Centre.
- The prolonged use of the device in such conditions could cause fire or electrocution.
- Have repairs carried out only by an authoritative Service Centre of the manufacturer. Incorrect repair could expose the user to the risk of electric shock, etc.
- Unhook the automatic switch if you foresee not to use the device for a long time. The airflow direction must be properly adjusted.
- The flaps must be directed downwards in the heating mode and upwards in the cooling mode. Only use the air conditioner as instructed in this booklet. These instructions are not intended to cover every possible condition and situation. As with any electrical household appliance, common sense and caution are therefore always recommended for installation, operation and maintenance.

### c. Names of parts

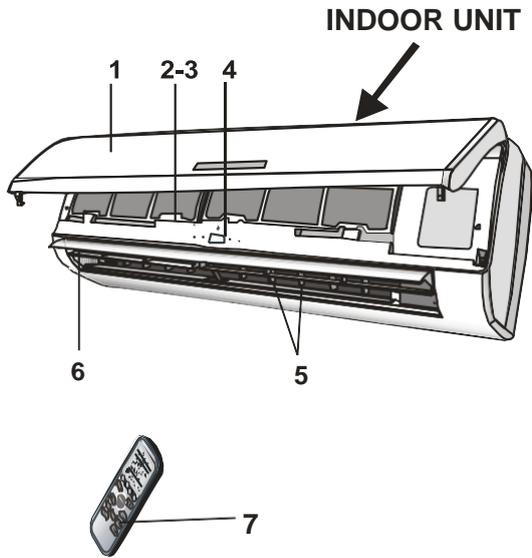

| Indoor unit |                        |
|-------------|------------------------|
| No.         | Name                   |
| 1           | Front panel            |
| 2           | Air filter             |
| 3           | Special filter(option) |
| 4           | Display PCB            |
| 5           | Vertical vane          |
| 6           | Horizontal vane        |
| 7           | Remote controller      |

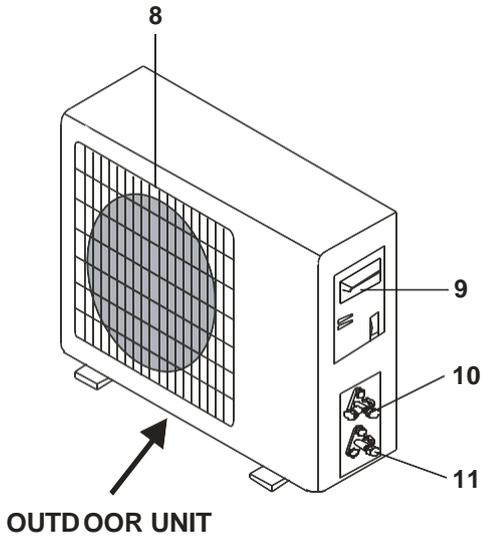


| Outdoor unit |                      |
|--------------|----------------------|
| No.          | Name                 |
| 8            | Air outlet grille    |
| 9            | Electronic box cover |
| 10           | 2-way valve          |
| 11           | 3-way valve          |

## d. Installation manual

### i. Information for installation Connecting pipe

| Model      | Pipe size(Inch) |     |
|------------|-----------------|-----|
|            | Liquid          | Gas |
| XG-TX21RHA | 1/4             | 3/8 |
| XG-TX27RHA | 1/4             | 3/8 |
| XG-TX35RHA | 1/4             | 3/8 |
| XG-TX50RHA | 1/4             | 1/2 |
| XG-TX70RHA | 1/4             | 5/8 |

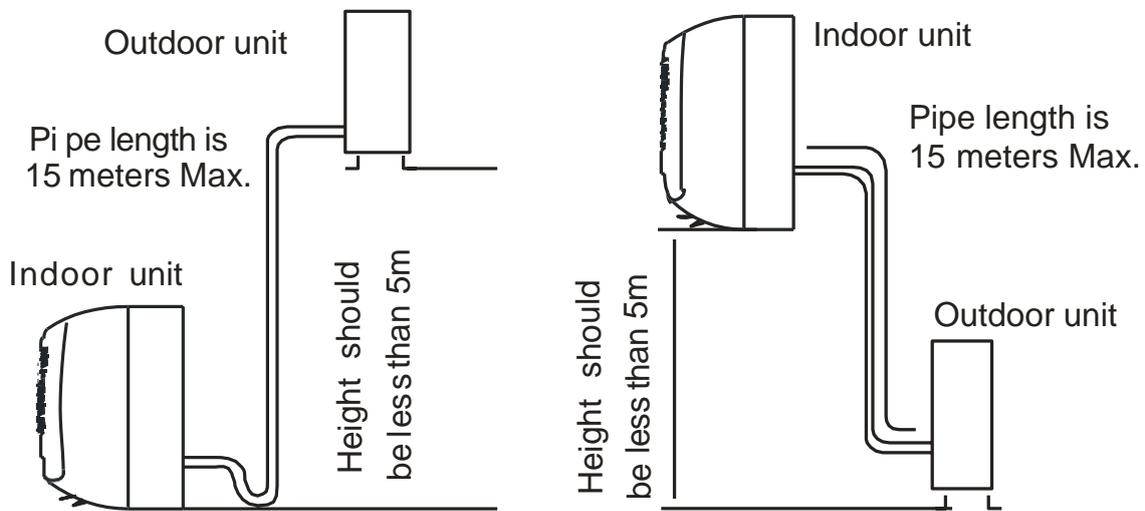

| Mode       | Standard length: m | Refrigerant piping Max. length: m<br>A | Additional refrigerant Calculation: $\times g=20g/m(A-5m)$ |
|------------|--------------------|--|--|
| XG-TX21RHA | 3.0                | 15                                     | 20g/m  |
| XG-TX27RHA | 3.0                | 15                                     | 20g/m  |
| XG-TX35RHA | 3.5                | 15                                     | 20g/m  |
| XG-TX50RHA | 5.0                | 15                                     | 30g/m  |
| XG-TX70RHA | 5.0                | 15                                     | 30g/m  |




### Connecting cables

The power cord should be selected according to the following specifications sheet.

| Appliance Amps | Wire Size                  |
|----------------|----------------------------|
| 5              | AWG21/0.75 mm <sup>2</sup> |
| 10             | AWG18/1.0 mm <sup>2</sup>  |
| 13             | AWG15 /1.5 mm <sup>2</sup> |
| 18             | AWG14/1.6 mm <sup>2</sup>  |
| 25             | AWG12/2.0 mm <sup>2</sup>  |
| 30             | AWG10/2.5 mm <sup>2</sup>  |

ii. Installation details

Accessory

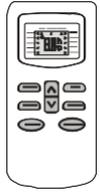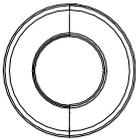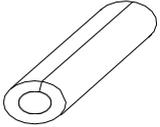
|  |  |   |  |
|--|--|---|--|
| <p>Remote controller</p>  | <p>Remote controller supporter</p>  | <p>Batteries</p>  | <p>Vinyl tape</p>           |
| <p>Drain hose</p>         | <p>Hole cover</p>                   | <p>Screw</p>      | <p>Insulation material</p>  |

Flaring work

Main cause for gas leakage is due to defect in flaring work. Carry out correct flaring work in the following procedure.


A. Cut the pipes and the cable.

- 1) Use the piping kit accessory or the pipes purchased locally.
- 2) Measure the distance between the indoor and the outdoor unit.
- 3) Cut the pipes a little longer than measured distance.
- 4) Cut the cable 1.5m longer than the pipe length.

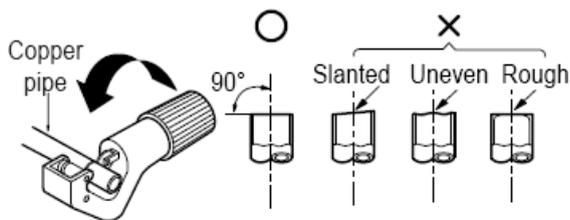

B. Burrs removal

- 1) Completely remove all burrs from the cut cross section of pipe/tube.
- 2) Put the end of the copper tube/pipe in a downward direction as you remove burrs in order to avoid dropping burrs into the tubing.

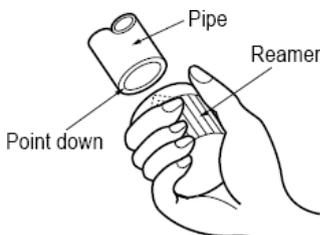


C. Flaring work

- Carry out flaring work using flaring tool as shown below.


| Outside diameter |      | A       |
|------------------|------|---------|
| mm               | inch | mm      |
| ø6.35            | 1/4  | 1.0~1.3 |
| ø9.52            | 3/8  | 0.8~1.0 |
| ø12.7            | 1/2  | 0.5~0.8 |
| ø15.88           | 5/8  | 0.5~0.8 |

Firmly hold copper pipe in a die in the dimension shown in the table above.

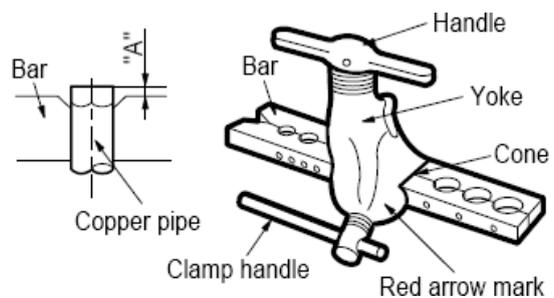


E. Check

- 1) Compare the flared work with figure below.
- 2) If flare is noted to be defective, cut off the flared section and do flaring work again.

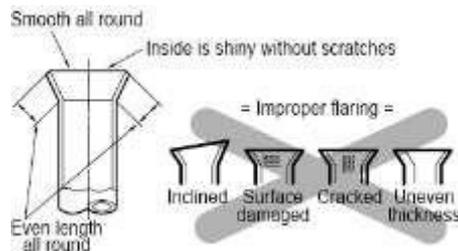


### Connecting the piping to the indoor unit

- Align the center of the piping and sufficiently tighten the flare nut by hand.

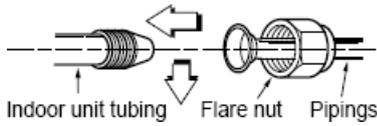


- Tighten the flare nut with a wrench.

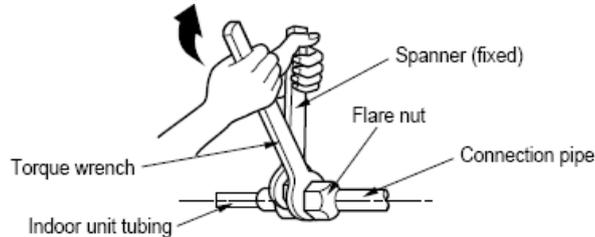


| Capacity (Btu/h) | Pipe Size(Torque) |               |
|------------------|-------------------|---------------|
|                  | GAS               | LIQUID        |
| 7,9,12K          | 3/8"(4.2kg.m)     | 1/4"(1.8kg.m) |
| 18K              | 1/2"(5.5kg.m)     | 1/4"(1.8kg.m) |
| 24K              | 5/8"(6.6kg.m)     | 3/8"(4.2kg.m) |

- When extending the drain hose at the indoor unit, install the drain pipe.

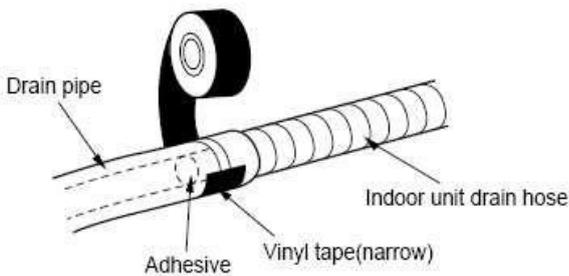


### Wrap the insulation material around the connecting portion.

- Overlap the connection pipe insulation material and the indoor unit pipe insulation material. Bind them together with vinyl tape so that there is no gap.

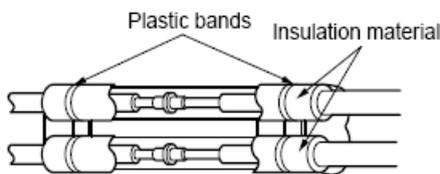


- Wrap the area which accommodates the rear piping housing section with vinyl tape.

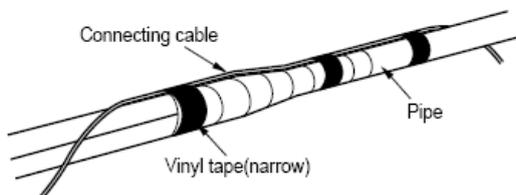


### and drain hose to drain pipe.

- Bundle the piping and drain hose together by wrapping them with vinyl tape over the range within which they fit into the rear piping housing section.

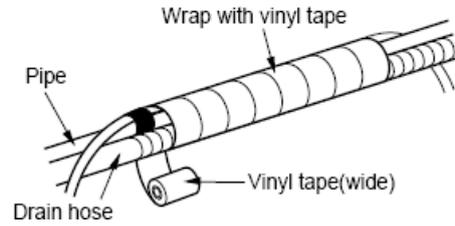

### Indoor unit


- Install the indoor unit level on a strong wall that is not subject to vibrations
- The inlet and outlet ports should not be obstructed: the air should be able to blow all over the room.
- Do not install the unit near a source of heat, steam or flammable gas.
- Do not install the unit in too windy or dusty places.
- Do not install the unit where people often pass. Select a place where the air discharge and operating sound level will not disturb the neighbors.
- Install the unit where connection between indoor and outdoor unit is as easy as possible.
- Install the unit where it is easy to drain the condensed water.
- Check the machine operation regularly and leave the necessary spaces as shown in the picture.
- Install the indoor unit where the filter can be easily accessible.

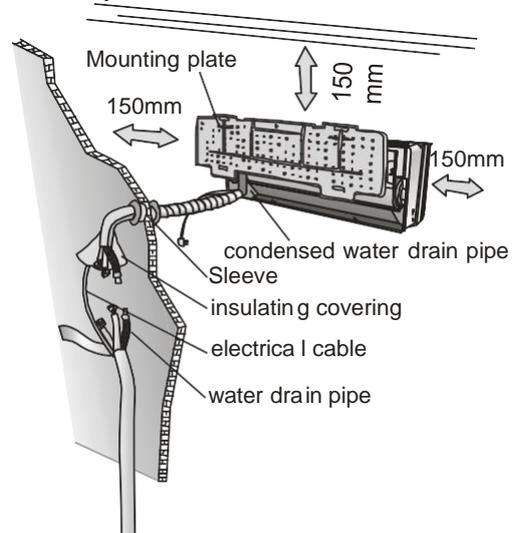

**OUTDOOR UNIT**

- Do not install the outdoor unit near sources of heat, steam or flammable gas.
- Do not install the unit in too windy or dusty places.
- Do not install the unit where people often pass. Select a place where the air discharge and operating sound level will not disturb the neighbors.
- Avoid installing the unit where it will be exposed to direct sunlight (other wise use a protection, if necessary, that should not interfere with the air flow).
- Leave the spaces as shown in the picture for  
 for
- The air to circulate freely.
- Install the outdoor unit in a safe and solid place.
- If the outdoor unit is subject to vibration, place rubber gaskets onto the feet of the unit.
- Install the indoor unit in the room to be air conditioning, avoiding to installation in corridors or communal areas.
- Install the indoor unit at a height of at least 2.5m  
 from the ground.

Minimum space to be left (mm) showing in the picture.

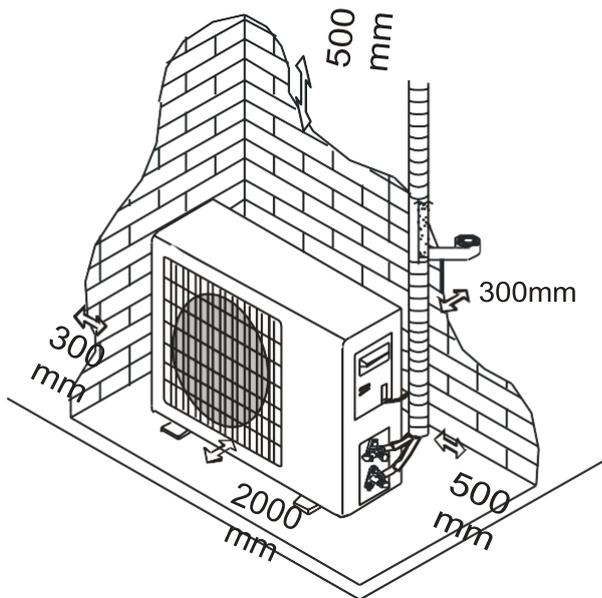


**To install, proceed as follows:**

**9.2.1 Installation of the mounting plate.**

- 1) By using a level, put the mounting plate in a perfect square position vertically and horizontally.
- 2) Drill 32mm deep holes in the wall to fix the plate.


- 3) Insert the plastic anchors into the hole.
- 4) Fix the mounting plate by using the provided tapping screws.
- 5) Check that the mounting plate is correctly fixed.

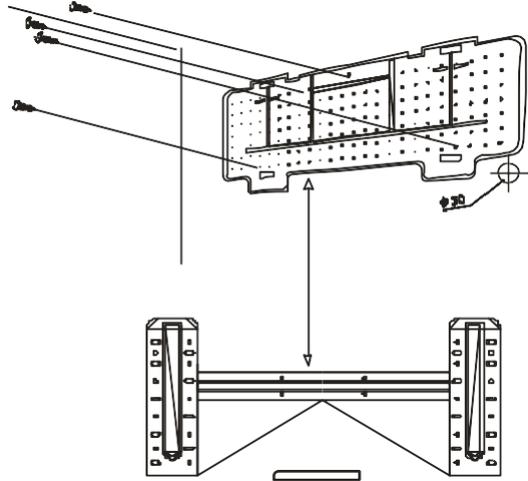

**Note: The shape of the mounting plate may be different from the one above, but installation method is similar.**

**9.2.2 Drilling a hole in the wall for the piping**

- 1) Decide where to drill the hole in the wall for the piping (if necessary) according to the position of the mounting plate
- 2) Install a flexible flange through the hole in the wall to keep the latter intact and clean.

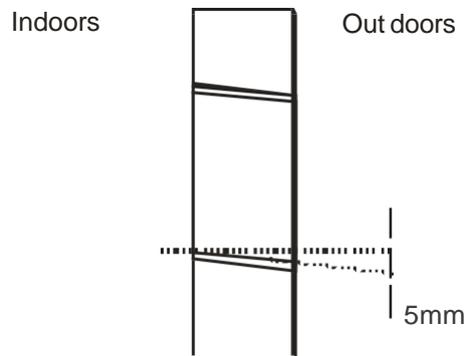

The hole must slope downwards towards the exterior.


Note: Keep the drain pipe down towards the direction of the wall hole, otherwise leakage may occur.

**9.2.3 Electrical connections---Indoor unit**

- 1).Lift the front panel.
- 2).Take off the cover as indicated in the picture (by removing a screw or by breaking the hooks).
- 3).For the electrical connections, see the circuit diagram on the right part of the unit under the front panel.




- 4). Connect the cable wires to the screw terminals by following the numbering, Use wire size suitable to the electric power input (see name plate on the unit) and according to all current national safety code requirements.
- 5). The cable connecting the outdoor and indoor units must be suitable for outdoor use.
- 6). The plug must be accessible also after the appliance has been installed so that it can be pulled out if necessary.
- 7). An efficient earth connection must be ensured.
- 8). If the power cable is damaged, it must be replaced by an authorized Service Centre.

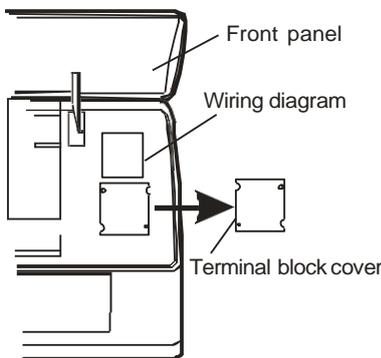

**Refrigerant piping connection**

The piping can be run in the 3 directions indicated by numbers in the picture. When the piping is run in direction 1 or 3, cut a notch along the groove on the side of the indoor unit with a cutter.

Run the piping in the direction of the wall hole and bind the copper pipes, the drain pipe and the power cables together with the tape with the drain pipe at the bottom, so that water can flow freely.

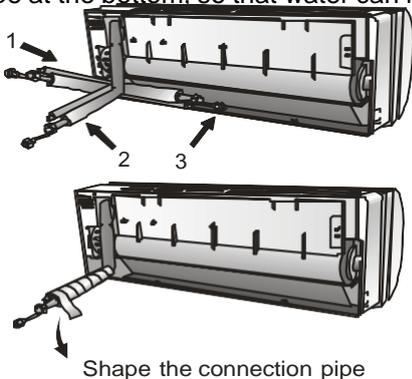


**9.2.4 Connecting the pipes.**

- Do not remove the cap from the pipe until connecting it, to avoid dampness or dirt from entering.
- If the pipe is bent or pulled too often, it will become stiff. Do not bend the pipe more


than three times at one point.

- When extending the rolled pipe, straighten the pipe by unwinding it gently as shown in the picture.

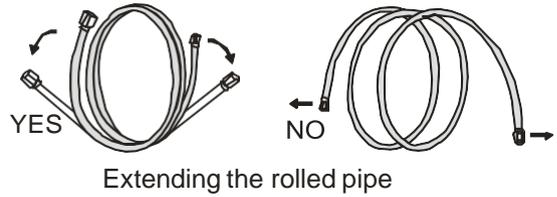

**9.2.5 Connections to the indoor unit**

- 1). Remove the indoor unit pipe cap (check that there is no debris inside).
- 2). Insert the flare nut and create a flange at the extreme end of the connection pipe.
- 3). Tighten the connections by using two wrenches working in opposite directions.

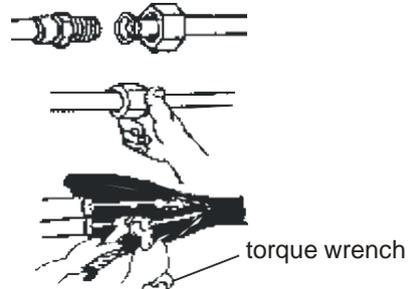


**9.2.5 Indoor unit condensed water drainage**

The indoor unit condensed water drainage is fundamental for the success of the installation.

- 1). Place the drain hose below the piping, taking care not to create siphons.
- 2). The drain hose must slant downwards to aid drainage.
- 3). Do not bend the drain hose or leave it protruding or twisted and do not put the end of it in water. If an extension is connected to the drain hose, ensure that it is lagged when it passes into the indoor unit.
- 4). If the piping is installed to the right, the pipes, power cable and drain hose must be lagged and secured onto the rear of the unit with a pipe connection.


- Insert the pipe connection into the relative slot.
- Press to join the pipe connection to the base.

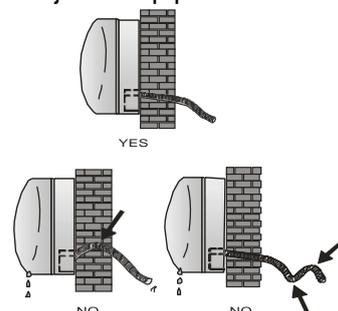

**9.2.7 Electronic connections**

1. Take the cover away.
2. Connect the cable wires to the terminal board using the same numbering as in the indoor unit.
3. For the electrical connections, see the wiring diagram on the back of the cover
4. Fasten the cables with a cable-clamp.
5. An efficient earth connection must be ensured.
6. Replace the covers.

Wiring diagram on the back of the cover

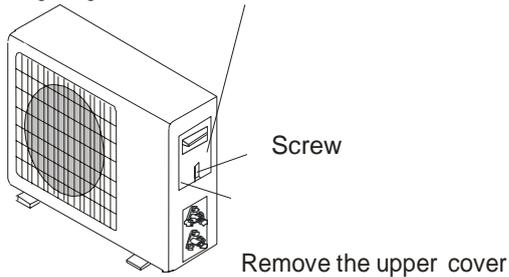


Outdoor unit

**9.2.9 Bleeding**

Air and humidity left inside the refrigerant circuit can cause compressor malfunction. After having connected the indoor and outdoor units, bleed the air and humidity from the refrigerant circuit by using a vacuum pump.


The air and humidity left inside the refrigerant circulation can cause compressor malfunction. After having connected the indoor and outdoor units, bleed the air and humidity from the refrigerant circulation using a vacuum pump.

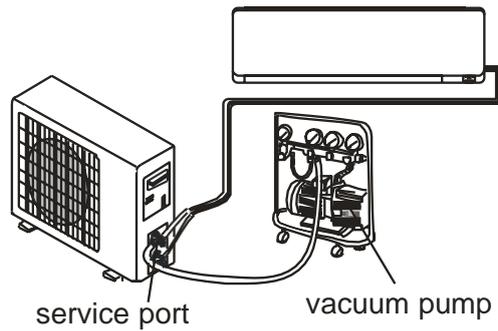

**9.2.8 Connecting the pipe**


Screw the flare nuts to the outdoor unit coupling with the same tightening procedures described for the indoor unit.

Note: If the tightening torque is not sufficient, there will probably be some leakage. With excessive tightening torque there will also be some leakage, as the flange could be damaged.

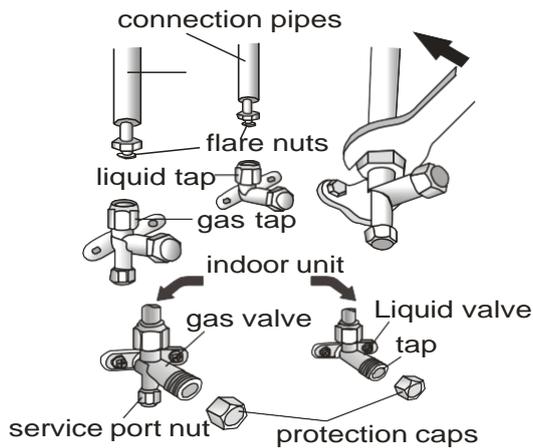


## 10. Trouble shooting


### 10.1 Product does not operate at all.

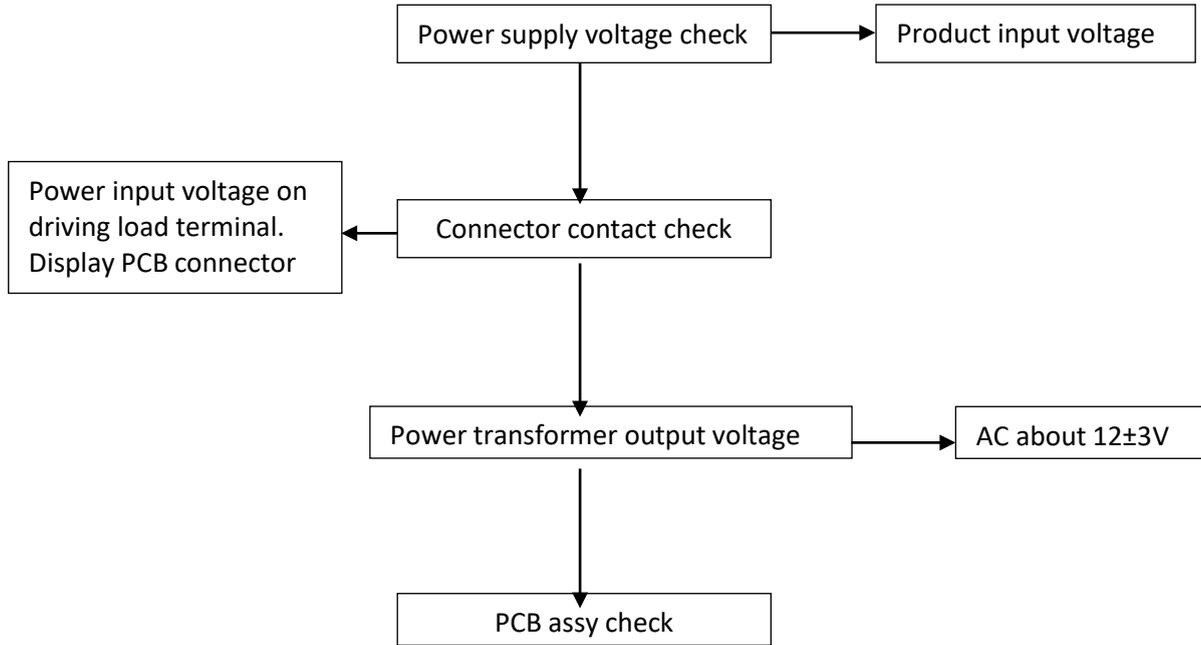

**10.2 Sensor failure (E1, E2).**

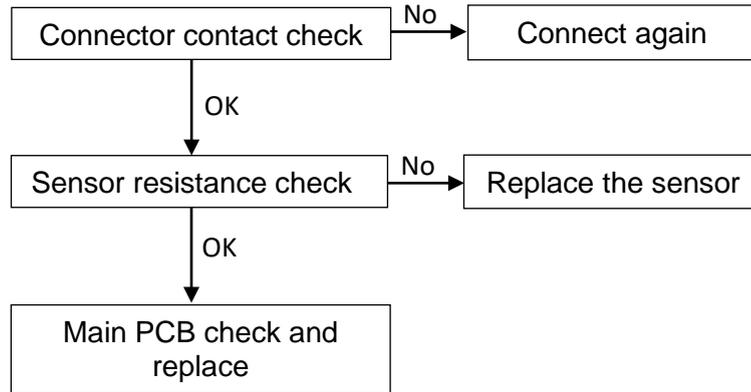


**10.3 Indoor fan does not operate at all (E6).**

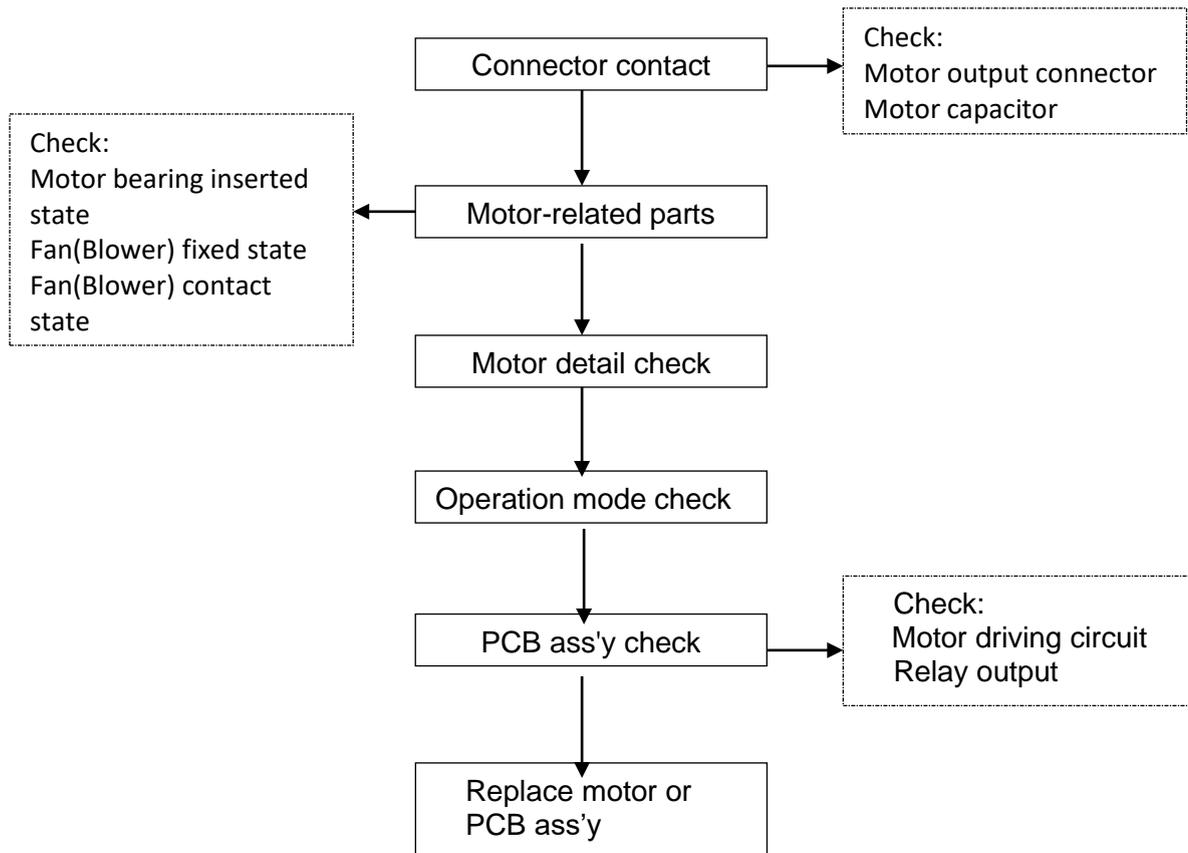


**10.4 System protection (E4)**


When the unit operation, after 5 minutes, the system will check the temperature of the pipe, if the temperature is at least 2 °C less than before operation the system is normal, otherwise Freon short of system and display E4.

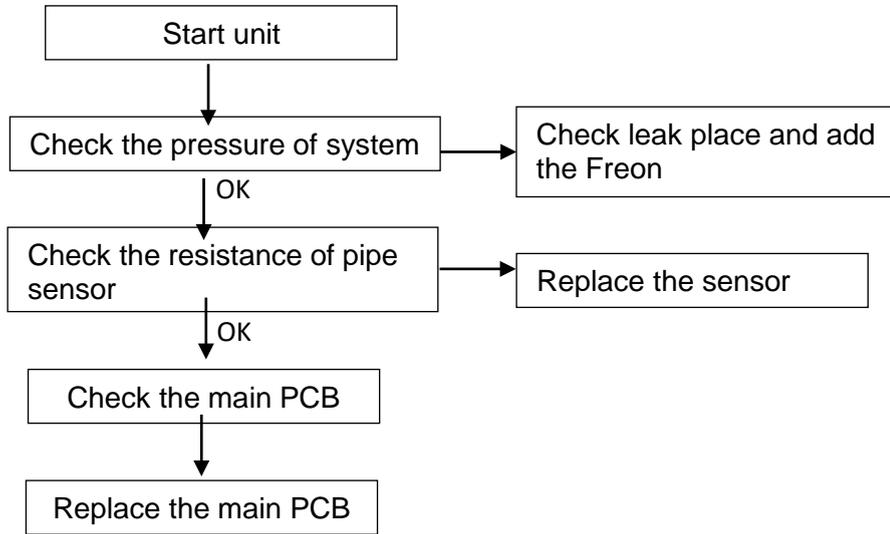


**10.5 System protection (E5) (High/low pressure protection model)**

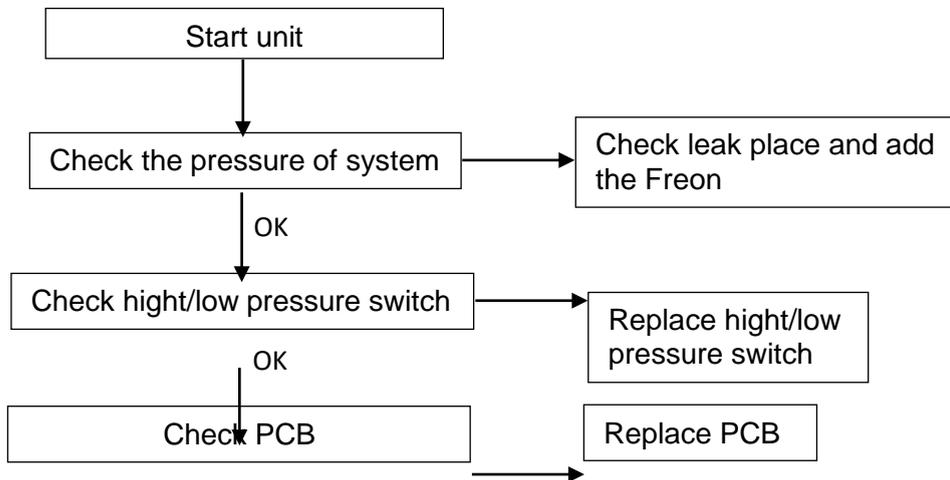

**10.6 Compressor or outdoor fan does not operate at all.**

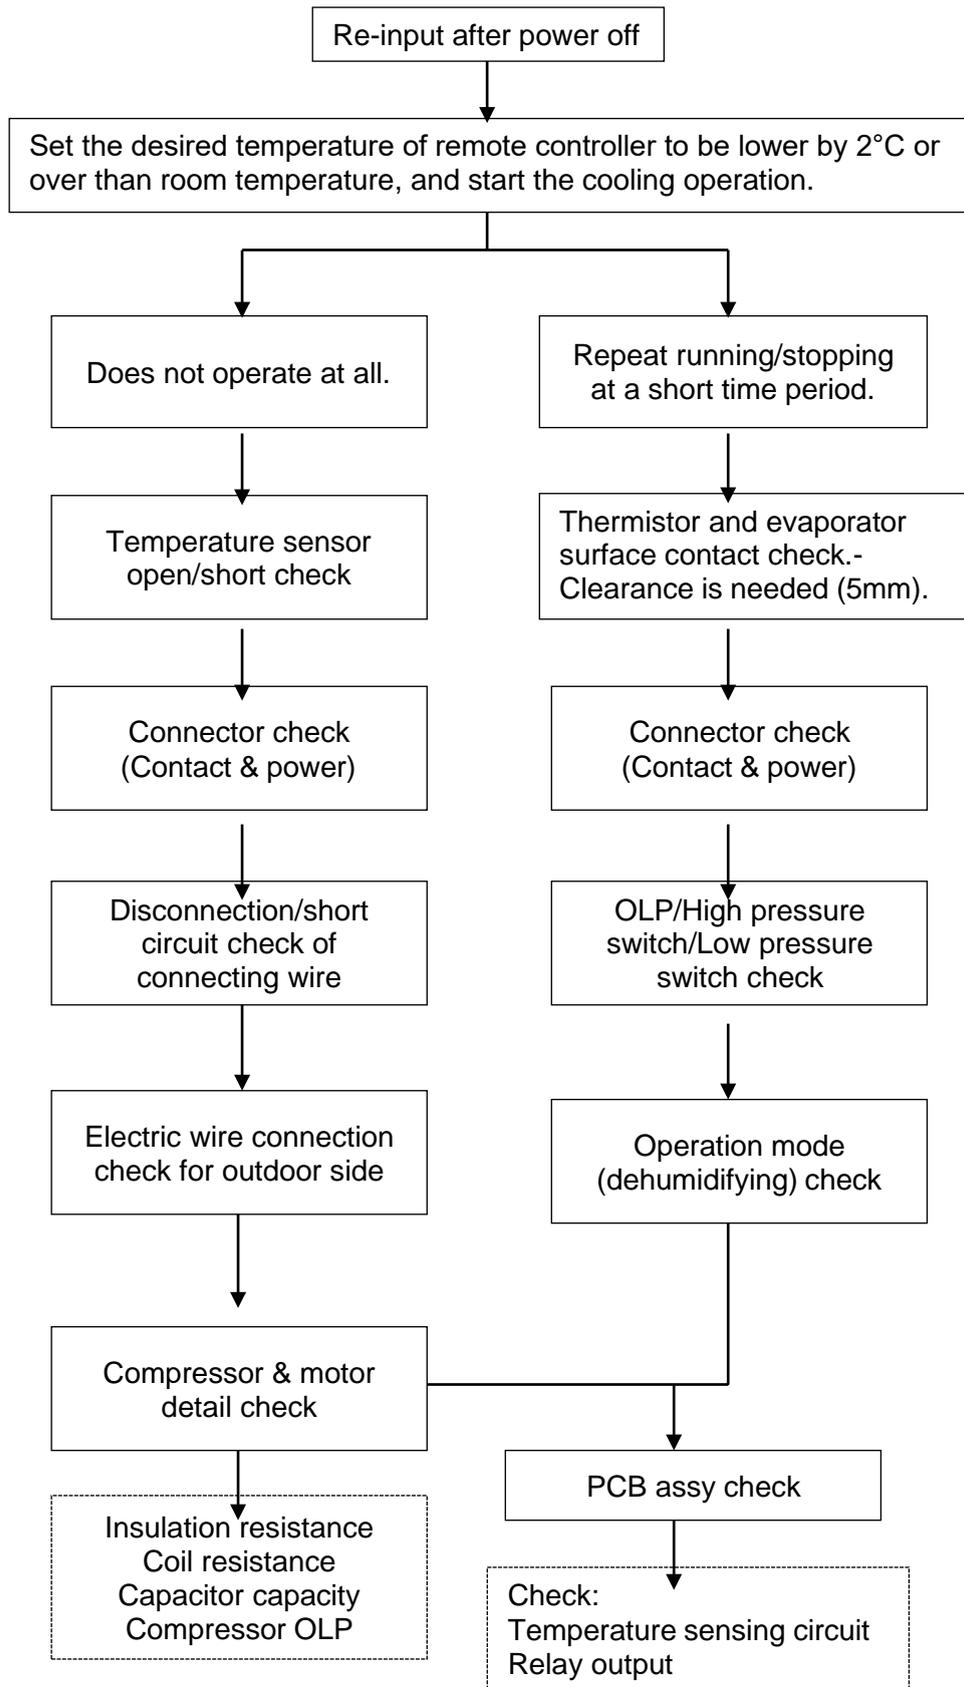

**10.7 Vane does not operate at all.**

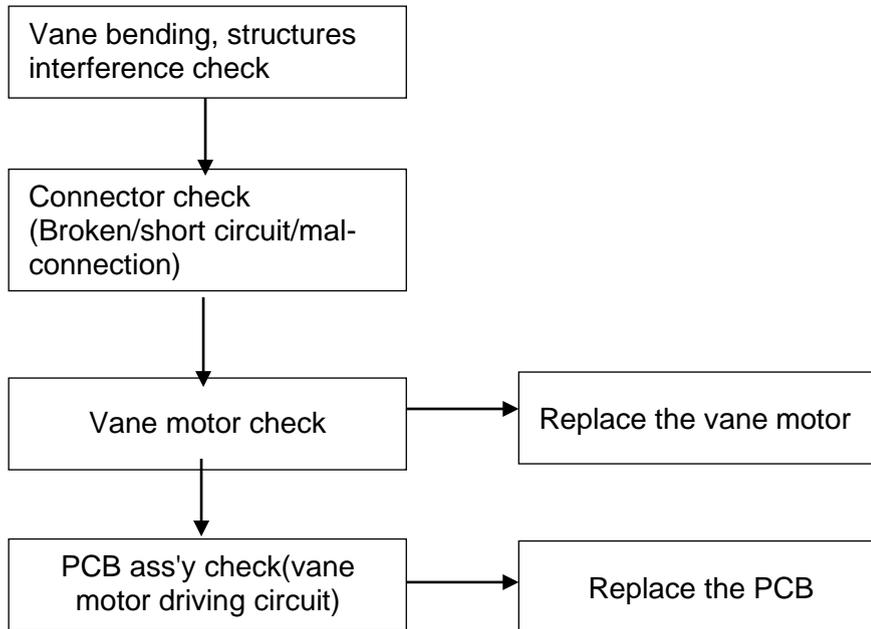

**10.8 Cooling/heating conversion is disable.**

