

ON/OFF type air conditioner R410A
Service Manual
Roland Wizard on-off
2022

Models

RD-WZ07HSS/N1
RD-WZ09HSS/N1
RD-WZ12HSS/N1
RD-WZ18HSS/N1
RD-WZ24HSS/N1

CONTENTS

Part I Technical Information.....	3
1. Important Notice	3
2. Specifications... ..	4
2.1 Operation characteristic	4
2.1.1 The relation curve of CAPACITY-TEMPERATURE	4
2.1.2 The relation curve of PRESSURE-TEMPERATURE	5
2.1.3 The relation curve of NOISE-COMPRESSURE OPERATION FREQUENCY	5
2.2 Refrigeration cycle diagram	6
3. The Production Dimensions	7
4. Electric Diagram... ..	8
4.1 Wiring Diagram	8
4.2 PCB LAOUT	10
5. Electronic Controller Introduction.....	12
5.1 Remote controller... ..	12
5.2 Electronic controller... ..	14
5.3 WIFI introduction.....	19
 PART II Installation and Maintenance... ..	20
1. Notes for installation and maintenance	20
2. Installation... ..	28
2.1 Dimension diagram for Installation	28
2.2 Inspection of Accessories.....	29
2.3 Position of IDU/ODU	30
2.4 Electric Connection	30
2.5 The IDU Installation	30
2.6 The ODU Installation.....	31
2.7 Vacuum and Gas leakage test.....	34
2.8 Final Test... ..	34
3. Maintenance	35
3.1 Failure code.....	35
3.2 Trouble shooting.....	36
4. Exploded View	39
5. Disassembly IDU & ODU	49
 APPENDIX	
1. The comparison table of CELSIUS-FAHRENHEIT temperature.....	58
2. The Pipe length and Gas charging	58
3. Pipe Flaring... ..	103
4. The Thermistor Temperature Characteristics	104

Part I Technical Information

1. Important Notice


This service manual is intended for use by individuals possessing adequate backgrounds of electrical, electronic and mechanical experience. Any attempt to repair the appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

The information, specifications and parameter are subject to change due to technical modification or improvement without any prior notice. The accurate specifications are presented on the nameplate label.

2. Specifications

2.1 Operation characteristic

2.1.1 The relation curve of CAPACITY-AMBIENT TEMPERATURE

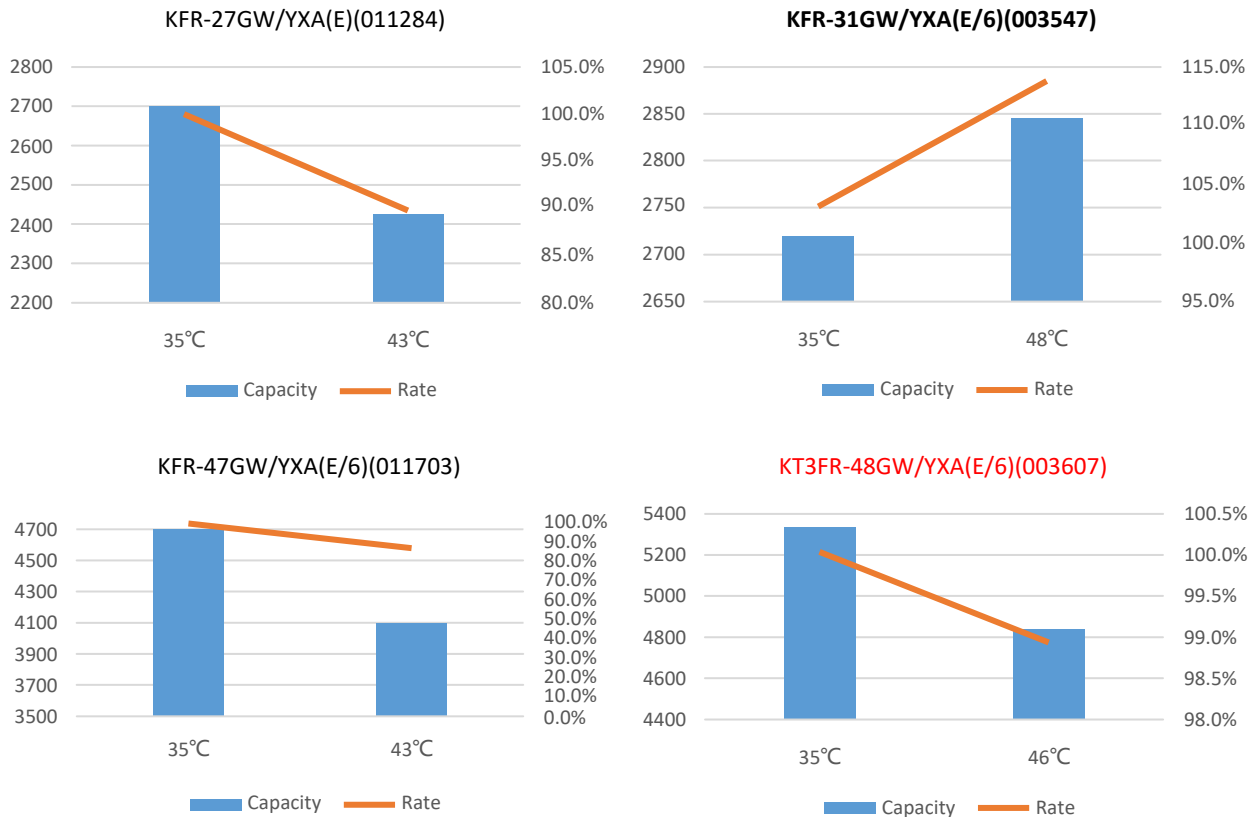

2.2 The relation curve of PRESSURE-TEMPERATURE

	7K/9K			12K			18K			24K		
	f(Hz)	HP (MPa)	LP (MPa)	f(Hz)	HP (MPa)	LP (MPa)	f(Hz)	HP (MPa)	LP (MPa)	f(Hz)	HP (MPa)	LP (MPa)
35°C Cooling	50	2.59	0.99	50	2.78	0.84	50	2.94	0.91	50	2.701	0.991
43°C Cooling	50	3.19	0.98	50	3.29	0.98	50	3.39	0.93	50	3.367	1.075
48°C Cooling	50	3.5	0.99	50	3.7	0.99	50	3.87	1.06	50	2.323	0.698
7°C Heating	50	2.14	0.72	50	2.82	0.69	50	2.98	0.72	50	3.355	0.973
24°C Heating	50	3.62	0.9	50	4	0.9	50	4.09	0.95	50	2.701	0.991
Rated Cooling	50	2.61	1	50	2.78	0.84	50	2.94	0.91	50	2.701	0.991
Rated Heating	50	2.14	0.73	50	2.82	0.69	50	3.39	0.93	50	2.323	0.698

Note:

The test under condition:


Rated Cooling: IDU dry bulb 27°C / Wet bulb 19°C, ODU dry bulb 35°C / wet bulb 24°C; The connection pipes: 5m.

Rated Heating: IDU dry bulb 20°C / Wet bulb 15°C, ODU dry bulb 7°C / wet bulb 6°C; The connection pipes: 5m.

Important:

The above data under test standard in the lab, the HP (High pressure) and LP (Low pressure) will vary along with the variation of operation frequency, ambient temperature and/or fan speed.


2.3 The relation curve of NOISE-OPERATION FREQUENCY

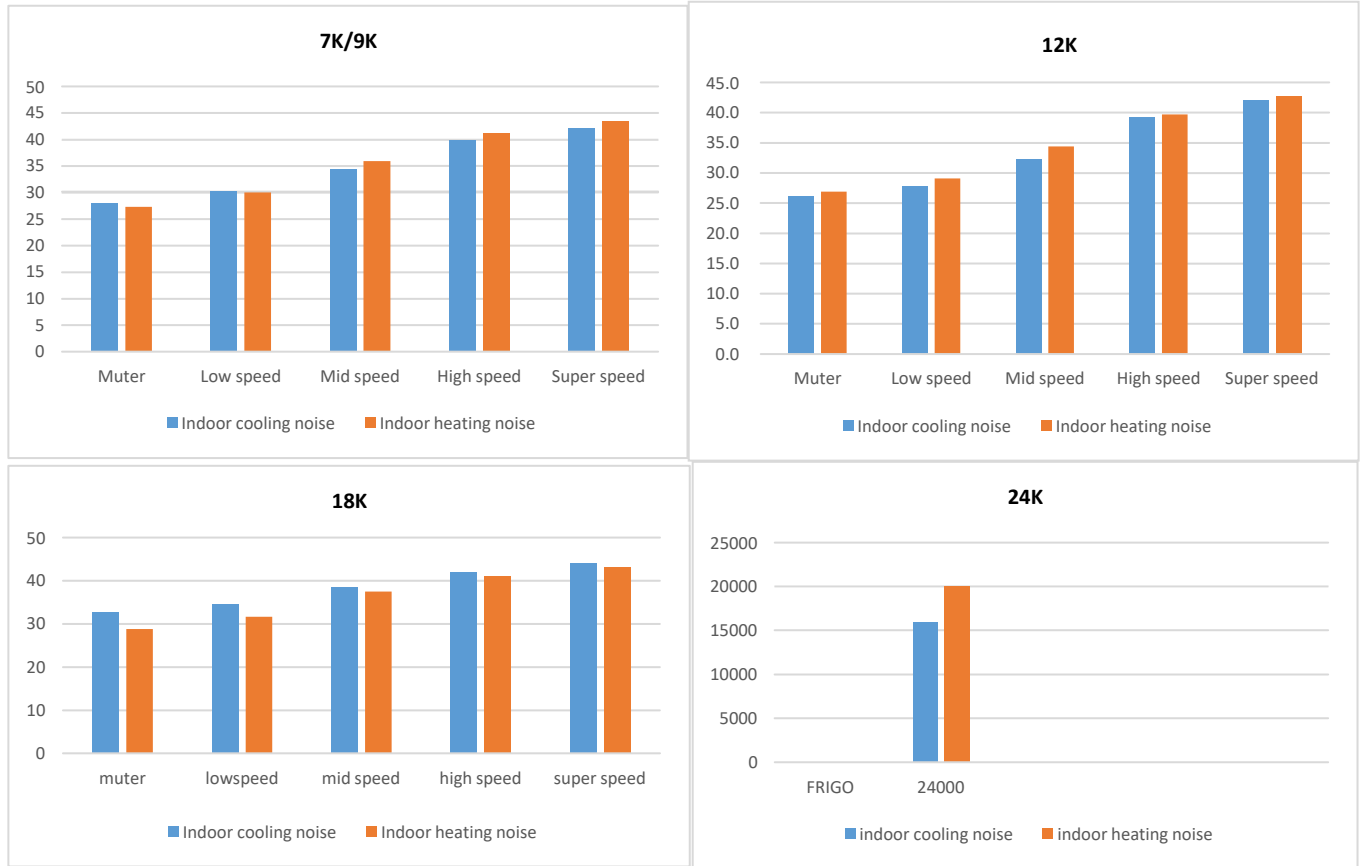

2.4 The range of normal working environment temperature


	7K/9K		12K					
Mode	Room temperature	Outdoor temperature	Room temperature	Outdoor temperature	Room temperature	Outdoor temperature	Room temperature	Outdoor temperature
Cooling operating	17°C~32°C (62.6°F~89.6°F)	15°C~48°C (59°F~118.4°F)	17°C~32°C (62.6°F~89.6°F)	15°C~48°C (59°F~118.4°F)	17°C~32°C (62.6°F~89.6°F)	15°C~48°C (59°F~118.4°F)	17°C~32°C (62.6°F~89.6°F)	15°C~55°C (59°F~131°F)
Heating operating	0°C~27°C (33.8°F~80.6°F)	-7°C~24°C (19.4°F~75.2°F)	0°C~27°C (33.8°F~80.6°F)	-7°C~24°C (19.4°F~75.2°F)	0°C~27°C (33.8°F~80.6°F)	-7°C~24°C (19.4°F~75.2°F)	0°C~27°C (33.8°F~80.6°F)	0°C~24°C (33.8°F~75.2°F)
Drying operating	18°C~32°C (64.4°F~89.6°F)	15°C~48°C (59°F~118.4°F)	18°C~32°C (64.4°F~89.6°F)	15°C~48°C (59°F~118.4°F)	18°C~32°C (64.4°F~89.6°F)	15°C~48°C (59°F~118.4°F)	18°C~32°C (64.4°F~89.6°F)	15°C~55°C (59°F~131°F)

2.2 Refrigeration cycle diagram

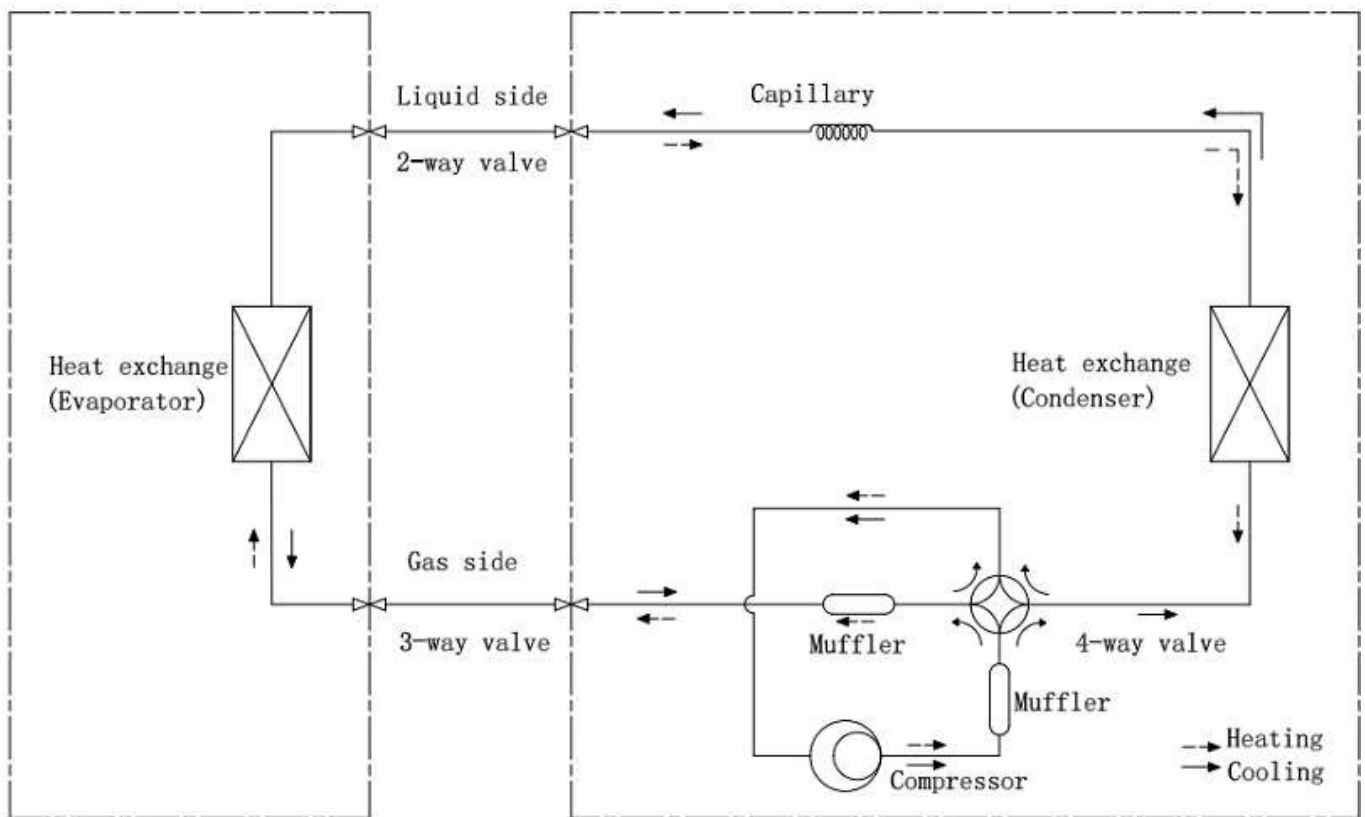


3. Product Dimensions

Indoor Unit:

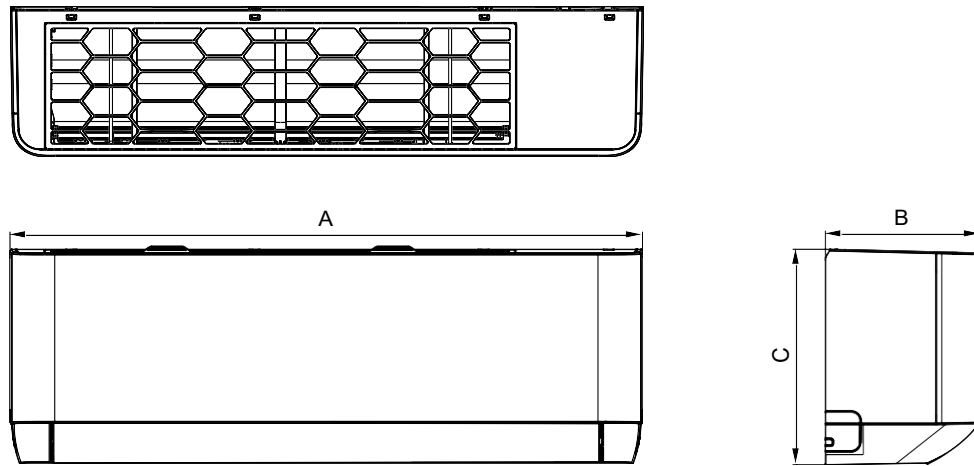


Outdoor Unit:

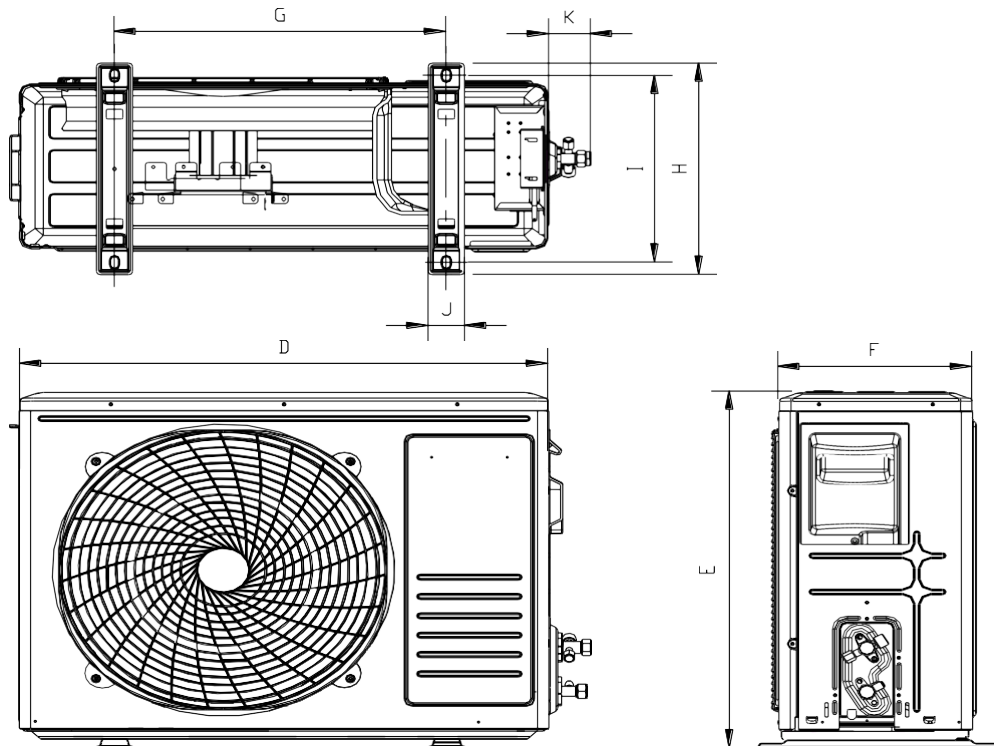


Model	Indoor unit					Outdoor unit					
	A	B	C	D	E	F	G	H	I	J	K
RD-WZ07HSS/N1	788	192	275	660	459	276	362	276	256.2	48	52
RD-WZ09HSS/N1	788	192	275	660	459	276	362	276	256.2	48	52
RD-WZ12HSS/N1	788	192	275	712	498	234	415	291	225	48.5	52
RD-WZ18HSS/N1	920	195	306	794	602	288	516	349	314	53.9	52
RD-WZ24HSS/N1	1097	222	332	845	693	336	586	374.9	347.5	58.6	63

MODEL: RD-WZ24HSS/N1
INDOOR UNIT:

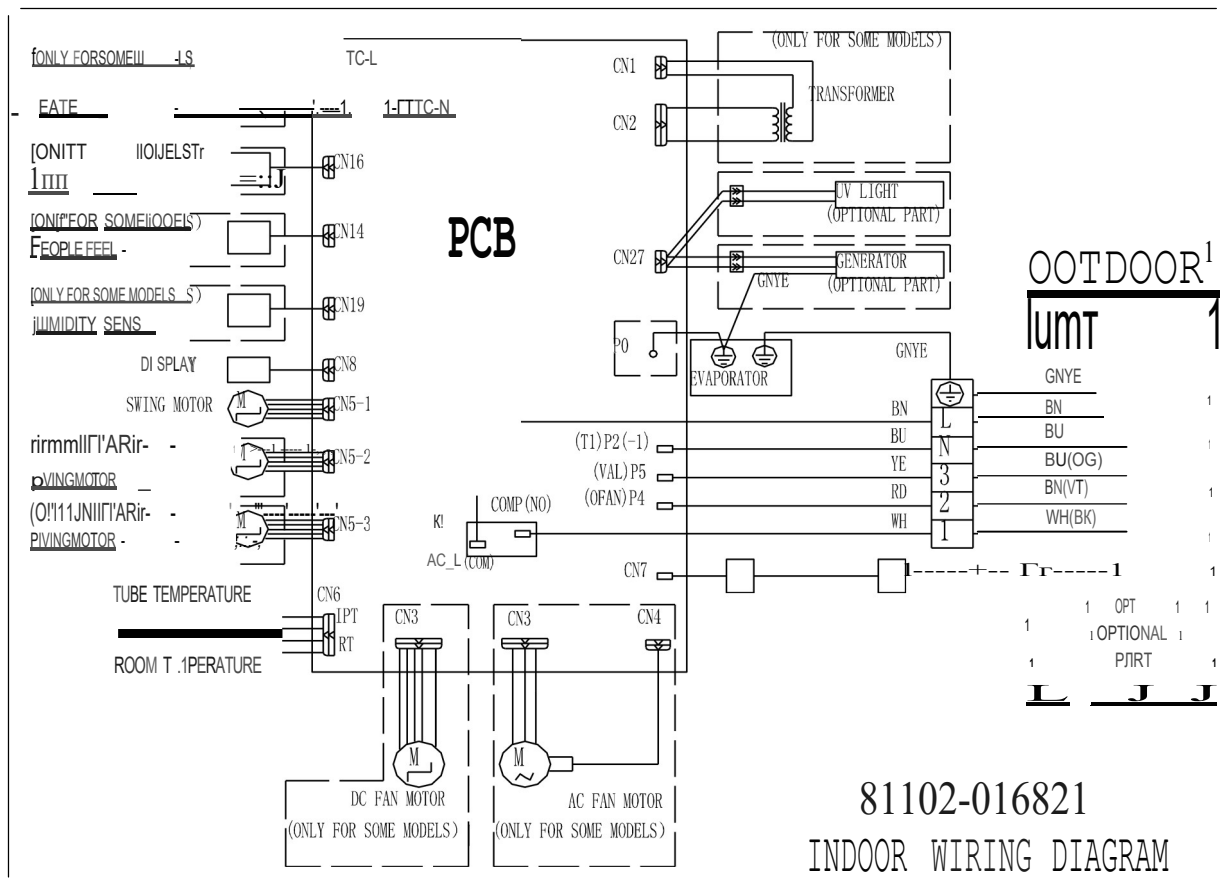

OUTDOOR UNIT:

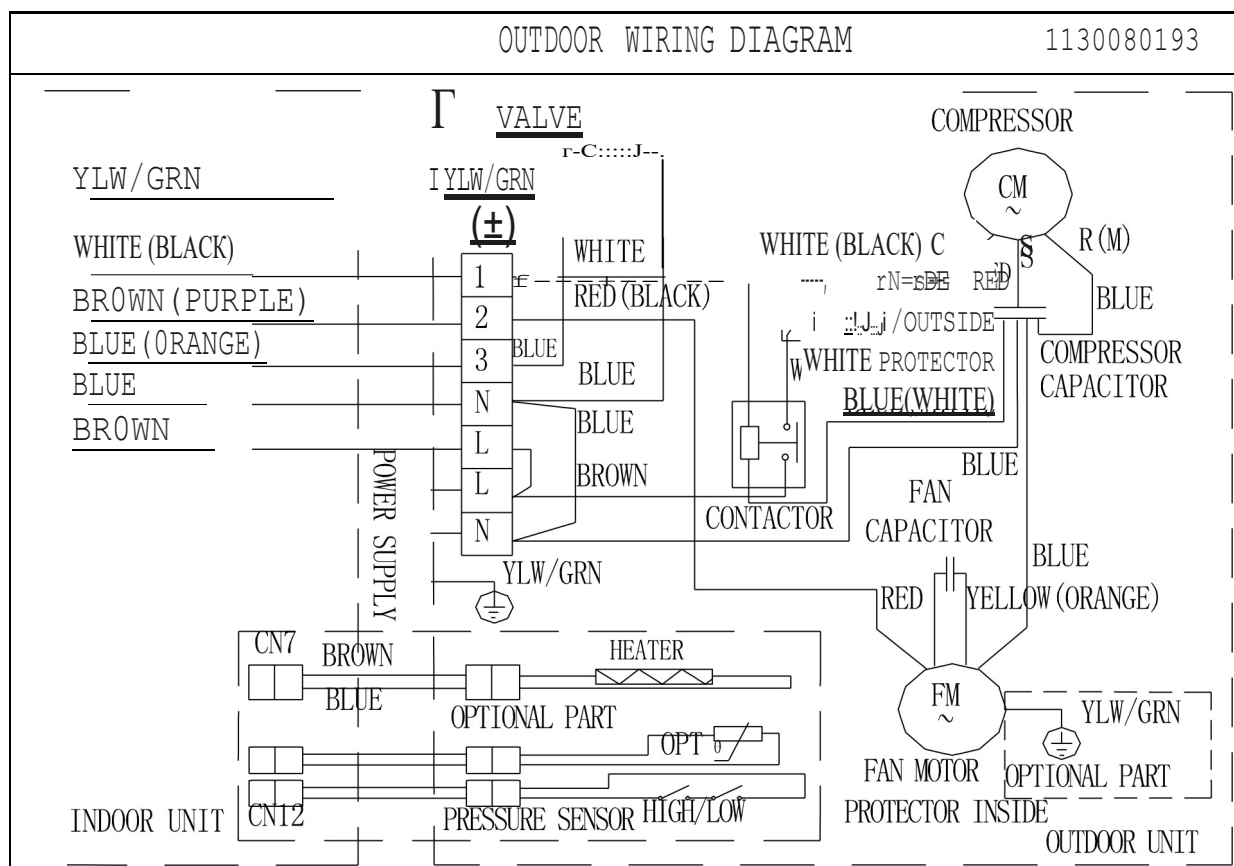


4.2 PCB LAOUT

Indoor unit

Indoor PCB


7K, 9K, 12K, 18K

Top view

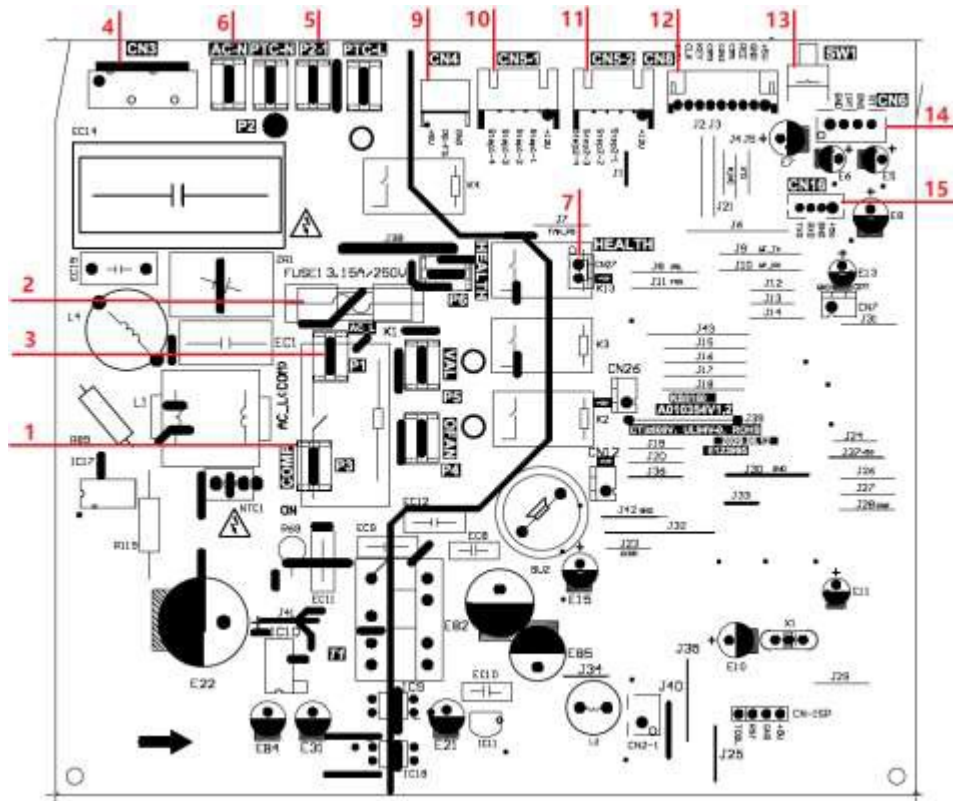


1	ODU AC power output
2	Fuse
3	ODU AC power input
-3	ODU power supply IDU power input
4	AC motor driver
	DC motor driver
	DC Motor input
5	IDU/ODU wiring connection-N connector
6	Power supply-N connector
7	Anion connector
8	IDU/ODU communication wiring
9	AC Motor feedback
10	Up-Down swing connector
11	Left-Right swing connector
12	Display
13	Emergency button
14	Temperature sensor connector
15	WIFI connector

Bottom view

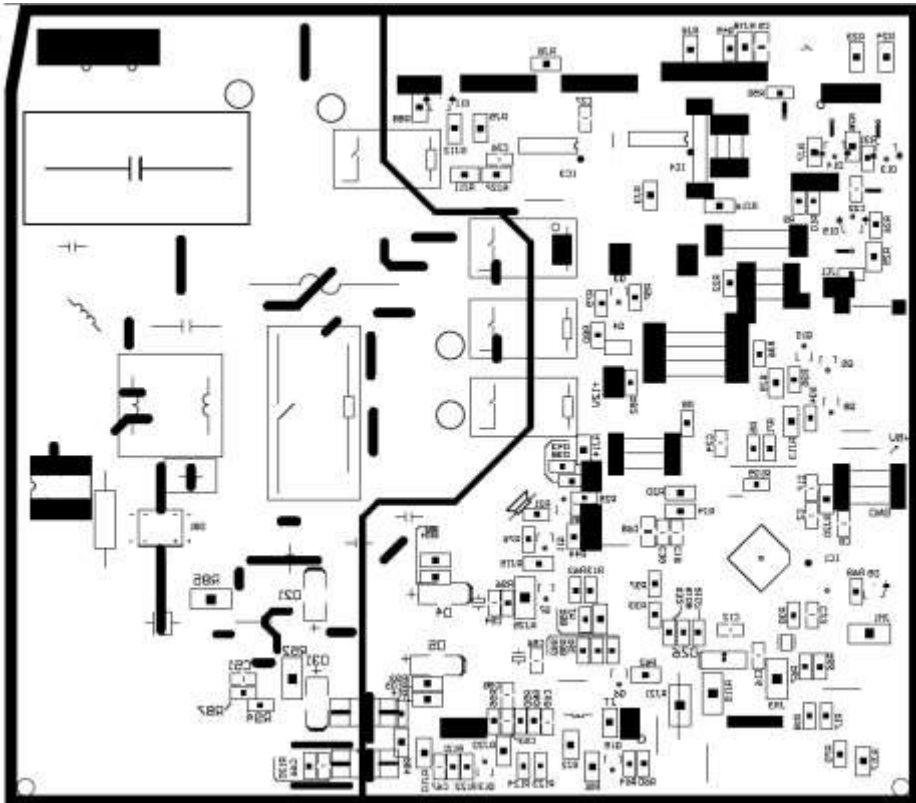


24K
Top view

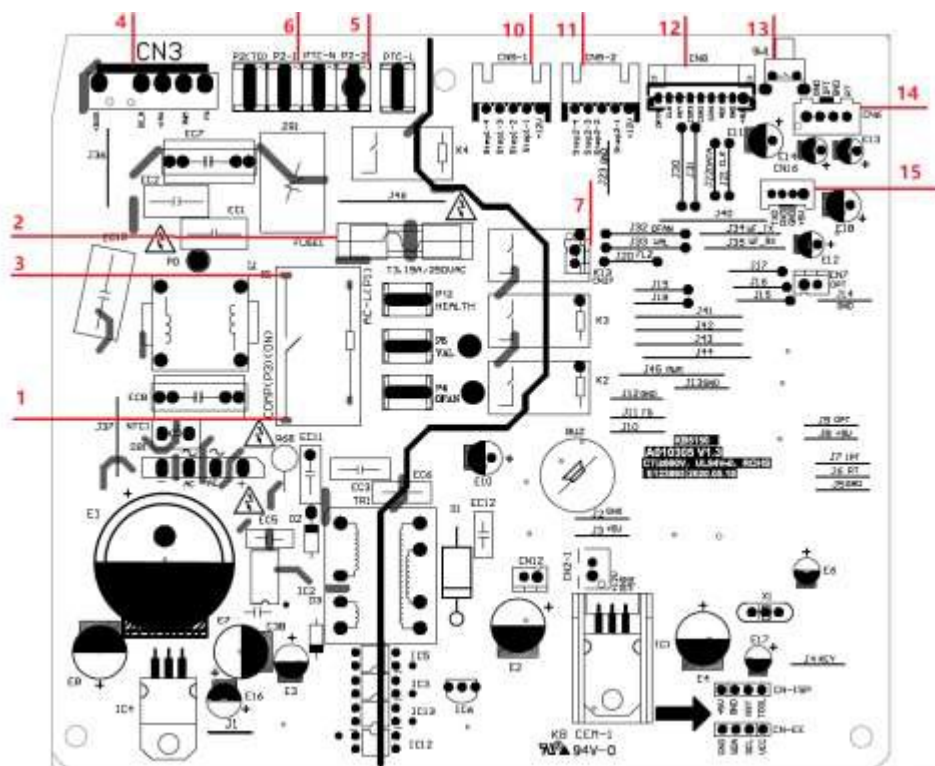


1	ODU AC power output
2	Fuse
3	ODU AC power input
-3	ODU power supply IDU power input
4	AC motor driver
	DC motor driver
	DC Motor input
5	IDU/ODU wiring connection-N connector
6	Power supply-N connector
7	Anion connector
8	IDU/ODU communication wiring
9	AC Motor feedback
10	Up-Down swing connector
11	Left-Right swing connector
12	Display
13	Emergency button
14	Temperature sensor connector
15	WIFI connector

Bottom view

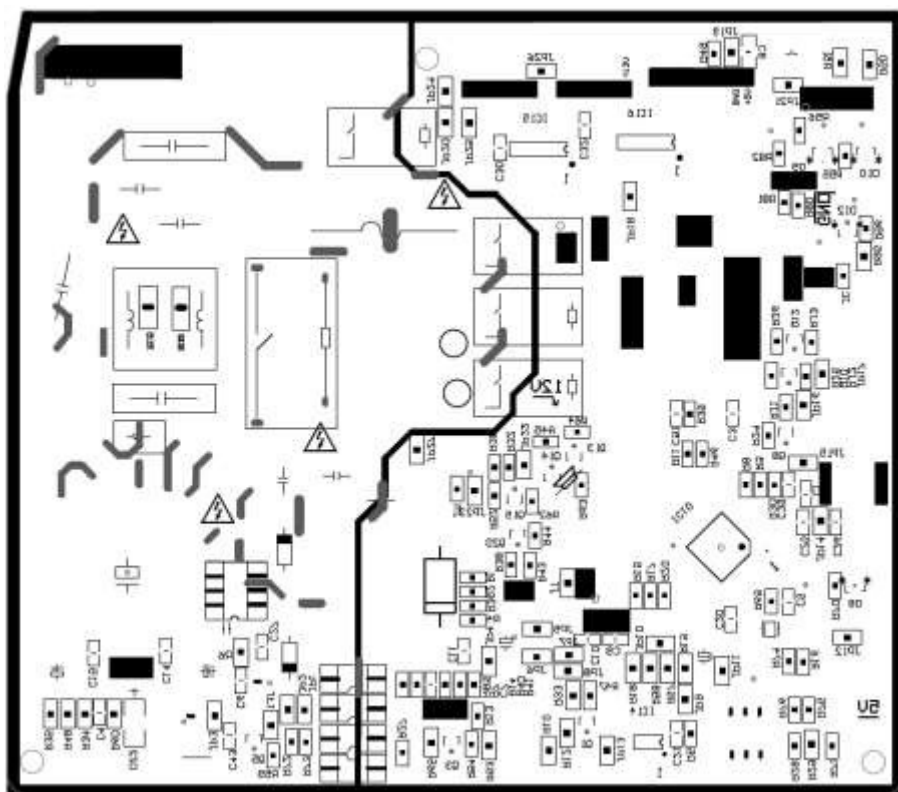

5. Electronic Controller Introduction

5.1 Remote controller

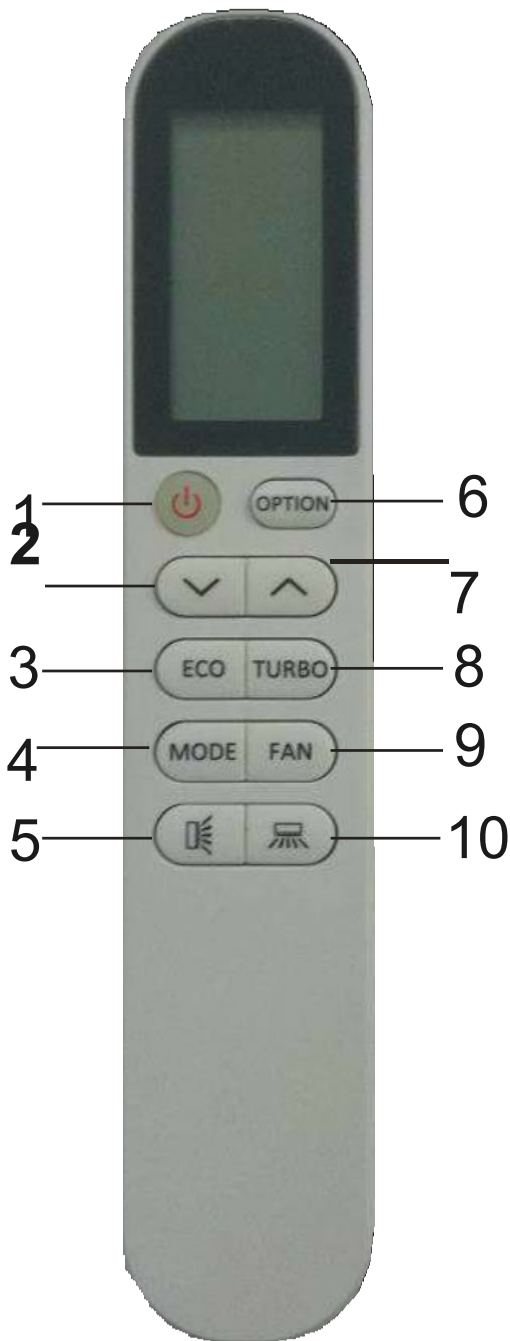

1 ON/OFF button

To switch the conditioner on and off.

2 TEMP DOWN button

Decrease the temperature or time by 1 unit.

3 ECO button

Press this button to activate/deactivate the ECO function.

4 MODE button

To select the mode of operation.

5 SWING button

To activate the swing of horizontal flap(up/down) or deactivate it.

6 OPTION button

To select the option function.

7 TEMP UP button

Increase the temperature or time by 1 unit.

8 TURBO button

Press this button to activate/deactivate the Super function which enables the unit to reach the preset temperature in the shortest time.

9 FAN SPEED button

To select the fan speed of auto/mute/low/mid-low/mid/mid-high/high/turbo, cycle as below.



10 SWING button
































To activate the swing of vertical flap(left/right) or deactivate it.

△ The out looking and some function of remote controller maybe difference.

△ The shape and position of switches and indicators may be different according to the model, but their function is the same. The actual shape and position shall prevail.

Remote controller DISPLAY

Meaning of symbols on the liquid crystal display.

1	 or or AUTO	FEEL mode indicator
2	 or COOL	COOLING indicator
3	 or  or DRY	DEHUMIDIFYING indicator
4	 or FAN	FAN ONLY OPERATION indicator
5	 or HEAT	HEATING indicator
6	 or 	SIGNAL RECEPTION indicator
7	 or  or  or 	TIMER OFF indicator
8	 or  or  or  or  or 	TIMER ON indicator
9	 or  or  or  or  or  or  or  or  or  or  or  or  or or	

5.2 Electronic controller

RT----- Room Temperature.

IPT----- Indoor Pipe (Coil) Temperature.

ST----- Indoor Setting Temperature.

OPT -- Outdoor Pipe Temperature.

CRT -- Compensated Room Temperature.

IDU -- Indoor unit

ODU --- Outdoor unit.

Note: When AC finishing installation, because of the air ventilation and the distance of temperature test sensor to different location of the house, the temperature for IDU PCB control need compensation.

- 1) . **Cooling mode. CRT=RT;**
- 2) . **Heating mode. CRT=RT-3°C ----- Split AC.**

5.2.1 Auto mode

5.2.1.1. The set temperature can be adjusted from 16-31°C (61-88°F) on auto mode, the operation of fan speed and vane position according to preset.

5.2.1.2. Operation

When unit set to auto mode, it will work on cooling, heating or fan mode totally according to Δt --the temperature difference between RT and ST shown as table:

Mode	$\Delta t = RT - ST$
COOLING	$\Delta t > 1^{\circ}\text{C}$
FAN	$-1^{\circ}\text{C} \leq \Delta t \leq 1^{\circ}\text{C}$
HEATING	$\Delta t < -1^{\circ}\text{C}$

5.2.2 Cooling mode

5.2.2.1. Temperature control :16-31°C(61-88°F), and the operation of fan speed and vane position according to preset.

5.2.2.2. Compressor and process control

- 1). When $RT - ST \geq 1^{\circ}\text{C}$ the compressor starts up working, AC operates as customer preset;
- 2). When:
 - a. $RT - ST \geq 1^{\circ}\text{C}$, the compressor will start up operation once it stops 3 minutes, and unit without any other protection or failure code.
 - b. $RT - ST \leq -1^{\circ}\text{C}$, the compressor will stop working while it works for 6 minutes or more continuously.
 - c. $-1^{\circ}\text{C} < RT - ST < 1^{\circ}\text{C}$, the compressor keeps original state.
- 3). The compressor will also stop working while unit:
 - a. switched off.
 - b. under protection.
 - c. changed to fan mode.
- 4). Under normal operation, the compressor can be stopped by program until it works for 6 min at least once starts up.
- 5). In the process of unit operation, once the compressor ceased, it should be 3 min delay for the next procedure.

5.2.2.3. ODU Fan motor control:

- 1). While unit:
 - a. switched off.
 - b. under protection.
 - c. to the set temperature.

The compressor stops working, and the fan motor will stop operation after 50s delay.
- 2). When switch on unit on cooling mode, ODU fan motor will delay 5s after compressor starts up.

5.2.2.4. When ODU failure or stops for protection, IDU works as preset.

5.2.2.5. Anti-frosting protection

While condition a), b) matched, the AC unit transferred to anti-frosting protection.

- a). After the compressor continual works for 6 minutes, and tested $\text{IPT} \leq 0^{\circ}\text{C}$ for 3 minutes continuously.
- b). After the compressor continual works 6 minutes, and tested $\text{IPT} \leq -2^{\circ}\text{C}$ for 3 seconds continuously.
- c). AC unit quit protection while $\text{IPT} \geq 10^{\circ}\text{C}$.

5.2.3 Dry mode

5.2.3.1. Temperature control: $16 \sim 31^{\circ}\text{C}$.

Fan speed: low

Vane blade position: as customer preset

5.2.3.2. When ODU failure or stops for protection, IDU works as preset.

5.2.3.3. Compressor and process control

- 1). When $\text{RT} - \text{ST} \geq 1^{\circ}\text{C}$, the compressor starts up working, AC operates as customer preset;
- 2). When
 - a. $\text{RT} - \text{ST} > 2^{\circ}\text{C}$, the compressor will start up operation once it stops 3 minutes, and unit without any other protection or failure code.
 - b. $\text{RT} - \text{ST} < -2^{\circ}\text{C}$, the compressor will stop working while it works 6 minutes or more continuously.
 - c. $-2^{\circ}\text{C} \leq \text{RT} - \text{ST} \leq 2^{\circ}\text{C}$, the compressor will stop working while it works for 6 minutes, after 4 minutes it will start working again.
- 3). The compressor will also stop working while unit:
 - a. switched off.
 - b. under protection.
 - c. changed to fan mode.
- 4). Under normal operation, the compressor can be stopped by program until it works for 6 min at least once starts up.
- 5). In the process of unit operation, once the compressor ceased, it should be 3 min delay for the next procedure.

5.2.3.4. ECO and sleep mode: Invalid.

5.2.3.5. Anti-frosting protection

While any of condition a), b), or c) matched, the AC unit transferred to anti-frosting protection.

- a). After the compressor continual works for 6 minutes, and tested $\text{IPT} \leq 0^{\circ}\text{C}$ for 3 minutes continuously.
- b). After the compressor continual works 6 minutes, and tested $\text{IPT} \leq -2^{\circ}\text{C}$ for 3 seconds continuously.
- c). If the unit works as 6 minutes ON, 4 minutes OFF, and tested $\text{IPT} \leq 0^{\circ}\text{C}$ for 3 minutes continuously.
- d). AC unit quit protection while $\text{IPT} \geq 10^{\circ}\text{C}$.

5.2.4 Heating mode

5.2.4.1. Temperature control: $16 \sim 31^{\circ}\text{C}$ ($61 \sim 88^{\circ}\text{F}$).

5.2.4.2. Compressor and process control.

- 1). When $\text{ST} - \text{CRT} \geq 1^{\circ}\text{C}$, the compressor starts up working, AC operates as customer preset;
- 2). When
 - a. $\text{ST} - \text{CRT} \geq 1^{\circ}\text{C}$, the compressor will start up operation once it stops 3 minutes, and unit without any other protection or failure code.
 - b. $\text{ST} - \text{CRT} \leq -1^{\circ}\text{C}$, the compressor will stop working while it works 6 minutes or more continuously.
 - c. $-1^{\circ}\text{C} < \text{ST} - \text{CRT} < 1^{\circ}\text{C}$, the compressor keeps original state.
- 3). The compressor will also stop working while unit:
 - a. switched off.
 - b. under protection.
 - c. changed to fan mode.
- 4). Under normal operation, the compressor can be stopped by program until it works for 6 min at least once starts

up.

- 5). In the process of unit operation, once the compressor ceased, it should be 3 min delay for the next procedure.

5.2.4.3. IDU time delay: When compressor stops or unit switches off while in heating mode, IDU fan motor keeps working for 50 seconds.

5.2.4.4. ODU Fan motor control:

1). While unit:

- a. To be switched off
- b. Under protection.
- c. To the set temperature

The compressor stops working, and the fan motor will stop operation after 50s delay.

- 2). When switch on unit on heating mode, ODU fan motor will start up 3s earlier before compressor starts up.
- 3). In the process of defrosting, the fan motor will stop operation 39s delay after compressor stopped.
- 4). defrosting finish, the compressor stops operation, the fan motor will start working simultaneously.

5.2.4.5. 4-way valve control

1). On Cooling/Dry/Fan mode, 4-way valve: **OFF**,

when unit switched on heating mode, 4-way valve: **ON**.

- 2). When heating mode switched off, or changed from heating to other modes, the 4-way valve will be **OFF** 2 min delay after the compressor stops working.
- 3). The 4-way valve will be **OFF** 2 min delay while unit stops working caused by any kinds of protection.
- 4). In the process of defrosting, 4-way valve will be **OFF** 39s delay after compressor stopped.
- 5). When defrosting finish, the compressor stops operation, 4-way valve will be **ON** after 20s delay.

5.2.4.6. Defrost

Note:

t1: The compressor continuous works time.

t2: The compressor accumulated working time.

t3: The tested max value of "IPT-RT" after compressor works for 8 minutes till to current.

ΔT : The current value of "IPT-RT" while compressor works. (*the instantaneous value*)

1). When AC unit works matching a), b) and c):

- a. $t1 \geq 120$ minutes,
- b. $t2 \geq 45$ minutes,
- c. $t3 \geq \Delta T + 4^{\circ}\text{C}$.

it triggers to defrosting.

Defrosting start up: Compressor stops working, and re-starts operation after 44s delay;

2). AC unit quit defrosting automatically after 10 minutes operation.

Defrosting end off: Compressor stops working, and re-starts after 25s delay;

5.2.4.7. Cold air prevention:

This function intends to prevent cold air from being discharged when the heating operation starts up

1). IDU fan motor cold air prevention

① .When $RT < 24^{\circ}\text{C}$:

- a. If $ITP > 31^{\circ}\text{C}$ while compressor works for 5 min, fan motor will work according to preset fan speed.
- b. If $ITP \leq 31^{\circ}\text{C}$, fan motor stops working while compressor operation within 2min, if $ITP \geq 27^{\circ}\text{C}$, fan motor works in low speed 2 min, then change to preset speed.

② When $RT \geq 24^{\circ}\text{C}$:

- a. Within 2 min after compressor starts up working, once $ITP > 27^{\circ}\text{C}$, fan motor will change to preset speed.
- b. After compressor starts working 2 min, fan motor changes to preset speed directly.

2). Vane blade operation for cold air prevention.

a. If the vane works on status of **non-swing**: While IPT increase to a special degree, the vane blade will change the position to:

- ① Default angle; or
- ② Previous position; or
- ③ Customer preset.

The above operation can work one time only, when compressor stops working, the unit will inspect the function once again.

b. If the vane works on **swing**: When IDU quits from cold air prevention, vane operate as preset.

6.2.4.8. "8°C" Heating

When function effective, it will make sure the room temperature not lower than 8°C, unit works on heating mode.


5.2.5 Fan mode

5.2.5.1. The temperature setting: 16~31°C(61-88°F),

Fan speed and vane position: as preset. The function for remote controller 58E only.

5.2.5.2. For above function, when unit preset to auto fan mode, the fan motor will change its operation speed based on the temperature difference of ambient and preset temperature.

5.2.5.3. ODU always OFF.

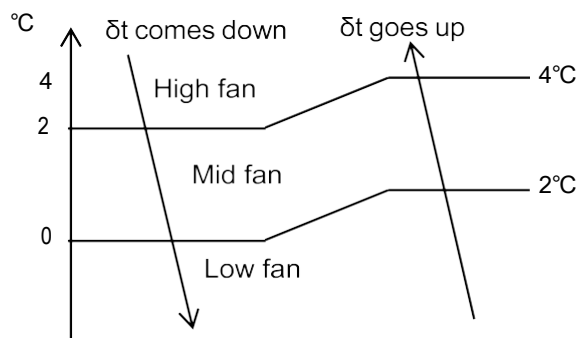

5.2.6 Timer

The unit has times control, when the unit meet the timer preset, it will be switched on or off automatically.

5.2.6.1 TIMER ON

- 1). TIMER ON can be set only when the air conditioner is OFF.
- 2). Press TIMER on the remote control ONCE to enter time setting.
- 3). Press "▲" or "▼" to set the time for unit to start working.
- 4). Set other function as MODE, FAN SPEED, SWING etc.
- 5). Press TIMER ONCE AGAIN to confirm the TIME ON setting

5.2.6.2 TIMER OFF

- 1). TIMER OFF can be set only when the air conditioner is ON.
- 2). Press TIMER on the remote control ONCE to enter time setting.
- 3). Press "▲" or "▼" to set the time for unit to stop working.
- 4). Press TIMER ONCE AGAIN to confirm the TIME OFF setting

Note: In case of no selection for the time setting within 10s, the timer function will be OFF automatically.

5.2.7 Sleeping mode

While AC works in sleeping mode, the light of POWER SUPPLY and SLEEP always ON, and the temperature display will be OFF after 15s.

In this mode, the AC unit works according to the SLEEP CURVE as designed.

Sleeping mode the unit can work 10 hours continuously, after that it will quit from this mode and work as previous presetting.

5.2.8 Emergency switch

When the EMERGENCY switch is pressed one time, COOLING mode is selected and if it pressed again within 3s, HEATING mode selected, while press once again, the unit will be switched off.

When the remote controller out of function, batteries lost power, for example, the EMERGENCY button in the front of indoor unit can be used for function test.

NOTE: Do not press the EMERGENCY switch during normal operation.

5.2.9 Auto-restart function

While air conditioner is operating in one mode, all of its operation data, such as working mode, preset temperature etc. would be memorized into IC by main PCB. If power supply cut off due to reasons and recover again, the AUTO-RESTART function will set synchronously and the air conditioner would work at the same mode as before.

Note: The function setting:

Within 3 min while power on unit, set the unit on cooling mode, set temperature 30°C, and mid fan speed, press the ECO button 10 times within 8s, the AUTO-RESTART will be activated.

5.2.10 Over heat protection for Heating mode

1). If:

- a. IPT \geq 62°C, compressor and ODU Fan stop working for over heat protection.
- b. IPT \geq 54°C, ODU Fan stops working. IDU fan motor and compressor keeps original state.

2). When IPT \leq 48°C, the compressor and ODU Fan restart works to quit overheat protection.

3). If unit have 6 times Overheat Stop-working Protection continuously, or tested IPT \geq 62°C for 3mins continuously while compressor stop working, this protection can't be recovered unless press ON/OFF button, and unit will show failure code "P7".

Note:

In the process of operation, once the compressor runs continuously more than 6 min, the counter of overheat stop-working protection will be reset to zero and start a new counting process.

The failure and times for protection will eliminate immediately once the unit to be switched off, on fan mode or changed to be heating mode from others.

5.2.11 Complementary

5.2.11.1 Energy saving (ECO)

Function effective on Cooling and Heating mode only.

On cooling mode, the set temperature range from 26°C(79°F) to 31°C(88°F).

on heating mode, from 16°C(61°F) to 25°C(77°F).

5.2.11.2 TURBO

Function effective on Cooling, Heating, Fan and Auto modes, and fan speed operates on highest.

5.2.12 Calibration Test Mode:


Within 3 min while indoor unit switch on, and set the unit as:

- 1) Cooling mode.
- 2) set temperature to 30°C.
- 3) Mid-fan speed.

by press ECO button 7 times within 8s, the unit will change to calibration test mode, and the buzzer sounds 3 times.

5.3 WIFI OPERATION MAUAL

5.3.1 The WIFI control logic

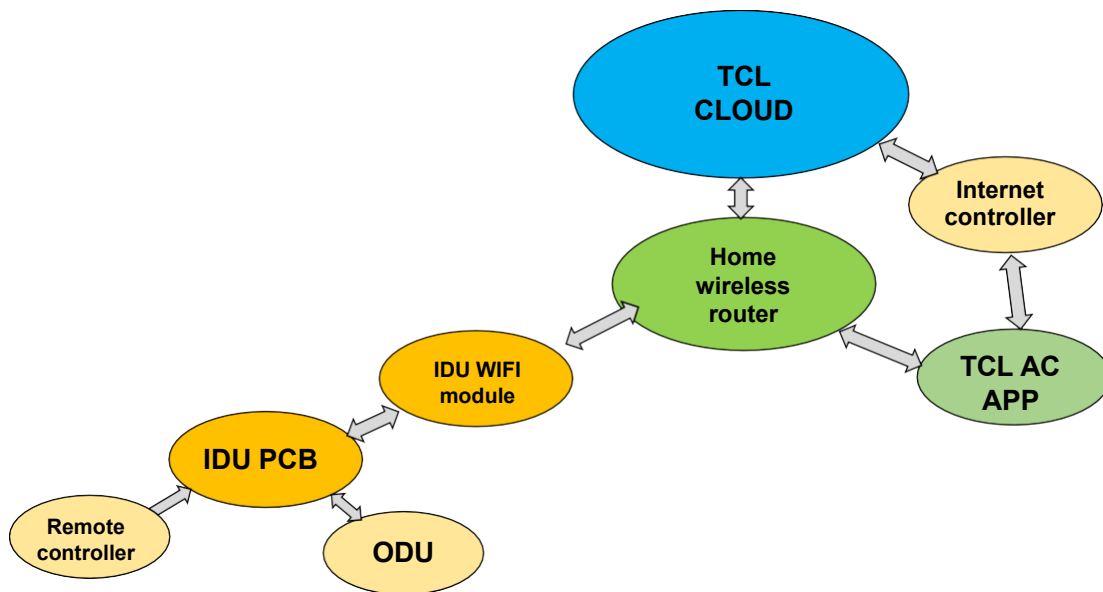

5.3.2 Download and installation

Customer can scan the QR in the user manual or from appliance APP store to download the APP and install it in the cell phone, while installation achieved, there would be an icon as picture created on the desktop.

Register the account and add the device to system, customer can control the air conditioner by internet or LAN.

TUYA APP



GUBEI APP



Intelligence AC

PART II Installation and Maintenance

1. Notes for installation and maintenance

Safety Precautions

Important!

Please read the safety of precautions carefully before installation and maintenance. The following contents are very important for installation and maintenance. Please follow the instructions below.

- The installation or maintenance must accord with the instructions.
- Comply with all national electrical codes and local electrical codes.
- Pay attention to the warnings and cautions in this manual.
- All installation and maintenance shall be performed by distributor or qualified person.
- All electric work must be performed by licensed technician according to local regulations and instructions given in this manual.
- Be caution during installation and maintenance. Prohibit incorrect operation to prevent electric shock, casualty and other accidents.

Warnings

Electrical safety Precautions.

- 1) Cut off the power supply of air conditioner before checking and maintenance.
- 2) The air conditioner must apply specialized circuit and prohibit share the same circuit with other appliances.
- 3) The air conditioner should be installed in suitable location and ensure the power plug is touchable.
- 4) Make sure each wiring terminal is connected firmly during installation and maintenance.
- 5) Have the unit adequately grounded. The grounding wire can't be used for other purposes.
- 6) Must apply protective accessories such as protective boards, cable-cross loop and wire clip.
- 7) The live wire, neutral wire and grounding wire of power supply must be corresponding to the live wire, neutral wire and grounding wire of the air conditioner.
- 8) The power cord and power connection wires can't be pressed by hard objects.
- 9) If power cord or connection wire is broken, it must be replaced by qualified person.
- 10) If the power cord or connection wire is not long enough, please get the specialized power cord or connection wire from the manufacture or distributor. Prohibit prolong the wire by yourself.
- 11) For the air conditioner without plug, an air switch must be installed in the circuit. The air switch should be all-pole parting and the contact parting distance should be more then 3mm.
- 12) Make sure all wires and pipes are connected properly and the valves are opened before energizing.
- 13) Check if there is electric leakage on the unit body. If yes, please eliminate the electric leakage.
- 14) Replace the fuse with a new one of the same specification if it is burnt down, don't replace it with a cooper wire or conducting wire.
- 15) If the unit is to be installed in a humid place, the circuit breaker must be installed.

Installation Safety Precaution

- 1) Select the installation location according to the requirement of this manual. (See the requirements in installation part).
- 2) Handle unit transportation with care, the unit should not be carried by only one person if it is more than 20kg.
- 3) When installing the indoor unit and outdoor unit, a sufficient fixing bolt must be installed, make sure the installation supporter is firm.
- 4) Ware safety belt if the height of working is above 2m.

- 5) Use equipped components or appointed components during installation.
- 6) Make sure no foreign objects are left in the unit after finishing installation.

Improper installation may lead to fire hazard, explosion, electric shock or injury.

Safety precautions for Installing and Relocating the unit.
To ensure safety, please be mindful of the following precautions.



Warnings

- 1) When installing or relocating the unit, be sure to keep the refrigerant circuit free from air or substances other than the specified refrigerant.

Any presence of air or other foreign substance in the refrigerant circuit will cause system pressure rise or compressor rupture, resulting in injury.

- 2) When installing or moving this unit, do not charge the refrigerant which is not comply with that on the nameplate or unqualified refrigerant.

Otherwise, it may cause abnormal operation, wrong action, mechanical malfunction or even series safety accident.

- 3) When refrigerant needs to be recovered during relocating or repairing the unit, be sure that the unit is running in cooling mode. Then, fully close the valve at high pressure side (two-way valve). About 30-40 seconds later, fully close the valve at low pressure side (3-way valve), immediately stop the unit and disconnect power. Please note that the time for refrigerant recover should not exceed 1 minute.

If refrigerant recovery takes too much time, may be cause compressor overheat, resulting in injury.

- 4) During refrigerant recovery, make sure that two-way valve and 3-way valve are fully closed and power is disconnected before detaching the connecting pipe.

If compressor starts running when the valves is open and connecting pipe is not yet connected, air will be sucked in and cause pressure rise and then compressor overheat or gas leak, resulting in injury.

- 5) When installing the unit, make sure that connecting pipe is securely connected before the compressor starts running.

If compressor starts running when the valves is open and connecting pipe is not yet connected, air will be sucked in and cause pressure rise and then compressor overheat or gas leak, resulting in injury.

- 6) Prohibit installing the unit at the place where there may be leaked corrosive gas or flammable gas.

If there leaked gas around the unit, it may cause explosion and other accidents.

- 7) Do not use extension cords for electrical connections. If the electric wire is not long enough, please contact a local service center authorized and ask for a proper electric wire.

Poor connection may lead to electric shock or fire.

- 8) Use the specified types of wires for electrical connections between the indoor and outdoor units. Firmly clamp the wires so that their terminals receive no external stresses.

Electric wires with insufficient capacity, wrong wire connections and insecure wire terminals may cause electric shock or fire.

Introduction R32, R290 air conditioner installation

1) Introduction to Refrigerants R32 & R290

The refrigerants used for air conditioners are environmentally friendly hydrocarbons R32 and R290. The two kinds of refrigerants are combustible and odorless. Moreover, they can burn and explode under certain condition. However, there will be no risk of burning and explosion if you comply with the following table to install

your air conditioner in a room with an appropriate area and use it correctly.

Compared with ordinary refrigerants, Refrigerants R32 & R290 are environmentally friendly and do not destroy the ozone sphere and that their values of greenhouse effect are also very low.

2) R32/R290 air conditioner installation area requirement

$$m1=(4m^3)\times LFL, m2=(26m^3)\times LFL, m3=(130m^3)\times LFL$$

Where LFL is the lower flammable limit in kg/m³, R290 LFL is 0.038kg/m³, R32 LFL is 0.306kg/m³.

For the appliances with a charge amount $m1 < M < m2$:

The maximum charge in a room shall be in accordance with the flowing: $M_{max}=2.5\times(LFL)^{(5/4)}\times h_0\times A^{1/2}$

The required minimum floor area A_{min} to install an appliance with refrigerant charge M(kg) shall be in accordance with following: $A_{min}=(M/(2.5\times(LFL)^{(5/4)}\times h_0))^2$

Where:

M_{max} is the allowable maximum charge in a room, in kg;

M is the refrigerant charge amount in appliance, in kg;

A_{min} is the required minimum room area, in m²;

A is the room area, in m²;

LFL is the lower flammable limit, in kg/m³;

h_0 is the installation height of the appliance, in meters for calculating M_{max} or A_{min} , 1.8 m for wall mounted;

Table GG.1 - Maximum charge (kg)

Category	LFL (kg/m ³)	h ₀ (m)	Floor area (m ²) Maximum charge (kg)						
			4	7	10	15	20	30	50
R290	0.038	0.6	0.05	0.07	0.08	0.1	0.11	0.14	0.18
		1	0.08	0.11	0.03	0.06	0.09	0.2	0.3
		1.8	0.15	0.2	0.24	0.29	0.34	0.41	0.53
		2.2	0.18	0.24	0.29	0.36	0.41	0.51	0.65
R32	0.306	0.6	0.68	0.9	1.08	1.32	1.53	1.87	2.41
		1	1.14	1.51	1.8	2.2	2.54	3.12	4.02
		1.8	2.05	2.71	3.24	3.97	4.58	5.61	7.254
		2.2	2.5	3.31	3.96	4.85	5.6	6.86	8.85

Table GG.2 - Minimum room area (m²)

Category	LFL (kg/m ³)	h ₀ (m)	Charge amount (M) (kg) Minimum room area (m ²)						
			0.152kg	0.228kg	0.304kg	0.456kg	0.608kg	0.76kg	0.988kg
R290	0.038	0.6	/	82	146	328	584	912	1514
		1	/	30	53	118	210	328	555
		1.8	/	9	16	36	65	101	171
		2.2	/	6	11	24	43	68	115
R32	0.306		1.224kg	1.836kg	2.448kg	3.672kg	4.896kg	6.12kg	7.956kg
		0.6	/	29	51	116	206	321	543
		1	/	10	19	42	74	116	196
		1.8	/	3	6	13	23	36	60
		2.2	/	2	4	9	15	24	40

Caution:

- Please contact the nearest after-sale service center when maintenance is necessary. At the time of maintenance, the maintenance personnel must strictly comply with the Operation Manual provided by the corresponding manufacturer and any non-professional is prohibited to maintain the air conditioner.
- It is necessary to comply with the provisions of gas-related national laws and regulations.
- It is necessary to clear away the refrigerant in the system when maintaining or scrapping an air conditioner.
- When filling the combustible refrigerant, any of your rude operations may cause serious injury or injuries to human body or bodies and object or objects.
- A leak test must be done after the installation is completed.
- It is a must to do the safety inspection before maintaining or repairing an air conditioner using combustible refrigerant in order to ensure that the fire risk is reduced to minimum.

3) Installation Safety

Installation Safety Principles

Site Safety



Open Flames Prohibited



Ventilation Necessary

Operation Safety

Open Flames Prohibited



Mind Static Electricity Must wear protective clothing and anti-static gloves Don't use mobile phone

Installation Safety

- Refrigerant Leak Detector
- Appropriate Installation Location



The left picture is the schematic diagram of a refrigerant leak detector.

Caution:

- The installation should be in a well-ventilated condition location.
- When you installing or maintaining an air conditioner using Refrigerant R32/R290, the location should be free fire from open or any other goods temperature higher than 370°C for R290/548°C for R32 which easily produces open fire include welding, smoking, drying oven.
- When installing an air conditioner of R32/R290, it is necessary to take appropriate anti-static measures such as wear anti-static clothing and gloves.
- It is necessary to choose the location for installation or maintenance where in the air inlets and outlets of the indoor and outdoor units should be not surrounded by obstacles or close to any heat source or combustible and/or explosive environment.
- If the indoor unit suffers refrigerant leak during the installation, it is necessary to immediately turn off the valve of the outdoor unit and all the personnel should go out till the refrigerant leaks completely for 15 minutes. If the product is damaged, it is a must to carry such damaged product back to the maintenance station and it is prohibited to weld the refrigerant pipe or conduct other operations on the user's site.

- It is necessary to choose the place where the inlet and outlet air of the indoor unit is even.
- It is necessary to avoid the places where there are other electrical products, power switch plugs and sockets, kitchen cabinet, bed, sofa and other valuables right under the lines on two sides of the indoor unit.

Special tools:

Tool Name	Requirement(s) for Use
Mini Vacuum Pump	It should be an explosion-proof vacuum pump; can ensure certain precision and its vacuum degree should be lower than 10Pa.
Filling Device	It should be a special explosion-proof filling device; have certain precision and its filling deviation should be less than 5g.
Leak Detector	It should be calibrated regularly; and its annual leak rate should not exceed 10g.
Concentration Detector	A) The maintenance site should be equipped with a fixed-type combustible refrigerant concentration detector and connected to a safeguard alarm system; its error must be not more than 5%. B) The installation site should be equipped with a portable combustible refrigerant concentration detector which can realize two-level audible and visual alarm; its error must be not more than 10%. C) The concentration detectors should be calibrated regularly. D) It is necessary to check and confirm the functions before using the concentration detectors.
Pressure Gauge	A) The pressure gauges should be calibrated regularly. B) The pressure gauge used for Refrigerant 22 can be used for Refrigerants R290 and R161; the pressure gauge used for R410A can be used for Refrigerant 32.
Fire Extinguisher	It is necessary to carry fire extinguisher(s) when installing and maintaining an air conditioner. On the maintenance site, there should be two or more kinds of dry powder, carbon dioxide and foam fire extinguishers and that such fire extinguishers should be placed at stipulated positions, with eye-catching labels and in handy places.

Maintenance

1). Inspections before maintenance.

(1) Inspection of maintenance environment

- There should be no leaked refrigerant in the room before operation.
- It is only allowed to operate in a room which meets the area requirement on the nameplate.
- It is necessary to make the room keep a continuous ventilation state at the time of maintenance.
- The room in the maintenance should be free from fire or welding, smoking, drying oven or any other goods temperature higher than 370°C (R290)/548°C (R32) which easily produces fire.
- During the maintenance, it is necessary to ensure that any person's any mobile phone or any electronic product with radiation in the room is powered off.
- The maintenance area should be equipped with a drying powder or carbon dioxide fire extinguisher and that such fire extinguisher can work.

(2) Inspection of maintenance equipment

- Check the maintenance equipment is applicable to the refrigerant or not and it is only allowed to use the professional equipment recommended by the air conditioner manufacturer.

- Check the refrigerant leak detector whether has been calibrated. The set maximum alarm concentration of the refrigerant leak detector should not exceed 25% of the lower explosion limit (LEL), the refrigerant leak detector must be working during maintenance.

2) Inspection of air conditioner

- It is necessary to ensure that the air conditioner is in reliable ground connection before maintenance.
- Make sure powered supply to air conditioner is off. Before maintenance, it is necessary to cut off the power and discharge the capacitor power which used in the air conditioner. If it is a must to need the power supply during the maintenance, it is necessary to do ongoing leak detection at the most dangerous position/point in order to avoid potential danger.
- Check the warning labels on the air conditioner whether are in good condition. It is necessary to replace the damaged or smeared warning labels.

3). Leak inspection before maintenance

Before maintenance, use the leak detector or concentration detector (pump-type) recommended by the corresponding air conditioner manufacturer to check the air conditioner leak or not.

Warning

If leak may exist, it is necessary to move all the fire out from the site or extinguish fire and then immediately shut off the air conditioner. Meanwhile, it is necessary to make sure well-ventilated.

4). Safety principles during the maintenance

- At the time of maintenance, it is necessary to ensure well-ventilation on the site.
- It is prohibited to use fire including welding, smoking or other purposes. It is prohibited to use mobile phones.
- At the time of maintenance, if the relative humidity is lower than 40%, it is necessary to wear anti-static clothing and gloves.
- If the combustible refrigerant is found leaking during the maintenance, it is a must to immediately take forced ventilation and plug up the leak source.
- If the product is damaged to the extent that it is a must to open the refrigerating system for maintenance, it is a must to carry the product back to the maintenance station for maintenance. (It is prohibited to weld the refrigerant pipe and do other operations on the user's site.)
- It is necessary to return the air conditioner to its initial state if it is necessary to provide visiting service again due to lacking spare part during the maintenance. Moreover, it is a must to ensure that the refrigerating system is in secure ground connection.
- If it is necessary to provide visiting service with a refrigerant cylinder, the volume of refrigerant filled in such refrigerant cylinder should not exceed the stipulated value. When such cylinder is stored in a vehicle or placed on the installation or maintenance site, it is necessary to place it vertically and securely and keep it away from any place where there is any heat source, combustion source, radiation source or electrical equipment.

5). Requirements for the site of maintenance-station

- The maintenance location should be well-ventilated, with leveled ground and not in a basement.
- The maintenance should be divided into welding and non-welding areas both of which should be labeled clearly. There should be a certain safety distance between the two areas. The maintenance location should be equipped with ventilating and air-exhausting equipment to prevent the refrigerant gas from aggregating.
- It is necessary to provide some relevant instruments such as combustible refrigerant leak detector and have a leak detecting instrument management system. It is necessary to confirm that the leak detector can work normally before maintenance.

- The main power switch should be set outside the maintenance location and equipped with protective (explosion-proof) devices.
- It is necessary to provide firefighting devices such as dry powder or carbon dioxide fire extinguisher appropriate for extinguishing the electrical fire and keep such firefighting devices in a usable condition.
- Temporary wires and sockets are prohibited on the maintenance location.

6). Requirements for fill the refrigerants

- It is necessary to use nitrogen to clear the cyclic system before operating the refrigerating system and vacuumize the outdoor unit for 30 minutes at least.
- It is necessary to ensure that there is no cross contamination among different refrigerants when the refrigerant filling device is used. The total length including the refrigerant pipeline should be as short as possible in order to reduce the residual refrigerant inside such pipeline.
- It is necessary to vertically place the refrigerant storage tanks.
- It is necessary to ensure that the refrigerating system is in ground connection before the refrigerant is filled.
- When filling the refrigerant, it is necessary to fill corresponding type and volume of refrigerant as per the requirements on the product nameplate and overfilling is prohibited.
- It is necessary to seal the system in a safe sealing way after maintaining the refrigerating system.
- It is necessary to ensure that the maintenance will not damage or reduce the safety protection grade of the original system.

7). In-maintenance welding

- It is necessary to ensure that the maintenance location is well-ventilated.
- Before welding the outdoor unit, it is a must to confirm that the refrigerating system has been drained and the system has been cleaned and ensure that there has been no refrigerant in the outdoor unit.
- It is necessary to close the stop valve of the outdoor unit when using a welding gun to do the maintenance work such as cutting and welding.

8). Maintenance of electrical components

- It is necessary to use a special leak detector to check whether the maintained electrical parts location have the leak refrigerant.
- It is not allowed to refit, remove or cancel any component with the safety protection function after finishing the maintenance process.
- When maintaining the sealed parts, it is necessary to turn off the power of air conditioner before opening the sealing cover. When power supply is needed, it is necessary to do the ongoing leak detection at the most dangerous position in order to prevent potential danger.
- It is necessary to specially note that the maintenance of electrical components will not affect the replacement of protective cover.
- In order to ensure that the sealing function is not damaged after maintenance or the sealing material will not lose the effect of preventing the combustible gas leak due to ageing. So the substitute components should meet the requirements recommended by the air conditioner manufacturer.

Warning

Before doing the trial operation after finishing the maintenance, it is a must to use a practical leak detector to inspect the leakage and reliability of ground connection in order to ensure that no refrigerant leakage and reliable ground connection.

The refrigerant storage tanks should be separately placed in a well-ventilated place at the temperature ranging from -10℃ to 50℃ and label them with warning labels.

9). Emergency Accident Handling


A maintenance station should establish emergency handling plans. It is necessary to take appropriate precautionary measures in work. For example, it is prohibited to enter the location with any kindling material and it is prohibited to wear clothing or shoes which easily produce static.

Handling suggestions when a large amount of combustible refrigerant leaks:






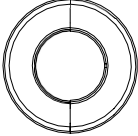

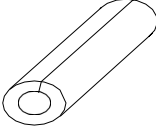
- It is necessary to immediately operate the ventilating equipment while cutting off other power supply and evacuating the affected personnel urgently from the location.
- It is necessary to inform near residents of evacuating for over 20 meters from the location, make an alarm call, set the emergency area and prohibit irrelevant personnel and vehicles from approaching.
- The professional firefighters should wear anti-static clothing to handle the emergency on the site and cut off the source of leak.
- It is necessary to use nitrogen for blowing the site, especially the low-lying positions, clear away the residual combustible refrigerant gas from any area nearby and surrounding the leak point and use a handheld detector for detection and not clear the alarm until the concentration of refrigerant is zero.

2 Installation

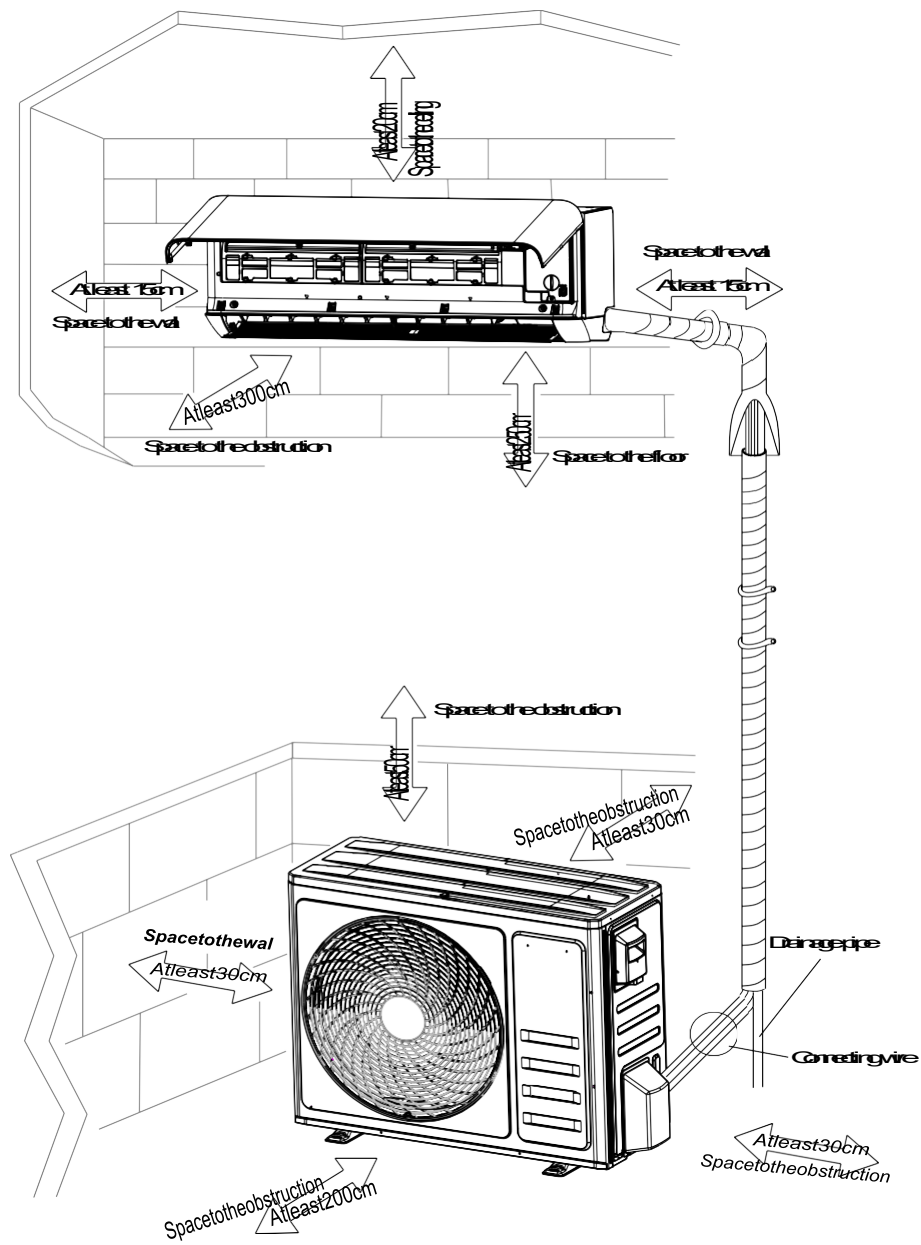2.1 Installation Dimension Diagram



2.2 Accessory

<p>Remote controller</p> 	<p>Remote controller supporter</p> 	<p>Batteries</p> 	<p>Vinyl tape</p> 
<p>Drain hose</p> 	<p>Hole cover</p> 	<p>Screw</p> 	<p>Insulation material</p> 

2.3 Position

Indoor unit

- Install the indoor unit level on a strong wall that is not subject to vibrations
- The inlet and outlet ports should not be obstructed: the air should be able to blow all over the room.
- Do not install the unit near a source of heat, steam or flammable gas.
- Do not install the unit in too windy or dusty places.
- Do not install the unit where people often pass. Select a place where the air discharge and operating sound level will not disturb the neighbors.
- Install the unit where connection between indoor and outdoor unit is as easy as possible.
- Install the unit where it is easy to drain the condensed water.
- Check the machine operation regularly and leave the necessary spaces as shown in the picture.
- Install the indoor unit where the filter can be easily accessible.

OUTDOOR UNIT

- Do not install the outdoor unit near sources of heat, steam or flammable gas.
- Do not install the unit in too windy or dusty places.
- Do not install the unit where people often pass. Select a place where the air discharge and operating sound level will not disturb the neighbors.
- Avoid installing the unit where it will be exposed to direct sunlight (other wise use a protection, if necessary, that should not interfere with the air flow).
- Leave the spaces as shown in the picture for
 - The air to circulate freely.
 - Install the outdoor unit in a safe and solid place.
 - If the outdoor unit is subject to vibration, place rubber gaskets onto the feet of the unit.
- Install the indoor unit in the room to be air conditioning, avoiding to installation in corridors or communal areas.
- Install the indoor unit at a height of at least 2.5m from the ground.
- Minimum space to be left (mm) showing in the picture.

- 1) Must follow the electric safety regulations when installing the unit.
- 2) According to the local safety regulations, use qualified power supply circuit and air switch.
- 3) Make sure the power supply matches with the requirement of air conditioner. Unstable power supply or incorrect wiring may result in electric shock, fire hazard or malfunction. Please install proper power supply cables before using the air conditioner.

The power cord should be selected according to the following specifications sheet.


Appliance Amps(A)	Wire Size (mm ²)
5	0.75
10	1.0
13	1.5
18	1.6
25	2.0
30	2.5

2.5 IDU Installation

To install, proceed as follows:

2.5.1 Installation of the mounting plate.


- 1) By using a level, put the mounting plate in a perfect square position vertically and horizontally.
- 2) Drill 32mm deep holes in the wall to fix the plate.
- 3) Insert the plastic anchors into the hole.
- 4) Fix the mounting plate by using the provided tapping screws.
- 5) Check that the mounting plate is correctly fixed.

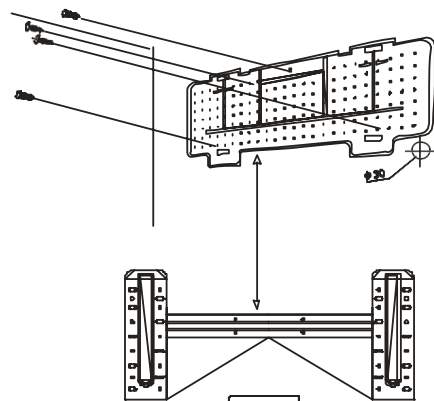


2.4 Electricity and wiring

Safety precaution


7K, 9K, 12K

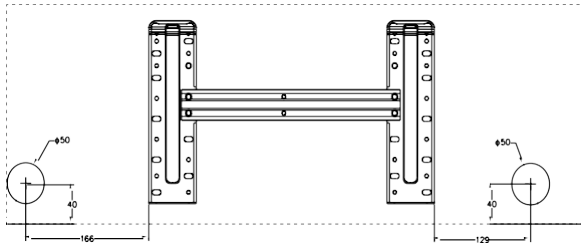

18K

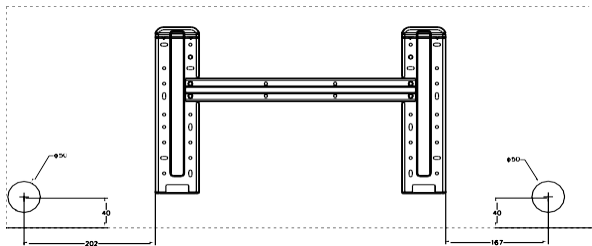

24K

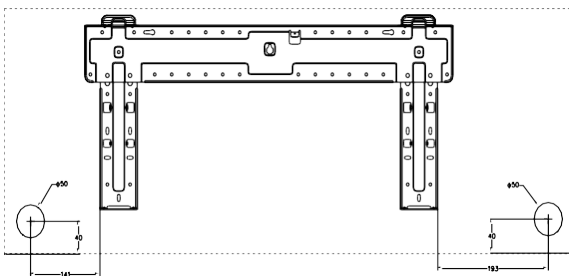


Note: The shape of the mounting plate may be different from the one above, but installation method is similar.

2.5.2 Drilling a hole in the wall for the piping

- 1) Decide where to drill the hole in the wall for the piping (if necessary) according to the position of the mounting plate
- 2) Install a flexible flange through the hole in the wall to keep the latter intact and clean.

Indoors


Out doors

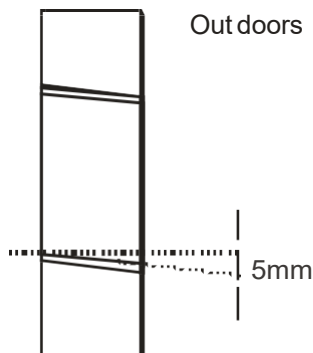

The hole must slope downwards towards the exterior.
Note: Keep the drain pipe down towards the direction of the wall hole, otherwise leakage may occur.

2.5.3 Electrical connections---Indoor unit


- 1).Lift the front panel.
- 2).Take off the cover as indicated in the picture (by removing a screw or by breaking the hooks).
- 3).For the electrical connections, see the circuit diagram on the right part of the unit under the front panel.
- 4).Connect the cable wires to the screw terminals by following the numbering, Use wire size suitable to the electric power input (see name plate on the unit) and according to all current national safety code requirements.
- 5).The cable connecting the outdoor and indoor units must be suitable for outdoor use.
- 6).The plug must be accessible also after the appliance has been installed so that it can be pulled out if necessary.
- 7).An efficient earth connection must be ensured.
- 8).If the power cable is damaged, it must be replaced by an authorized Service Centre.

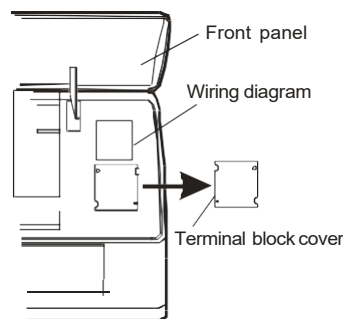

★ Refrigerant piping connection


The piping can be run in the 3 directions indicated by numbers in the picture. When the piping is run in direction 1 or 3, cut a notch along the groove on the side of the indoor unit with a cutter.

Run the piping in the direction of the wall hole and bind the copper pipes, the drain pipe and the power cables together with the tape with the drain pipe at the bottom, so that water can flow freely.

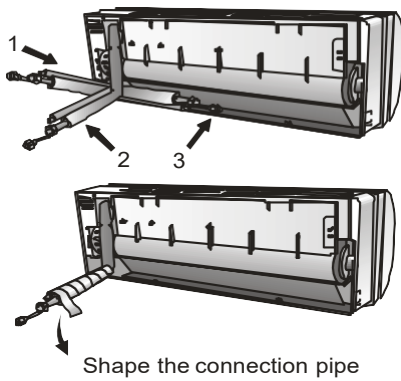


2.5.4 Connecting the pipes.

- Do not remove the cap from the pipe until connecting it, to avoid dampness or dirt from entering.
- If the pipe is bent or pulled too often, it will become stiff. Do not bend the pipe more than three times at one point.
- When extending the rolled pipe, straighten the pipe by unwinding it gently as shown in the picture.

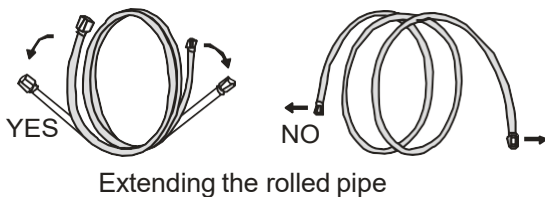


2.5.5 Connections to the indoor unit

- 1). Remove the indoor unit pipe cap (check that there is no debris inside).
- 2). Insert the flare nut and create a flare at the extreme end of the connection pipe.

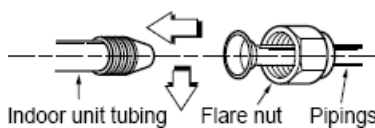

- 3). Tighten the connections by using two wrenches working in opposite directions.

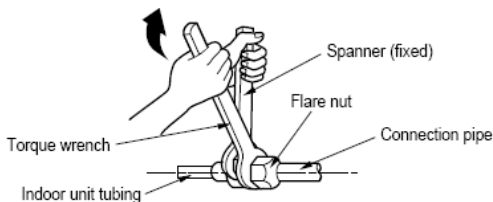


When extending the drain hose at the indoor unit, install the drain pipe.


Capacity (Btu/h)	Pipe Size (Torque)	
	Gas	Liquid
7/9/12K	3/8" (4.2kg.m)	1/4" (1.8kg.m)
18K	1/2" (5.5kg.m)	1/4" (1.8kg.m)
24K	5/8" (6.6kg.m)	3/8" (4.2kg.m)

Wrap the insulation material around the connecting portion.


- Overlap the connection pipe insulation material and the indoor unit pipe insulation material. Bind them together with vinyl tape so that there is no gap.

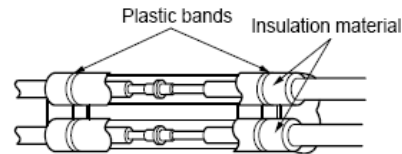

Wrap the area which accommodates the rear piping housing section with vinyl tape.

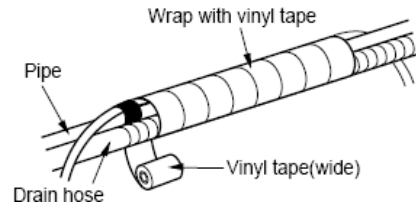

- Bundle the piping and drain hose together by wrapping them with vinyl tape over the range within which they fit into the rear piping housing section.

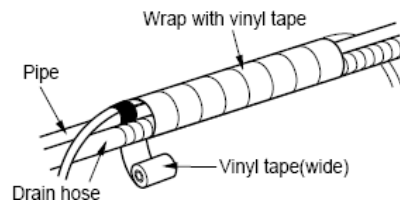


2.5.6 Indoor unit condensed water drainage


The indoor unit condensed water drainage is fundamental for the success of the installation.

- 1). Place the drain hose below the piping, taking care not to create siphons.
- 2). The drain hose must slant downwards to aid drainage.
- 3). Do not bend the drain hose or leave it protruding or twisted and do not put the end of it in water. If an extension is connected to the drain hose, ensure that it is lagged when it passes into the indoor unit.
- 4). If the piping is installed to the right, the pipes, power cable and drain hose must be lagged and secured

onto the rear of the unit with a pipe connection.

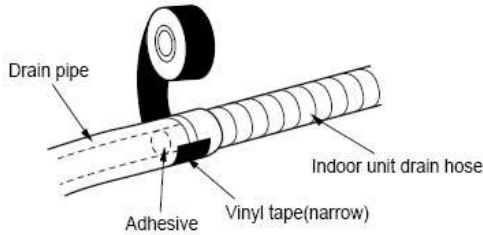

- Insert the pipe connection into the relative slot.
- Press to join the pipe connection to the base.

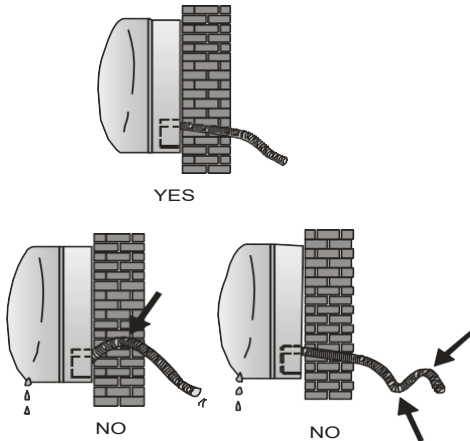

2.6 ODU Installation

- The outdoor unit should be installed on a solid wall and fastened securely.
- The following procedure must be observed before connecting the pipes and connecting cables : decide which is the best position on the wall and leave enough space to be able to carry out maintenance easily.
- Fasten the support to the wall using screw anchors which are particularly suited to the type of wall;
- Use a larger quantity of screw anchors than normally required for the weight they have to bear to avoid vibration during operation and remain fastened in the same position for years without the screws becoming loose.
- The unit must be installed following the national regulations.


Outdoor unit condensed water drainage (only for heat pump models)

The condensed water and the ice formed in the outdoor unit during heating operation can be drained away through the drain pipe.

- 1) Fasten the drain port in the 25mm hole placed in the part of the unit as shown in the picture.

- 2) Connect the drain port and the drain pipe.


Pay attention that water is drained in a suitable place.

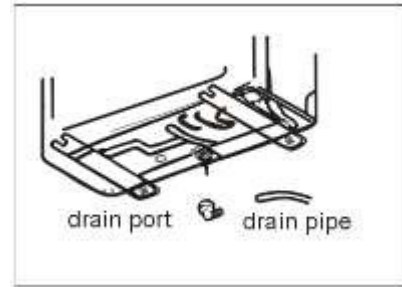

Electronic connections

1. Take the cover away.
2. Connect the cable wires to the terminal board using the same numbering as in the indoor unit.
3. For the electrical connections, see the wiring diagram on the back of the cover
4. Fasten the cables with a cable-clamp.
5. An efficient earth connection must be ensured.
6. Replace the covers.


Wiring diagram on the back of the cover

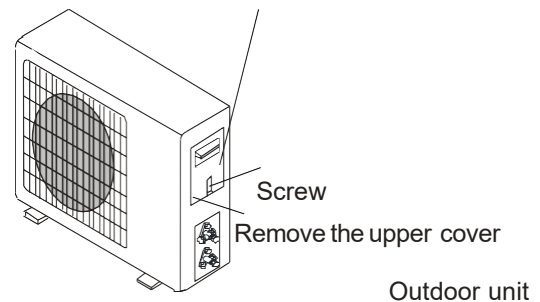

Connecting the pipe

Screw the flare nuts to the outdoor unit coupling with the same tightening procedures described for the indoor unit.


Note: If the tightening torque is not sufficient, there will probably be some leakage. With excessive tightening torque there will also be some leakage, as the flange could be damaged.

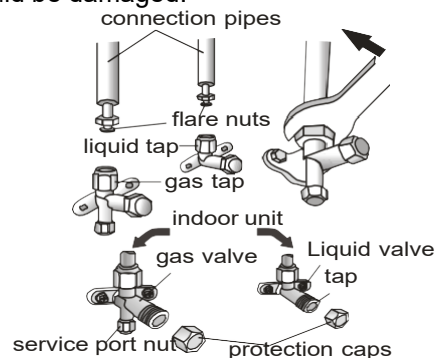

2.7 Vacuum and gas leakage test

1. Use vacuum Pump

- 1) Air and humidity left inside the refrigerant circuit can cause compressor malfunction. After having connected the indoor and outdoor units, bleed the air and humidity from the refrigerant circuit by using a vacuum pump.
- 2) Open the piezometer and operation for 10-15minutes to check if the pressure of piezometer remains in -0.1Mpa.
- 3) Close the vacuum pump and maintain this status for 1-2min to check if the pressure of piezometer remains in -0.1Mpa. If the pressure decrease, there may be leakage.
- 4) Remove the piezometer, open the valve core of liquid valve and gas valve completely.
- 5) Tighten the screw caps of valve and refrigerant charging vent.

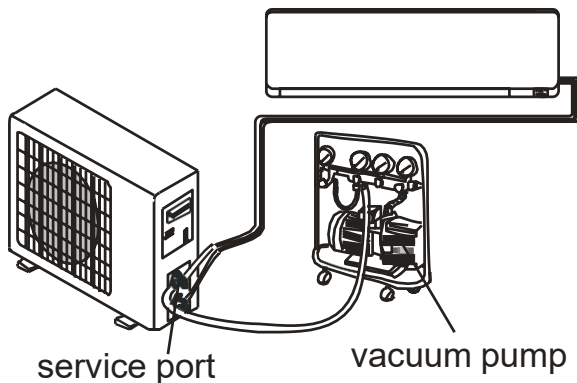

2. Leakage Detection

- 1).With leakage detection.
Check if there is leakage with leakage detection.
- 2).With soap water. If leakage detection is not available, please use soap water for leakage detection. Apply soap water at the suspected position and keep the soap water for more than 3min. If there are air bubbles coming out of this position, there a leakage.

2.8 Final test

1 Preparation of test operation.

- The client approves the air conditioner installation.
- Specify the important notes for air conditioner to the client.

2 Method of test operation

- Put through the power, press ON/OFF button on the remote controller to start operation.
- Press MODE button the select AUTO, COOL, DRY, FAN and HEAT to check whether the operation is normal or not.
If ambient temperature is lower than 16°C , the air conditioner can't start cooling.


3. Maintenance


3.1 Failure code

Code	Reason	Remark
E1	IDU Room Temperature sensor failure. (IDU RT failure)	IDU sensor and PCB.
E2	IDU Coil temperature sensor failure. (IDU IPT failure)	IDU sensor and PCB.
E4	Gas not enough	Please check the pressure in cooling
E5	System protection	For the high/low pressure valve model
E6	IDU PG Fan motor / DC fan motor works abnormal (IDU failure)	Fan motor, fan blade and PCB.
P7	Overheating protection on Heating mode.	Please check the troubleshooting for detail.

3.2 Trouble shooting


3.2.1 E1, E2 ---IDU Room temperature sensor and/or coil temperature sensor failure.

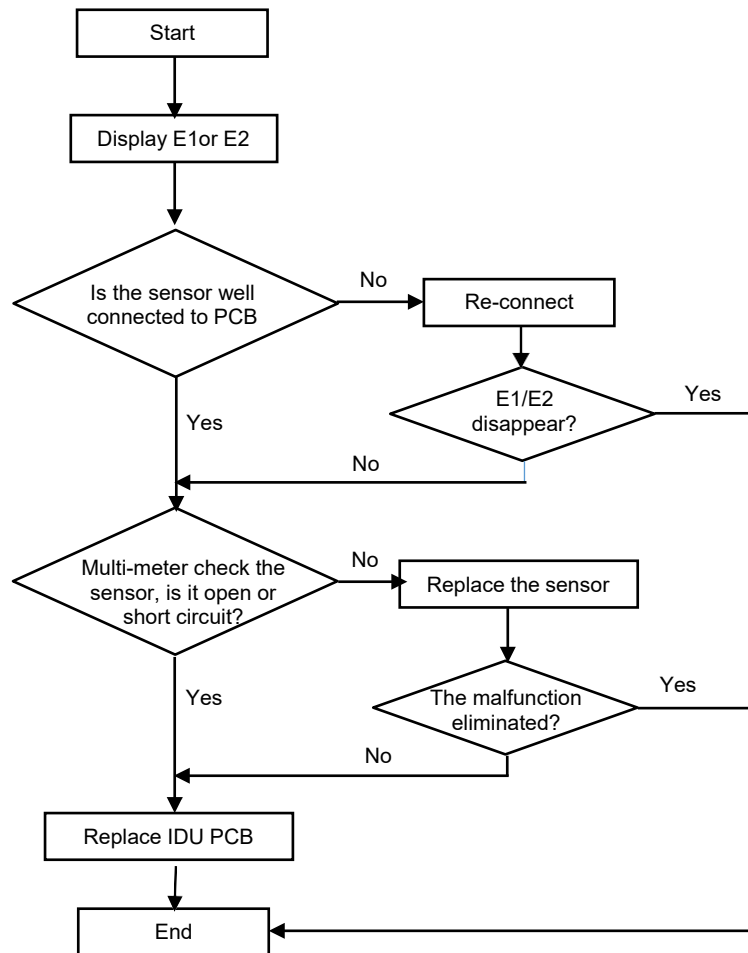

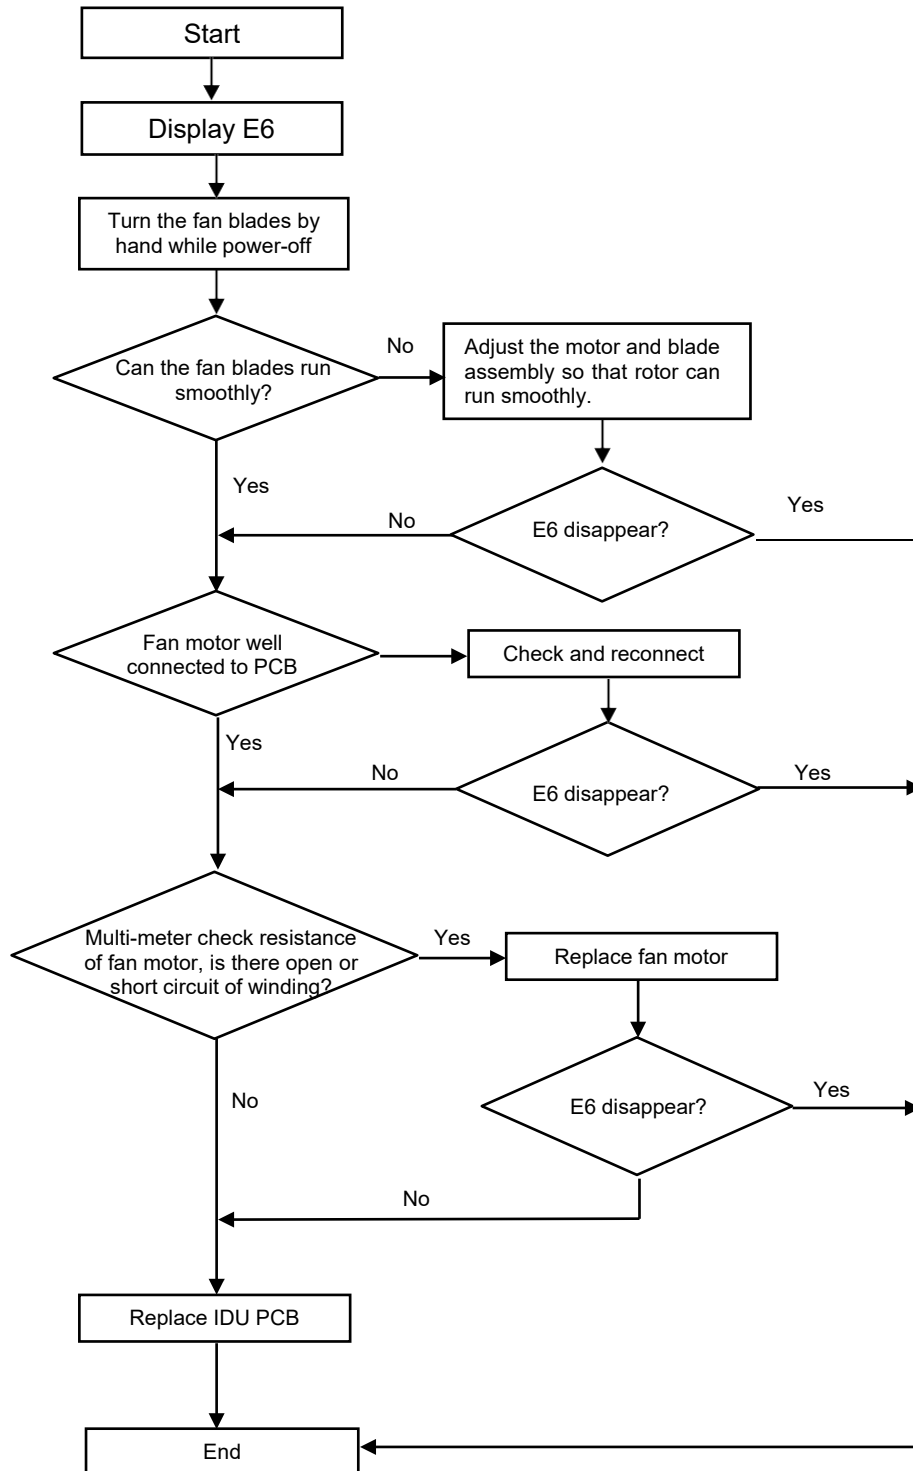3.2.2 E6 ---IDU ventilation failure (PG and DC fan motor only)


3.2.3 P7---Overheating protection on Cooling mode

On heating mode, when IDU evaporator coil temperature $IPT \geq 62^{\circ}\text{C}$, ODU PCB will switch off outdoor unit and show P7 failure code.

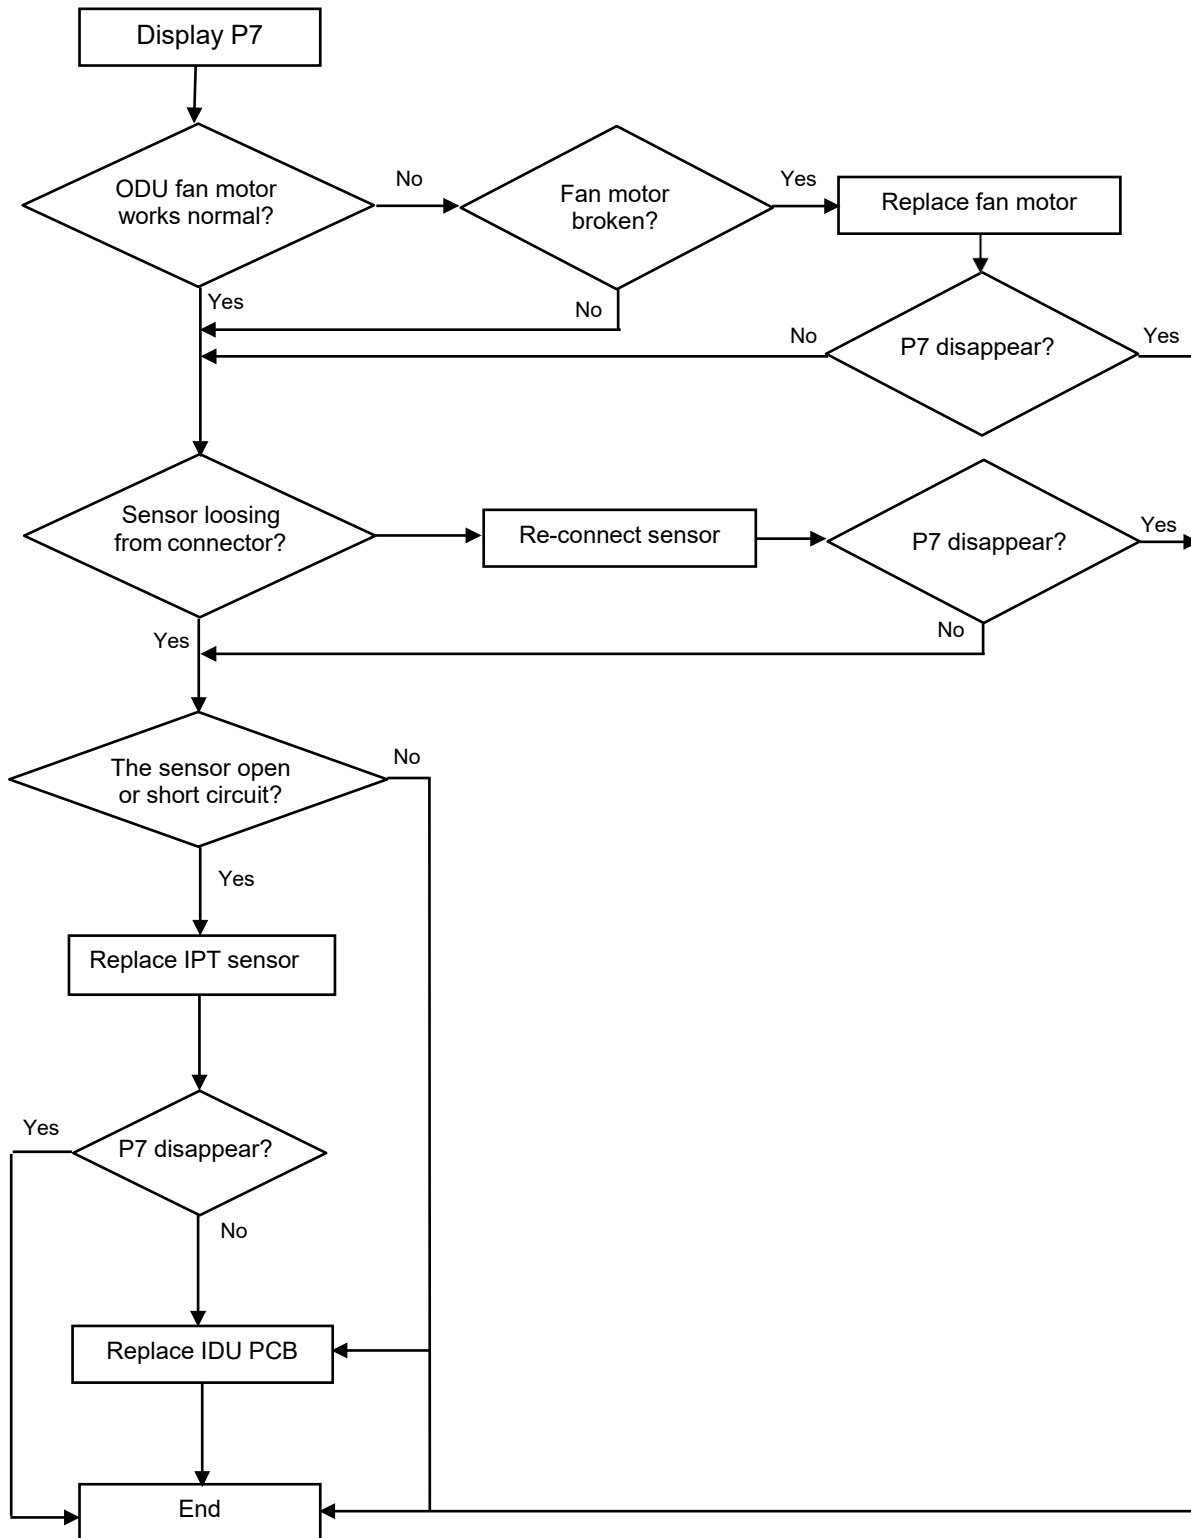


4. Exploded view and parts list

Indoor Unit- RD-WZ07HSS/N1

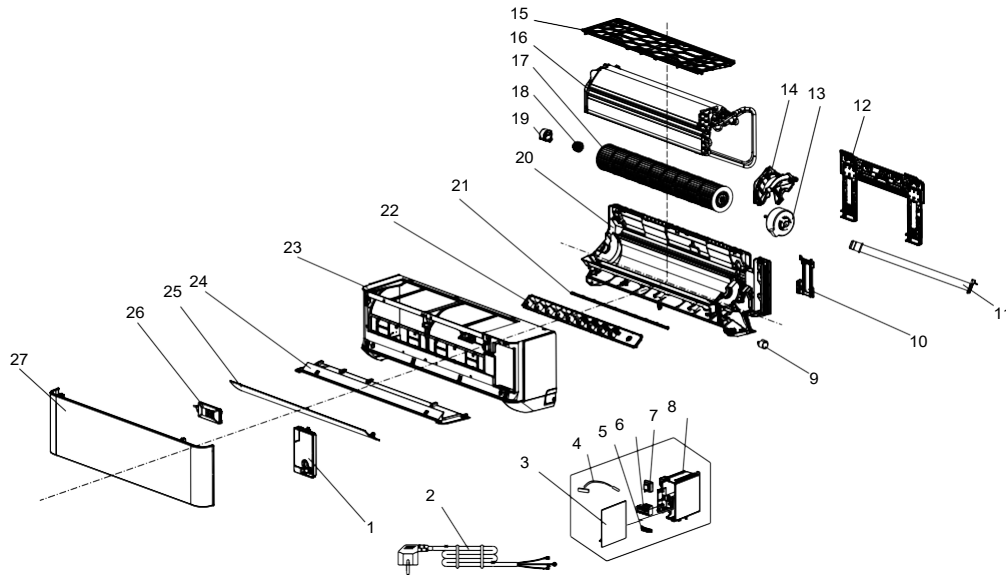


No.	Part No.	Part Name	Q'ty	Remark
1	41105-000373	Electrical Box Cover	1	
2	22007-000016	Power Supply Cord	1	
3	31101-001719	Main PCB	1	
4	10104-100014	Indoor Sensor Assembly	1	
5	42001-000103	Cable Clamp	1	
6	11304-100023	Terminal	1	
7	10502-100030	Transformer	1	
8	41105-000415	Electrical Box	1	
9	22001-000313	Vane Motor	1	
10	41101-000354	In And Out Pipe Cover	1	
11	42009-000011	Drainage Hose	1	
12	41109-000047	Installation Plate	1	
13	22001-000532	Indoor Motor	1	
14	41108-000135	Indoor Motor Cover	1	
15	41108-000133	Air Filter	2	
16	92011-005527	Evaporator	1	
17	42004-000039	Cross Fan	1	
18	42007-000009	Bearing Mount	1	
19	41101-000251	Bearing Mount Holder	1	
20	41199-004231	Base	1	
21	41101-000350	Step Motor Connect Rod	1	
22	41101-000346	Vertical Vane Assembly 1	1	
	41101-000348	Vertical Vane Assembly 2	1	
23	41106-004031	Face Frame	1	
24	41106-003821	Front Cover Panel	1	
25	41103-000487	Vane	1	
26	31102-000282	Display PCB	1	
27	41106-003819	Panel	1	
28	22013-002478	Remote Controller	1	Not shown in Explosion view
29	A1101-008909	Indoor Carton	1	
30	A1102-000001	Left Foaming	1	
31	A1102-000002	Right Foaming	1	

Outdoor Unit- RD-WZ07HSS/N1

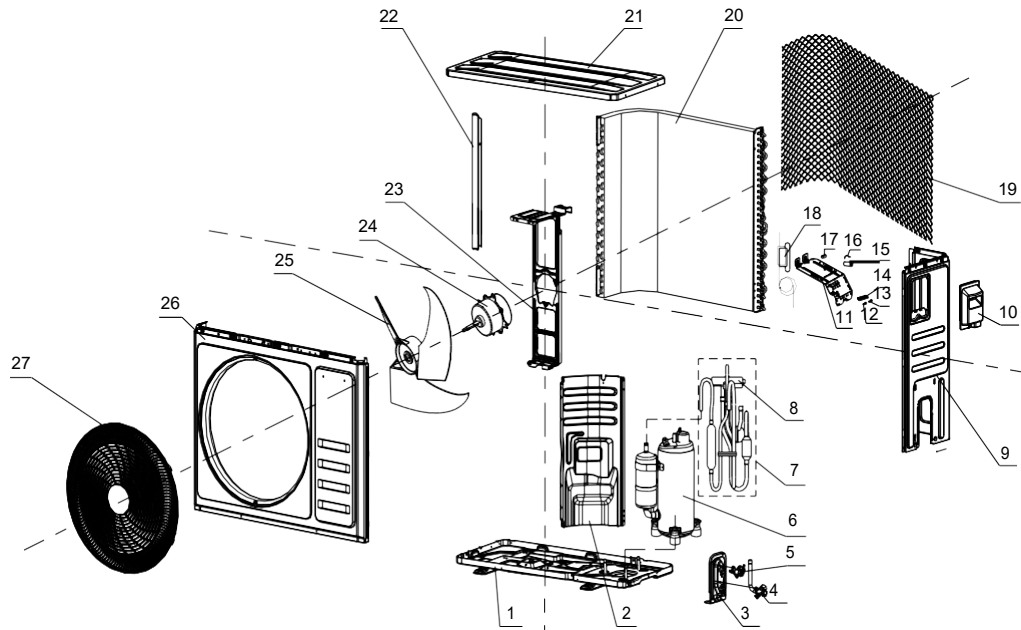


No.	Part No.	Part Name	Q'ty	Remark
1	41202-000412	Base	1	
2	41208-000225	Partition plate	1	
3	41204-000018	Valve Supporter	1	
4	92007-001041	Three-way Valve	1	
5	92007-007328	Two-way Valve	1	
6	92014-000840	Compressor And It Accessories	1	
7	92007-009577	4-way Valve Assembly	1	
8	92008-000313	4-way Valve	1	
9	41205-000212	Right Plate	1	
10	41201-000029	Electrical Box Cover	1	
11	41214-001174	Electrical Parts Fixing Plate	1	
12	42001-000037	Cable Clamp(φ6)	1	
13	42001-000035	Cable Clamp(φ7)	1	
14	210902378	Terminal	1	
15	22003-000009	Compressor Capacitor	1	
16	42001-000029	Capacitor Strip	1	
17	10303-100020	Fan Motor Capacitor	1	
18	92007-009142	Capillary Assembly	1	
19	42011-000440	Grille	1	Optional
20	92011-006422	Condenser	1	
21	41207-000047	Top Cover	1	
22	41203-000112	Outdoor Motor Supporter	1	
23	22001-000006	Outdoor Motor	1	
24	42004-000192	Propeller Fan	1	
25	41205-000213	Left Grille Supporter	1	
26	41206-000074	Front Plate	1	
27	42011-000415	Fan Guard	1	
28	A1201-012624	Base Carton	1	Not shown in Explosion view
29	A1201-012623	Cabinet Carton	1	
30	A1202-000084	Base Foaming	1	
31	A1202-000083	Cover Forming	1	

Indoor Unit- RD-WZ09HSS/N1

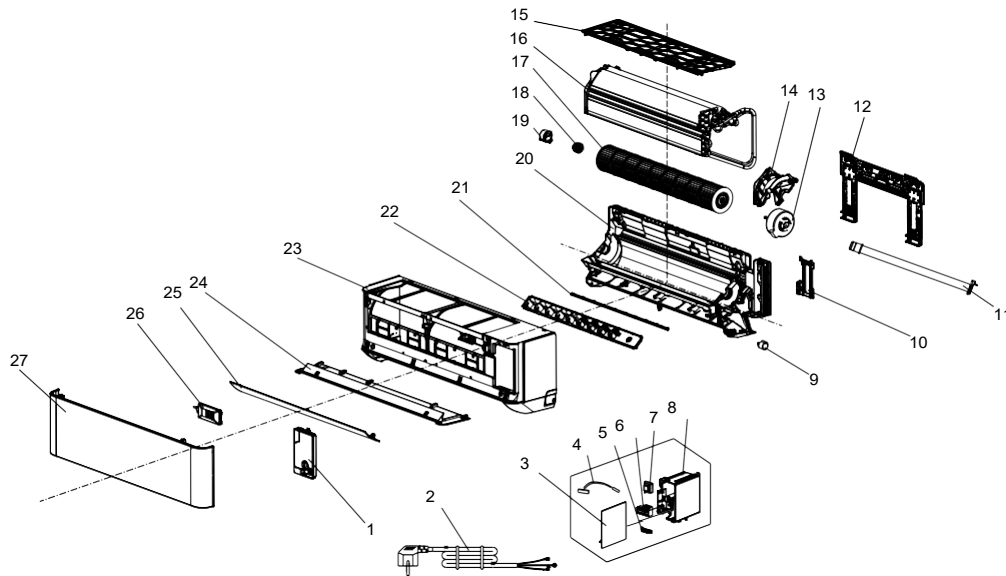


No.	Part No.	Part Name	Q'ty	Remark
1	41105-000373	Electrical Box Cover	1	
2	22007-000016	Power Supply Cord	1	
3	31101-001719	Main PCB	1	
4	10104-100014	Indoor Sensor Assembly	1	
5	42001-000103	Cable Clamp	1	
6	11304-100023	Terminal	1	
7	10502-100021	Transformer	1	
8	41105-000415	Electrical Box	1	
9	22001-000313	Vane Motor	1	
10	41101-000354	In And Out Pipe Cover	1	
11	42009-000011	Drainage Hose	1	
12	41109-000070	Installation Plate	1	
13	22001-000532	Indoor Motor	1	
14	41108-000135	Indoor Motor Cover	1	
15	41108-000133	Air Filter	2	
16	92011-005527	Evaporator	1	
17	42004-000039	Cross Fan	1	
18	42007-000009	Bearing Mount	1	
19	41101-000251	Bearing Mount Holder	1	
20	41199-003927	Base	1	
21	41101-000350	Step Motor Connect Rod	1	
22	41101-000347	Vertical Vane Assembly 1	1	
	41101-000348	Vertical Vane Assembly 2	1	
23	41106-004031	Face Frame	1	
24	41106-003821	Front Cover Panel	1	
25	41103-000487	Vane	1	
26	31102-000282	Display PCB	1	
27	41106-003819	Panel	1	
28	22013-002478	Remote Controller	1	Not shown in Explosion view
29	A1101-008909	Indoor Carton	1	
30	A1102-000001	Left Foaming	1	
31	A1102-000002	Right Foaming	1	

Outdoor Unit- RD-WZ09HSS/N1

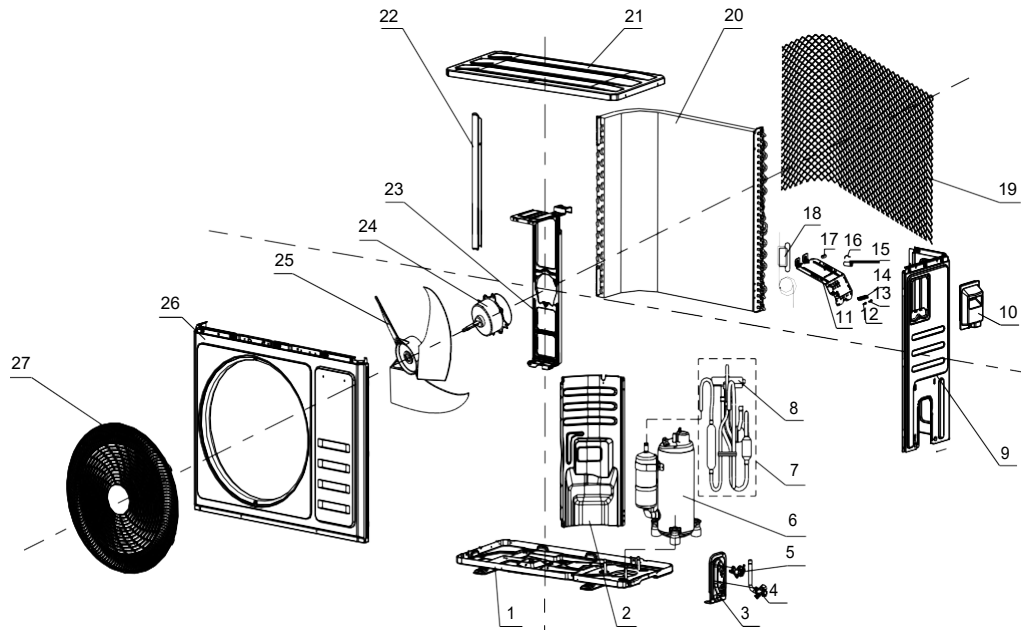


No.	Part No.	Part Name	Q'ty	Remark
1	41202-000412	Base	1	
2	41208-000225	Partition plate	1	
3	41204-000018	Valve Supporter	1	
4	92007-001041	Three-way Valve	1	
5	92007-007328	Two-way Valve	1	
6	92014-000847	Compressor And It Accessories	1	
7	92007-009548	4-way Valve Assembly	1	
8	92008-000313	4-way Valve	1	
9	41205-000212	Right Plate	1	
10	41201-000029	Electrical Box Cover	1	
11	41214-001174	Electrical Parts Fixing Plate	1	
12	42001-000037	Cable Clamp(φ6)	1	
13	42001-000035	Cable Clamp(φ7)	1	
14	210902378	Terminal	1	
15	22003-000009	Compressor Capacitor	1	
16	42001-000029	Capacitor Strip	1	
17	10303-100020	Fan Motor Capacitor	1	
18	92007-009941	Capillary Assembly	1	
19	42011-000440	Grille	1	Optional
20	92011-006422	Condenser	1	
21	41207-000047	Top Cover	1	
22	41203-000112	Outdoor Motor Supporter	1	
23	22001-000007	Outdoor Motor	1	
24	42004-000192	Propeller Fan	1	
25	41205-000213	Left Grille Supporter	1	
26	41206-000074	Front Plate	1	
27	42011-000415	Fan Guard	1	
28	A1201-012624	Base Carton	1	Not shown in Explosion view
29	A1201-012623	Cabinet Carton	1	
30	A1202-000084	Base Foaming	1	
31	A1202-000083	Cover Forming	1	

Indoor Unit- RD-WZ12HSS/N1

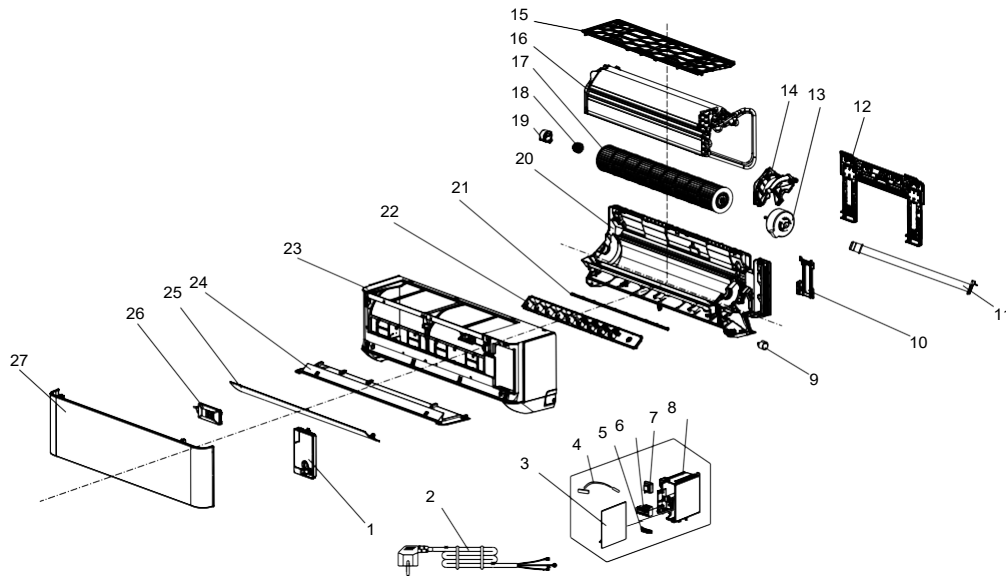


No.	Part No.	Part Name	Q'ty	Remark
1	41105-000373	Electrical Box Cover	1	
2	22007-000015	Power Supply Cord	1	
3	31101-001320	Main PCB	1	
4	10104-100014	Indoor Sensor Assembly	1	
5	42001-000103	Cable Clamp	1	
6	11304-100023	Terminal	1	
7	41105-000361	Electrical Box	1	
8	22001-000313	Vane Motor	1	
9	41101-000354	In And Out Pipe Cover	1	
10	42009-000011	Drainage Hose	1	
11	41109-000070	Installation Plate	1	
12	22001-000273	Indoor Motor	1	
13	41108-000135	Indoor Motor Cover	1	
14	41108-000133	Air Filter	2	
15	92011-005443	Evaporator	1	
16	42004-000039	Cross Fan	1	
17	42007-000009	Bearing Mount	1	
18	41101-000251	Bearing Mount Holder	1	
19	41199-004235	Base	1	
20	41101-000350	Step Motor Connect Rod	1	
21	41101-000347	Vertical Vane Assembly 1	1	
	41101-000348	Vertical Vane Assembly 2	1	
22	41106-004031	Face Frame	1	
23	41106-003821	Front Cover Panel	1	
24	41103-000487	Vane	1	
25	31102-000282	Display PCB	1	
26	41106-003819	Panel	1	
27	22013-002478	Remote Controller	1	Not shown in Explosion view
28	A1101-008909	Indoor Carton	1	
29	A1102-000001	Left Foaming	1	
30	A1102-000002	Right Foaming	1	

Outdoor Unit- RD-WZ12HSS/N1

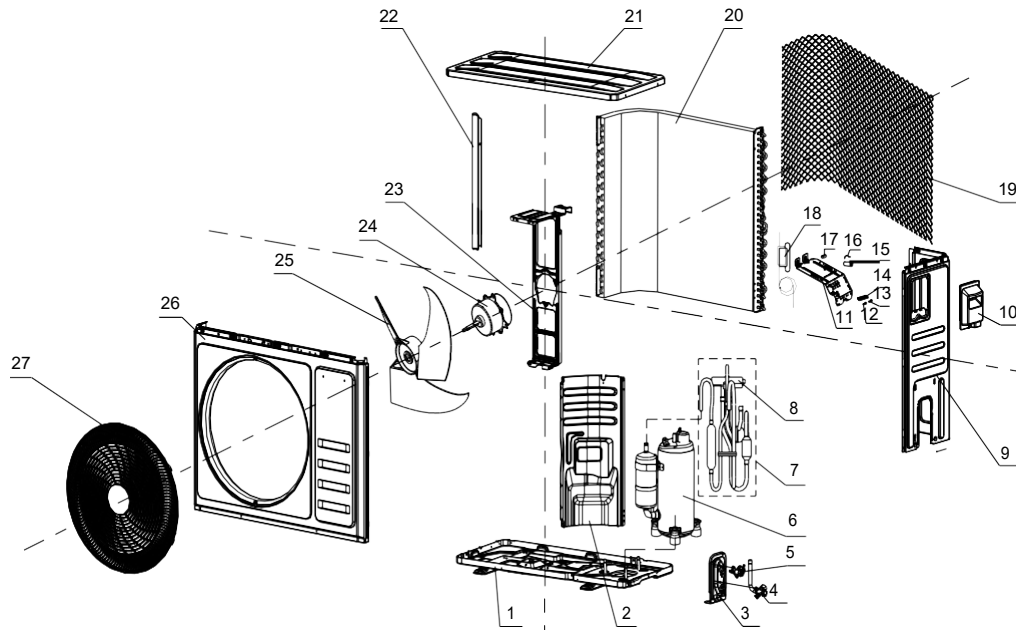


No.	Part No.	Part Name	Q'ty	Remark
1	41202-000177	Base	1	
2	41208-000139	Partition plate	1	
3	41204-000018	Valve Supporter	1	
4	92007-001041	Three-way Valve	1	
5	92007-007317	Two-way Valve	1	
6	92014-000827	Compressor And It Accessories	1	
7	92007-009536	4-way Valve Assembly	1	
8	92008-000308	4-way Valve	1	
9	41205-000206	Right Plate	1	
10	41201-000015	Electrical Box Cover	1	
11	41214-000194	Electrical Parts Fixing Plate	1	
12	42001-000037	Cable Clamp(φ6)	1	
13	42001-000035	Cable Clamp(φ7)	1	
14	11304-100007	Terminal	1	
15	22003-000028	Compressor Capacitor	1	
16	42001-000030	Capacitor Strip	1	
17	10303-100015	Fan Motor Capacitor	1	
18	92007-009941	Capillary Assembly	1	
19	42011-000184	Grille	1	Optional
20	92011-007734	Condenser	1	
21	41207-000029	Top Cover	1	
22	41203-000054	Outdoor Motor Supporter	1	
23	41203-000054	Outdoor Motor	1	
24	22001-000009	Propeller Fan	1	
25	42004-000107	Left Grille Supporter	1	
26	41206-000054	Front Plate	1	
27	42011-000088	Fan Guard	1	
28	A2005-000523	Base Carton	1	Not shown in Explosion view
29	A1201-003463	Cabinet Carton	1	
30	A1202-000031	Base Foaming	1	
31	41213-000023	Cover Forming	1	

Indoor Unit- RD-WZ18HSS/N1

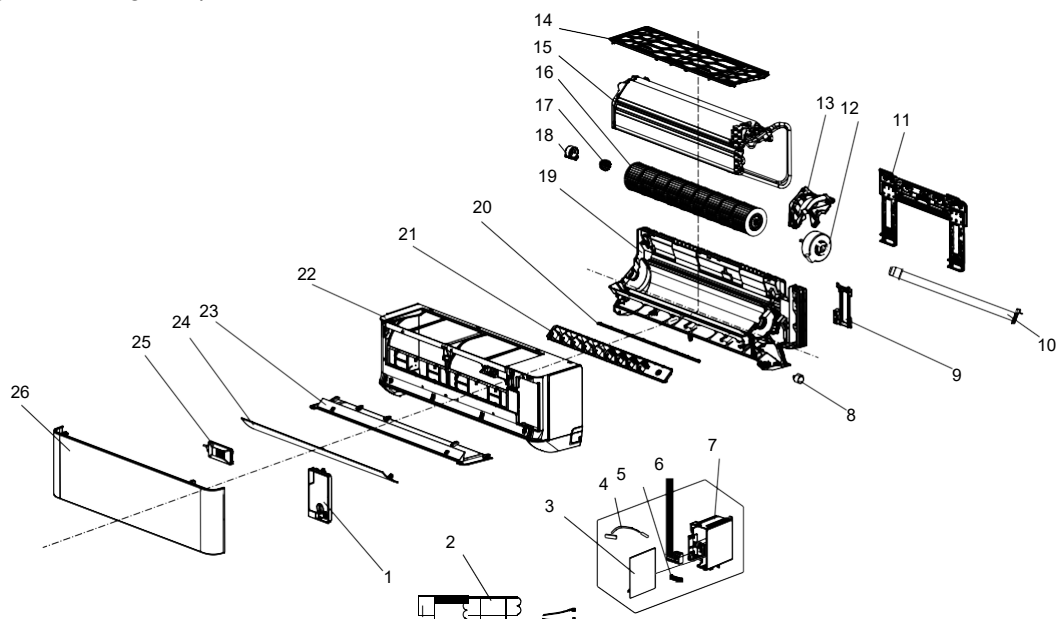


No.	Part No.	Part Name	Q'ty	Remark
1	41105-000373	Electrical Box Cover	1	
2	22007-000034	Power Supply Cord	1	
3	31101-001452	Main PCB	1	
4	10104-100014	Indoor Sensor Assembly	1	
5	42001-000103	Cable Clamp	1	
6	11304-100023	Terminal	1	
7	41105-000361	Electrical Box	1	
8	22001-000313	Vane Motor	1	
9	41101-000354	In And Out Pipe Cover	1	
10	42009-000011	Drainage Hose	1	
11	41109-000075	Installation Plate	1	
12	22001-000409	Indoor Motor	1	
13	41108-000153	Indoor Motor Cover	1	
14	41108-000154	Air Filter	1	
15	92011-005386	Evaporator	1	
16	42004-000175	Cross Fan	1	
17	42007-000009	Bearing Mount	1	
18	41101-000251	Bearing Mount Holder	1	
19	41199-004427	Base	1	
20	41101-000400	Step Motor Connect Rod	1	
21	41101-000402	Vertical Vane Assembly	1	
	41101-000347	Vertical Vane Assembly	1	
22	41106-004167	Face Frame	1	
23	41106-004049	Front Cover Panel	1	
24	41103-000507	Vane	1	
25	31102-000282	Display PCB	1	
26	41106-004047	Panel	1	
27	22013-002314	Remote Controller	1	Not shown in Explosion view
28	A1101-009263	Indoor Carton	1	
29	A1102-000005	Left Foaming	1	
30	A1102-000009	Right Foaming	1	

Outdoor Unit- RD-WZ18HSS/N1

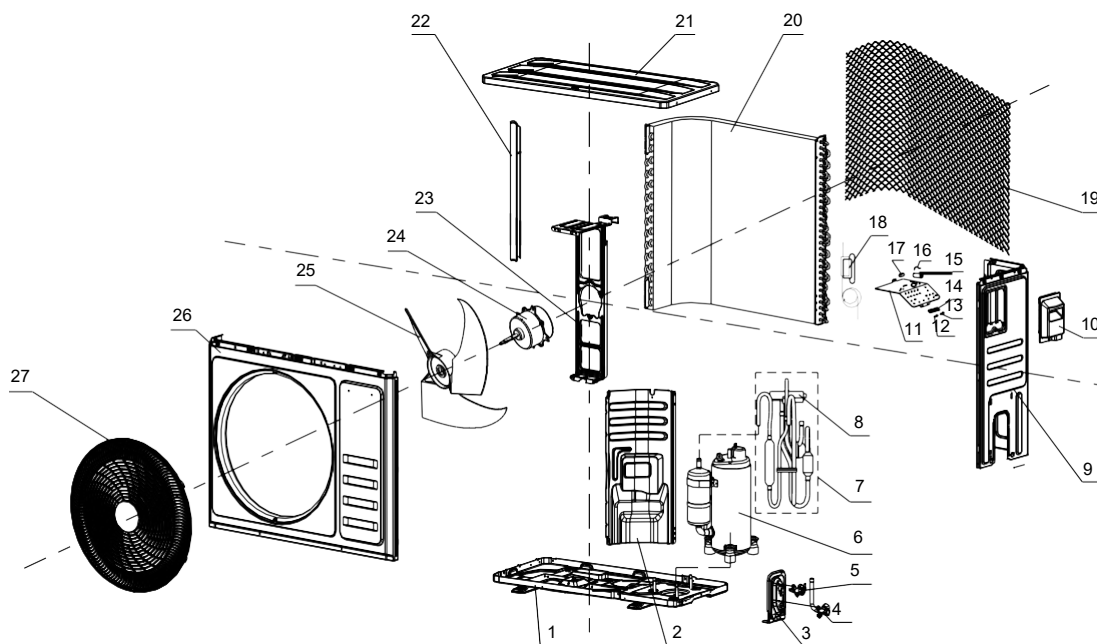


No.	Part No.	Part Name	Q'ty	Remark
1	41202-000249	Base	1	
2	41208-000158	Partition plate	1	
3	41204-000018	Valve Supporter	1	
4	92007-001066	Three-way Valve	1	
5	92007-005294	Two-way Valve	1	
6	92014-000798	Compressor	1	
7	92007-010843	4-way Valve Assembly	1	
8	92008-000305	4-way Valve	1	
9	41205-000084	Right Plate	1	
10	41201-000029	Electrical Box Cover	1	
11	41214-000342	Electrical Parts Plate	1	
12	42001-000037	Cable Clamp(φ6)	1	
13	42001-000038	Cable Clamp(φ10)	1	
14	11304-100007	Terminal	1	
15	22003-000006	Compressor Capacitor	1	
16	42001-000030	Capacitor Strip	1	
17	10303-100021	Fan Motor Capacitor	1	
18	92007-010405	Capillary Assembly	1	
19	42011-000168	Back Grille	1	Optional
20	92011-007813	Condenser	1	
21	41207-000033	Top Cover	1	
22	41205-000130	Left Grille Supporter	1	
23	41203-000052	Outdoor Motor Supporter	1	
24	22001-000089	Outdoor Motor	1	
25	42004-000104	Propeller Fan	1	
26	41206-000055	Front Plate	1	
27	42011-000081	Fan Guard	1	
28	A2005-000540	Base Carton	1	Not shown in Explosion view.
29	A1201-000396	Cabinet Carton	1	
30	A1202-000026	Base Foaming	1	
31	41213-000019	Cover Forming	1	

Indoor Unit- RD-WZ24HSS/N1

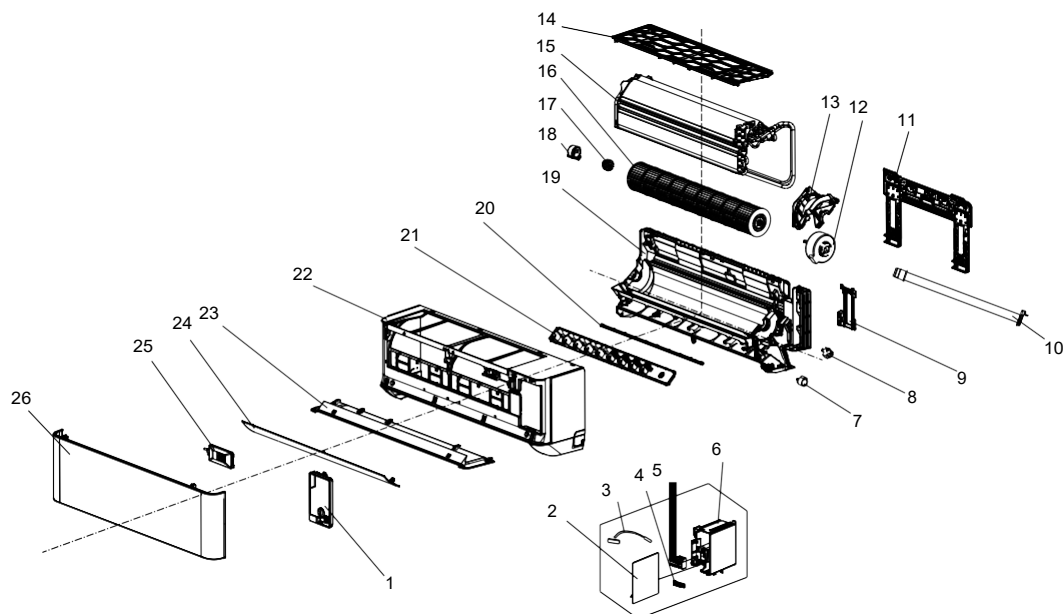

No.	Part No.	Part Name	Q'ty	Remark
1	41105-000373	Electrical Box Cover	1	
2	31101-001356	Main PCB	1	
3	10104-100014	Indoor Sensor Assembly	1	
4	42001-000103	Cable Clamp	1	
5	11304-100025	Terminal	1	
6	41105-000104	Electrical Box	1	
7	22001-000360	Vane Motor	1	
8	29901-000078	Step Motor	1	
9	41101-000240	In And Out Pipe Cover	1	
10	42009-000011	Drainage Hose	1	
11	41109-000073	Installation Plate	1	
12	22001-000240	Indoor Motor	1	
13	41108-000009	Indoor Motor Cover	1	
14	42008-000175	Air Filter	1	
15	92011-005514	Evaporator	1	
16	42004-000037	Cross Fan	1	
17	42007-000009	Bearing Mount	1	
18	41101-000251	Bearing Mount Holder	1	
19	41102-000449	Base	1	
20	41101-000373	Step Motor Connect Rod	1	
21	41101-000374	Vertical Vane Assembly	1	
22	41106-003991	Face Frame	1	
23	41101-000388	Front Cover Panel	1	
24	41103-000496	Vane	1	
25	32099-006472	Display PCB	1	
26	41106-003990	Panel	1	
27	22013-000229	Remote Controller	1	Not shown in Explosion view
28	A1101-009034	Indoor Carton	1	
29	A1102-000003	Left Foaming	1	
30	A1102-000004	Right Foaming	1	





Outdoor Unit- RD-WZ24HSS/N1

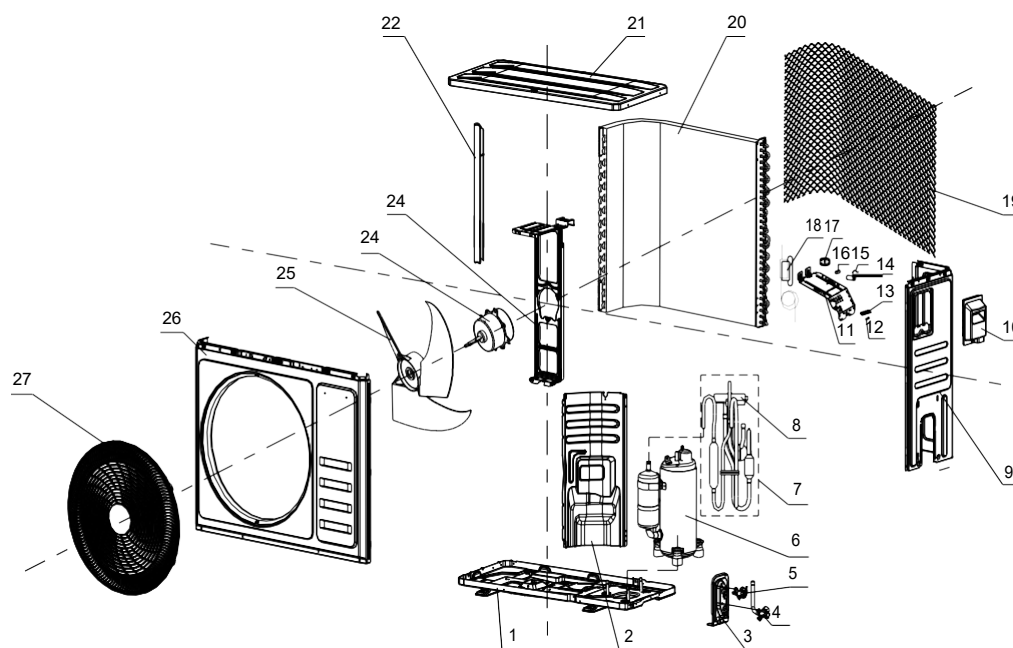


No.	Part No.	Part Name	Q'ty	Remark
1	41202-000222	Base	1	
2	41208-000157	Partition plate	1	
3	41204-000018	Valve Supporter	1	
4	92007-001045	Three-way Valve	1	
5	92008-000024	Two-way Valve	1	
6	92014-000204	Compressor	1	
7	92007-005679	4-way Valve Assembly	1	
8	92008-000193	4-way Valve	1	
9	41205-000074	Right Plate	1	
10	41201-000029	Electrical Box Cover	1	
11	41211-000053	Electrical Parts Fixing Plate	1	
12	42001-000106	Cable Clamp	1	
14	11304-100010	Terminal	1	
15	22003-000008	Compressor Capacitor	1	
16	42001-000030	Capacitor Strip	1	
17	10303-100021	Fan Motor Capacitor	1	
18	22008-000003	AC Contactor	1	
19	92007-005694	Capillary Assembly	1	
20	42011-000187	Grille	1	Optional
21	92011-005162	Condenser	1	
22	41207-000028	Top Cover	1	
23	41205-000135	Left Grille Supporter	1	
24	41203-000049	Outdoor Motor Supporter	1	
25	22001-000088	Outdoor Motor	1	
26	42004-000105	Propeller Fan	1	
27	41206-000047	Front Plate	1	
28	42011-000085	Fan Guard	1	
29	A1201-010761	Cabinet Carton	1	Not shown in Explosion view
30	41110-000204	Upper Foaming	1	
31	A1202-000030	Base Forming	1	
32	A1201-010791	Base Carton	1	

5. Disassembly IDU & ODU

5.1. IDU Disassembly

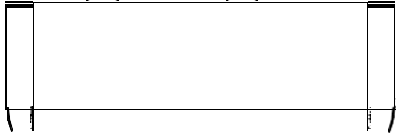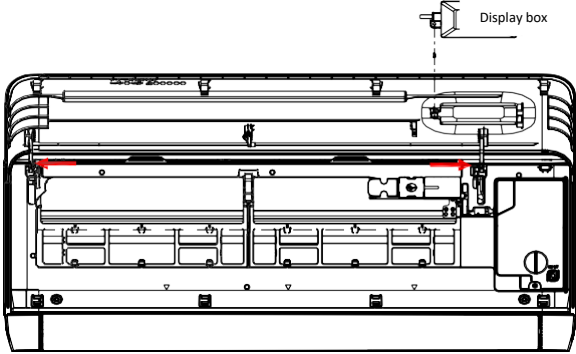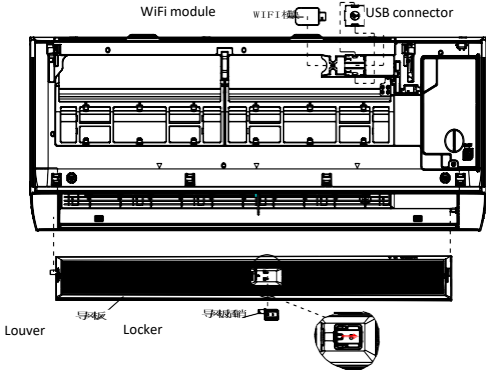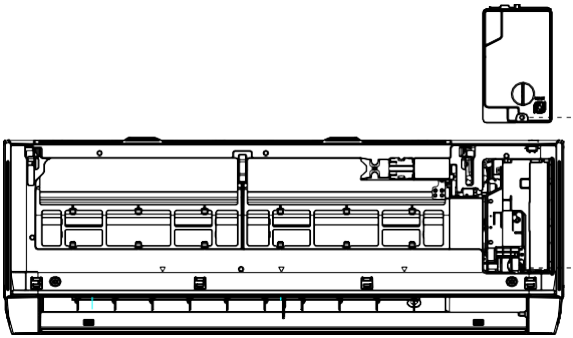
Steps	Reference photo
1. Before disassembly	
The original status.	
2. Disassemble <u>Front Panel</u>, <u>Display Board</u>.	
<p>A. Open front panel.</p> <p>B. Remove one screw and take the display box out from panel.</p> <p>C. Release panel axis which shown in red arrows out from mid frame and take the panel out.</p>	
3. Remove the <u>Louver</u> and <u>Wi-Fi Module</u>.	
<p>A. Unlock the louver lockers (clip), bend the louver slightly by hands and remove it out from mid frame. (Please keep the locker on louver).</p> <p>B. Remove the WiFi module leftwards slightly from unit.</p> <p>C. Remove the WiFi fixed cover and take the USB connector out.</p>	
4. Remove the <u>Electric Control box Cover</u>	
Unfix one screw on the cover of electric box, and remove it.	
5. Disassemble the <u>Bottom Plate</u>.	

Force apart the bottom plate left and right sides with hands towards as RED arrow, you can easily disassemble the bottom plate. (Note: there're buckles on bottom plate)

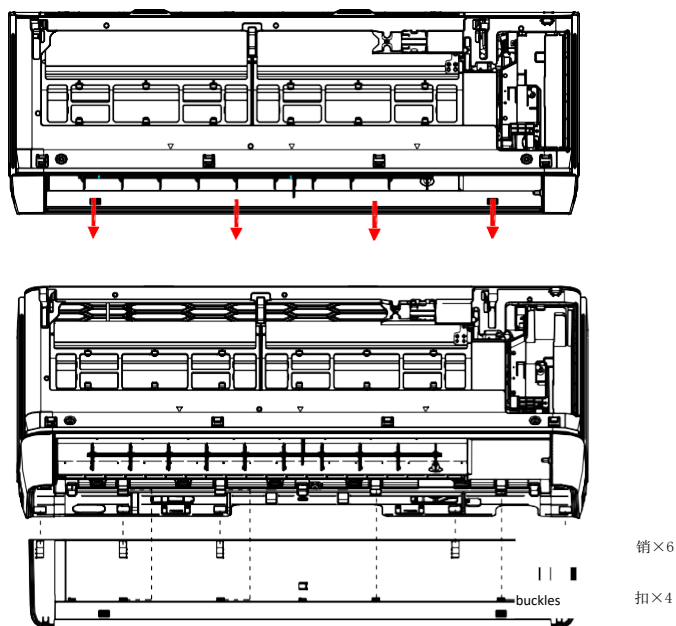


6. Disassemble the Flap Assembly

Force apart the flap assembly from base plate, you can take the it out.
(there are hooks to lock flap assembly with base plate.)

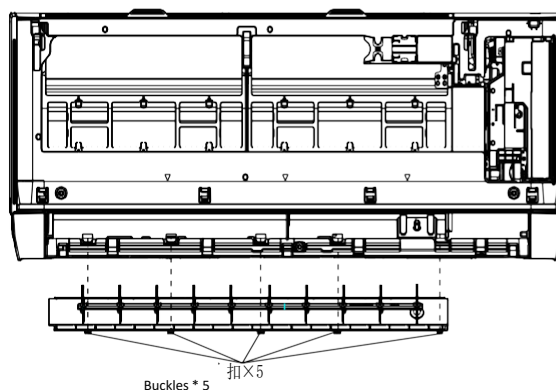


7. Remove the Filter Assembly

There are 2 buckles on filter assembly, bring it upwards slightly by hands to take it out from unit.

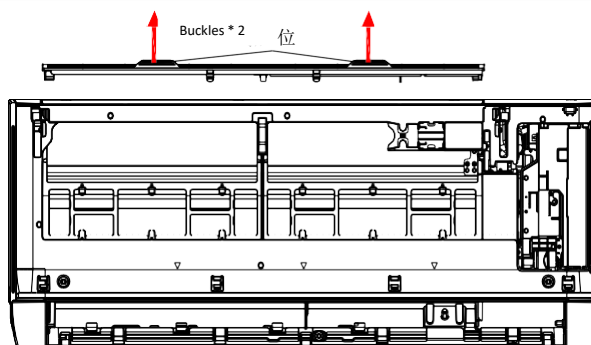


8. Disassemble the Mid Frame

- A. unfix 2 screws between mid frame and base plate.
- B. Apart 4 buckles upside mid frame from base plate.
- C. Apart air outlet the upper side and lower side hooks from base plate shown as picture.
- D. Take the mid frame out from base plate.

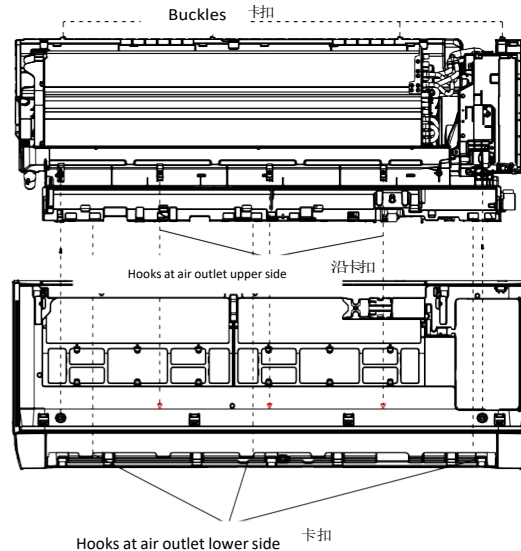


9. Disassemble the Electric Control Box

- A. Unfix screws btw electric box and base plate. And take the electric box out.

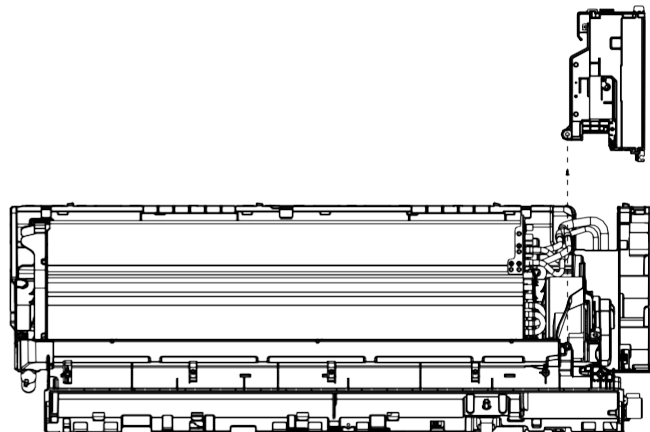


10. Remove Mounting Plate and the Pipes Cover.

- A. Unfix screw btw mounting plate and base plate.
- B. Press buckles shown as RED arrow, you can loose the mounting plate from unit base.
- C. Press pipes cover on locker points and force upwards by hand to take the cover out from base.

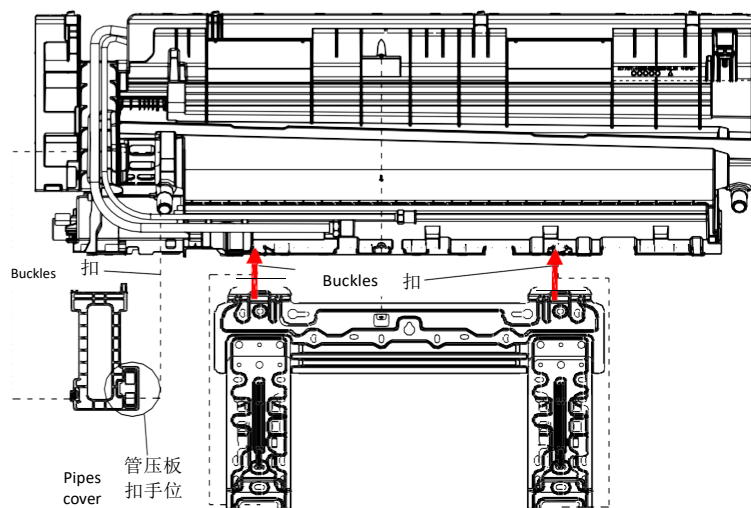


11. Disassemble Evaporator (EVP).

- A. Unfix screw btw EVP and base.
- B. Loose the EVP left locker with base, you can raise up EVP left side.
- C. When raise EVP left side up, along with the EVP right side loosen accordingly.

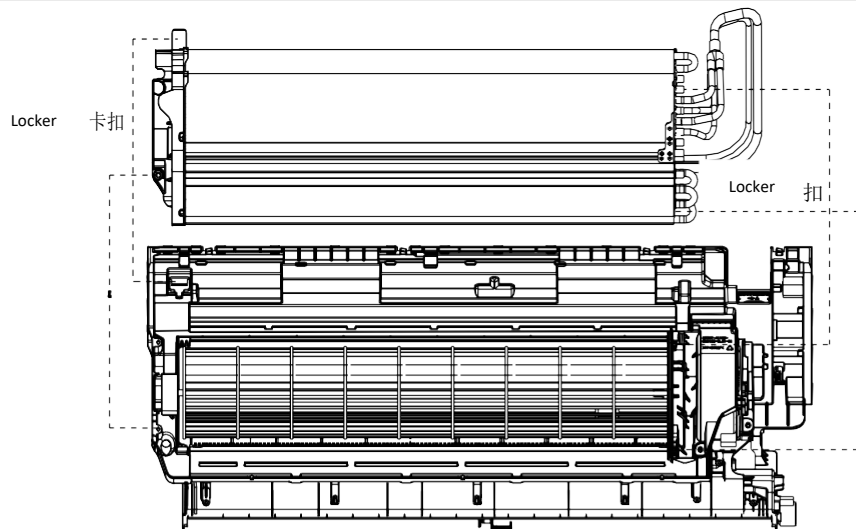


12. Disassemble the Motor Cover.

Unfix 2 screws btw motor cover and base, you can take the cover out.

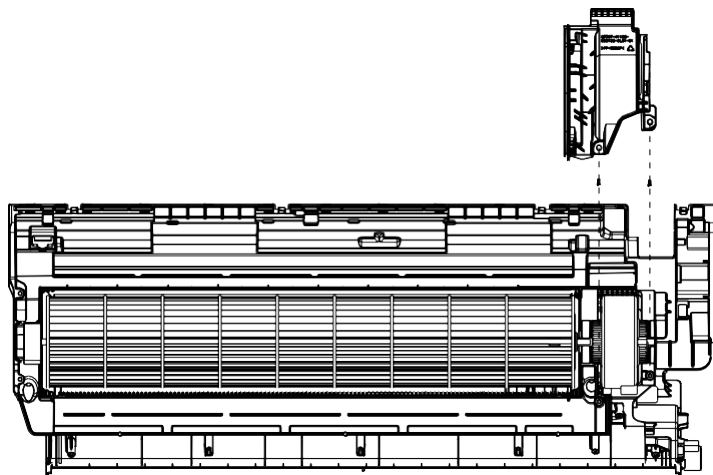


13. Take the Cross Fan and fan Motor out.

After remove the motor cover, you can take both the cross fan and motor out in the same time.



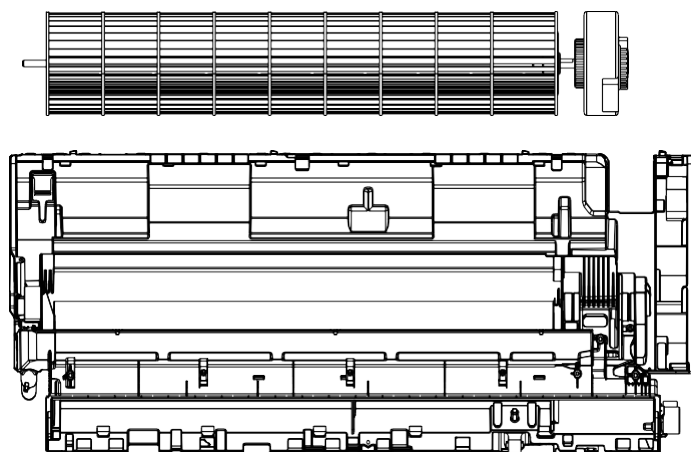


14. Disassemble Cross Fan and Motor.

Unfix the lock screw btw cross fan and motor, you can separate the both parts.

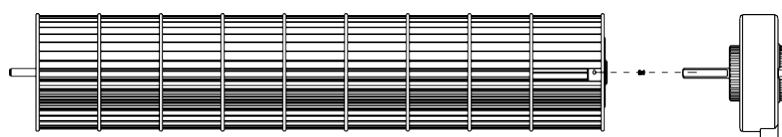


5.2 ODU Assembly

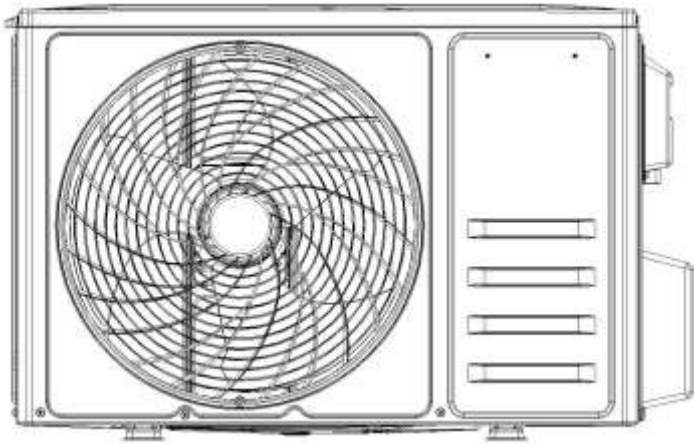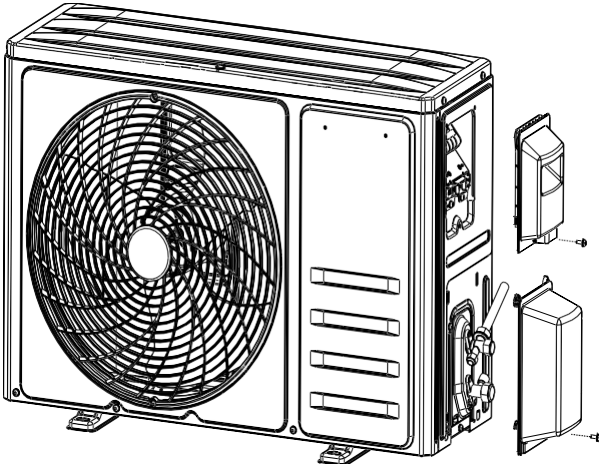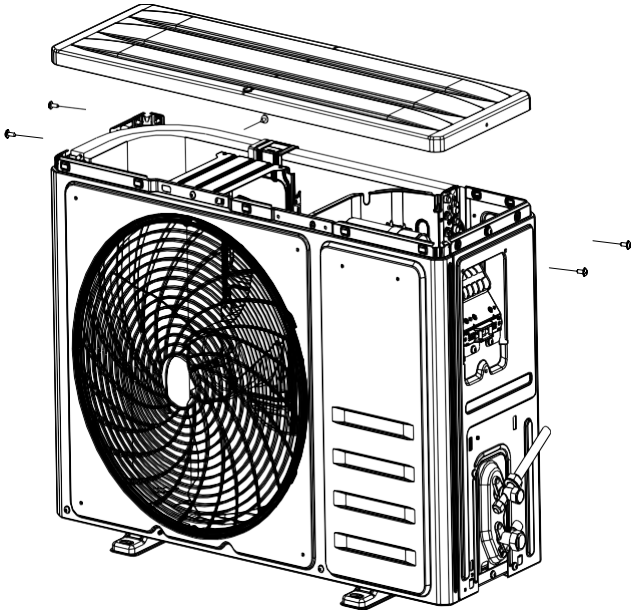Step	Reference picture
Before disassembly	
1: Remove the <u>PCB Cover</u> , <u>Valve Cover</u> and <u>Top Cover</u>	
<p>A</p> <p>1). Unfix one screw on the PCB cover, you can take the cover out from unit.</p> <p>2). Unfix one screw on the valve cover, you can take it out easily.</p>	
<p>B</p> <p>Unfix screws btw the top cover with front panel, left and right plate, then you can take the top cover out.</p>	

2: Disassemble the Fan Guard and Front Panel


A

1). Unfix screw btw fan guard and front panel, and take the fan guard out.

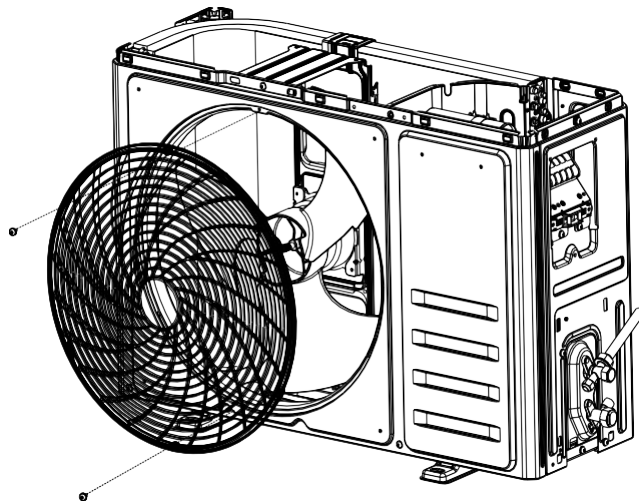


B

2). Unfix screws btw front panel and fan motor supporter, ODU mid separate plate & base plate, uplift front panel you can take it out from unit.

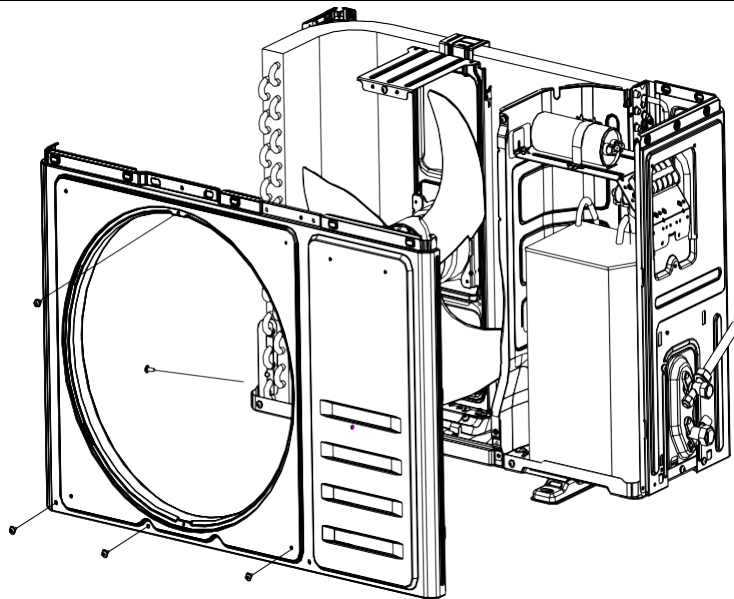
**3: Disassemble the Left and Right side Plate**

A

Unfix screws btw Right Plate and the Electric Box assembly, Valve Plate, Base Plate, then you can take the Right plate out.

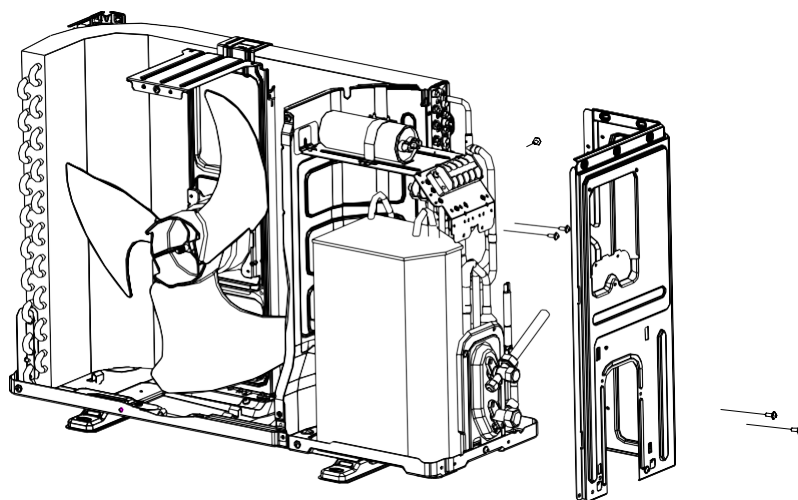


B
Unfix screws btw left plate, base plate and condenser plate, you can take the left plate out.

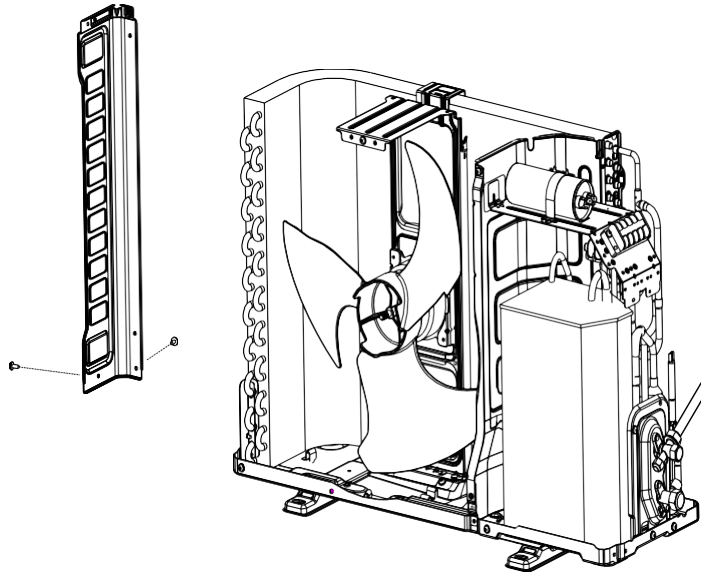


4: Disassemble the Axis Fan Blade

A
Unscrew the fan blade nut, and take the blade out.

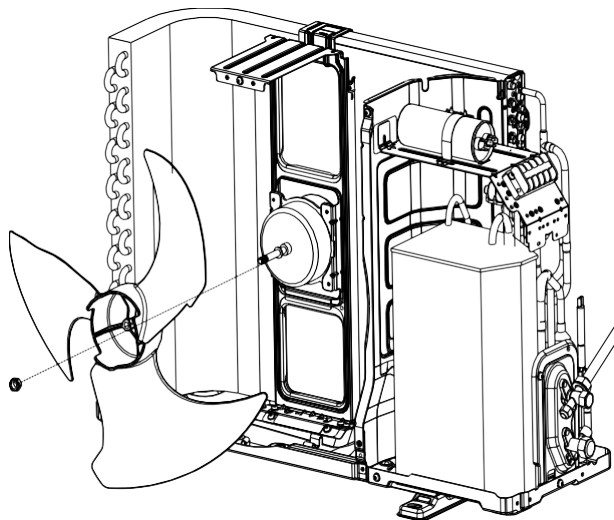

5: Disassemble the Electric Box


Unfix screw btw Electric Box and motor supporter etc. loosen the wiring clamp, then you can take the control box out.

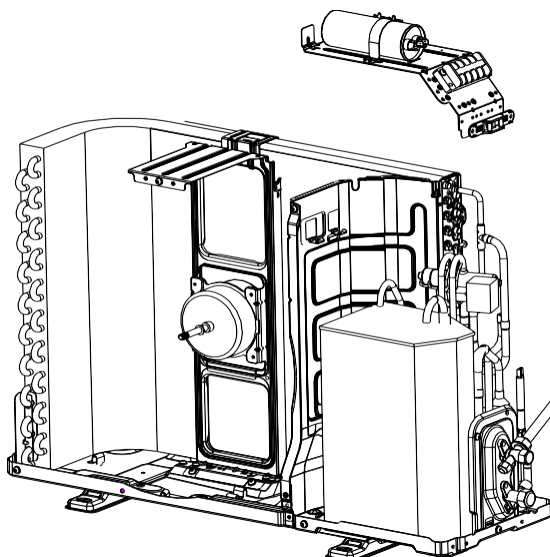


6: Take out the Noise Cotton

A

Shown as picture to take the cotton out.

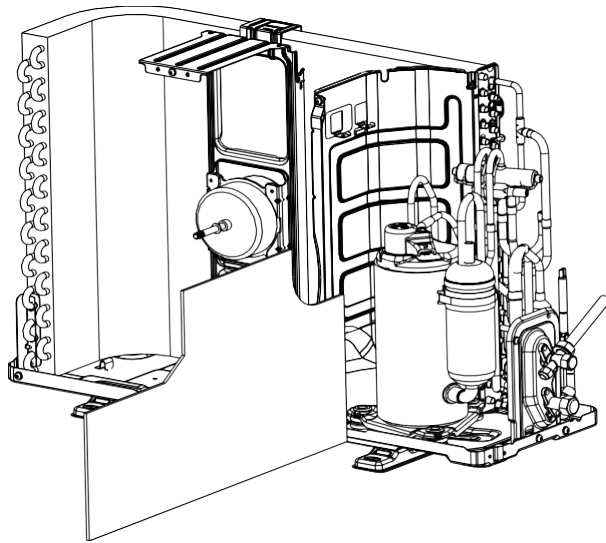
**7: Disassemble the Separate Plate**

Unfix the screw btw separate plate and unit, and take it out.

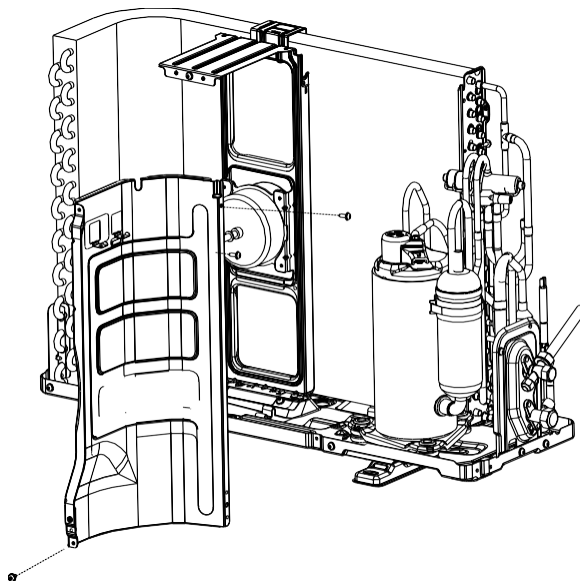**8: Disassemble the 2 and 3-way Valve**


Unfix screw btw Valve plate and base, you can take the 2-way and 3-way valve out by welding.

Note:
1). The welding can only place while no gas in the unit.
2). Pay attention to the fire to prevent any injury.

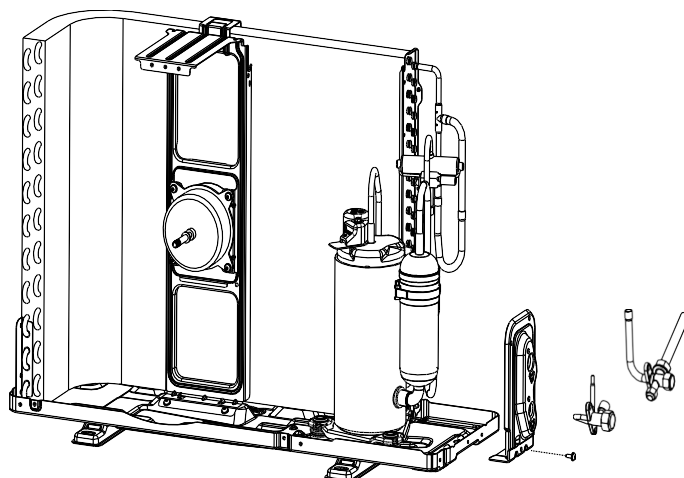


9: Disassemble the 4-way Valve Assembly

Take the 4-way valve out from system by welding. Make sure no hurt to the compressor and nameplate, etc.

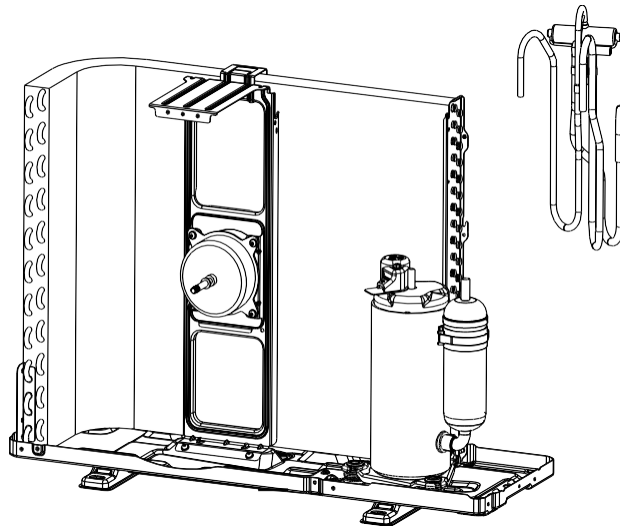
**10: Disassemble the Compressor.**

Unscrew the nuts and take the compressor out.

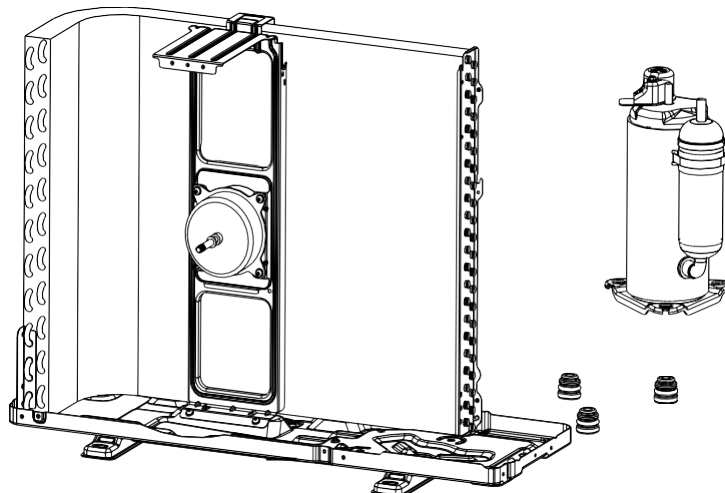**11: Remove the Fan Motor and motor Supporter.**

Unfix screws btw fan motor with supporter, and supporter with base plate.

Note:
Pay attention to the motor wiring, it can't be taken out by force.

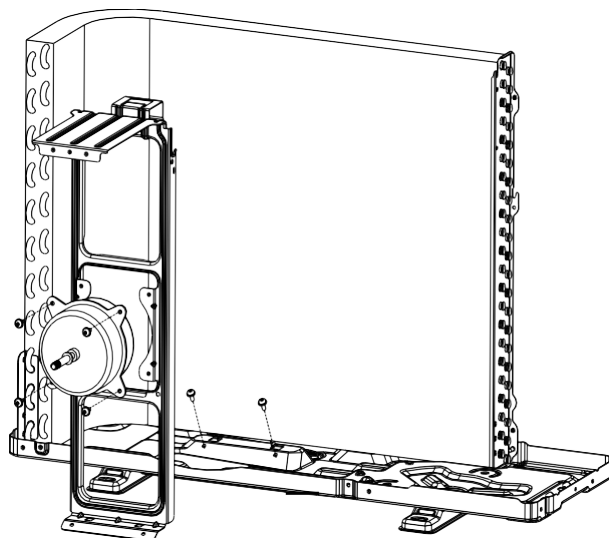

APPENDIX


Appendix 1 The comparison table of Celsius-Fahrenheit temperature

Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)
61	60.8	16	69/70	69.8	21	78/79	78.8	26
62/63	62.6	17	71/72	71.6	22	80/81	80.6	27
64/65	64.4	18	73/74	73.4	23	82/83	82.4	28
66/67	66.2	19	75/76	75.2	24	84/85	84.2	29
68	68	20	77	77	25	86	86	30

Appendix 2 The Pipe length and Gas charging

Connecting pipes size and length for installation

Model	Pipe size(Inch)	
	Liquid	Gas
RD-WZ07HSS/N1	1/4	3/8
RD-WZ09HSS/N1	1/4	3/8
RD-WZ12HSS/N1	1/4	3/8
RD-WZ18HSS/N1	1/4	1/2
RD-WZ24HSS/N1	1/4	5/8

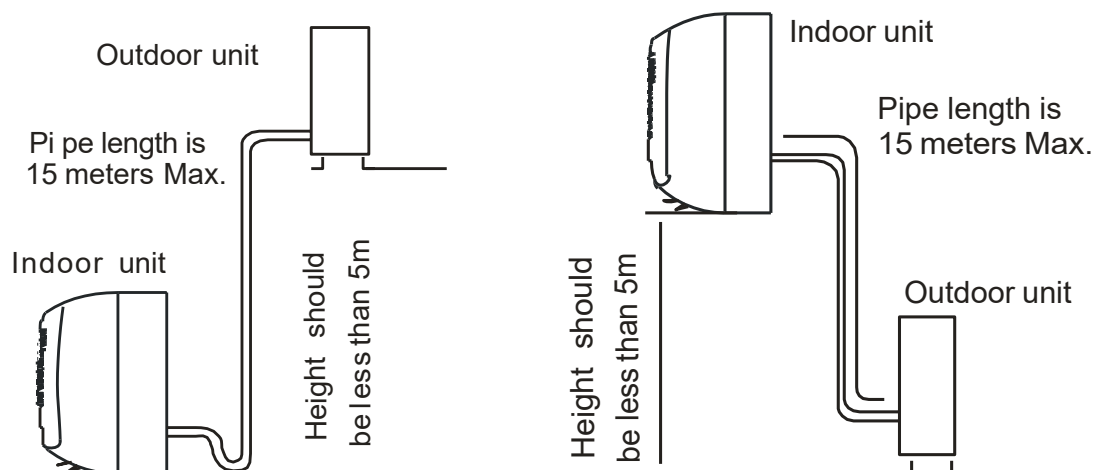


Mode	Standard length (m/inch)	Refrigerant piping Max. length (m/inch) A	Additional refrigerant charging: $Xg = B * (A - 5m)$ B
RD-WZ07HSS/N1	5	15	20g/m
RD-WZ09HSS/N1	5	15	20g/m
RD-WZ12HSS/N1	5	15	20g/m
RD-WZ18HSS/N1	5	15	30g/m
RD-WZ24HSS/N1	5	15	30g/m

Appendix 3 Pipes Flaring

Main cause for gas leakage is due to defect in flaring work. Carry out correct flaring work in the following procedure.


A. Cut the pipes and the cable.

- 1) Use the piping kit accessory or the pipes purchased locally.
- 2) Measure the distance between the indoor and the outdoor unit.
- 3) Cut the pipes a little longer than measured distance.
- 4) Cut the cable 1.5m longer than the pipe length.

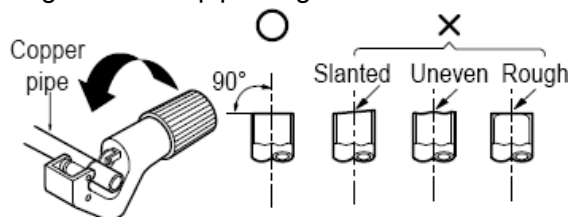

B. Burrs removal

- 1) Completely remove all burrs from the cut cross section of pipe/tube.
- 2) Put the end of the copper tube/pipe in a down ward direction as you remove burrs in order to avoid dropping burrs into the tubing.

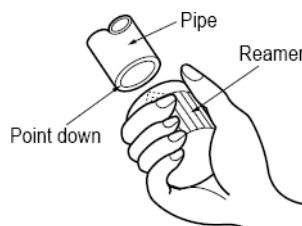


C. Flaring work

- Carry out flaring work using flaring tool as shown below.


Outside diameter		A
mm	inch	mm
ø6.35	1/4	1.0~1.3
ø9.52	3/8	0.8~1.0
ø12.7	1/2	0.5~0.8
ø15.88	5/8	0.5~0.8

Firmly hold copper pipe in a die in the dimension shown in the table above.

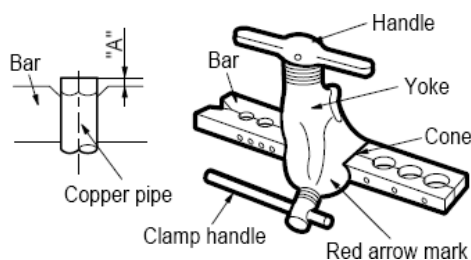

D. Check

- 1) Compare the flared work with figure below.
- 2) If flare is noted to be defective, cut off the flared section and do flaring work again.

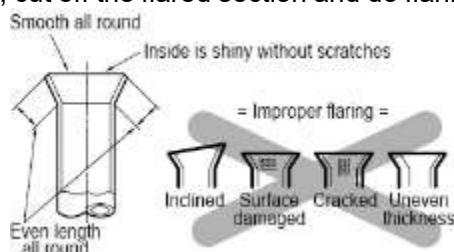


Appendix 4 THERMISTOR TEMPERATURE CHARACTERISTICS

1). Indoor unit and outdoor exchange temperature and outside air temperature sensor temperature characteristics

TEMP. (°C)	Resistance (k Ohm)	Voltage of resistance	TEMP. (°C)	Resistance (k Ohm)	Voltage of resistance	TEMP. (°C)	Resistance (k Ohm)	Voltage of resistance
-30	63.513	4.628	15	7.447	2.968	60	1.464	1.115
-29	60.135	4.609	16	7.148	2.918	61	1.418	1.088
-28	56.956	4.589	17	6.863	2.868	62	1.374	1.061
-27	53.963	4.568	18	6.591	2.819	63	1.331	1.035
-26	51.144	4.547	19	6.332	2.769	64	1.290	1.009
-25	48.488	4.524	20	6.084	2.720	65	1.250	0.984
-24	45.985	4.501	21	5.847	2.671	66	1.212	0.960
-23	43.627	4.477	22	5.621	2.621	67	1.175	0.936
-22	41.403	4.452	23	5.404	2.572	68	1.139	0.913
-21	39.305	4.426	24	5.198	2.524	69	1.105	0.890
-20	37.326	4.399	25	5.000	2.475	70	1.072	0.868
-19	35.458	4.371	26	4.811	2.427	71	1.040	0.847
-18	33.695	4.343	27	4.630	2.379	72	1.009	0.825
-17	32.030	4.313	28	4.457	2.332	73	0.979	0.805
-16	30.458	4.283	29	4.292	2.285	74	0.950	0.785
-15	28.972	4.252	30	4.133	2.238	75	0.922	0.765
-14	27.567	4.219	31	3.981	2.192	76	0.895	0.746
-13	26.239	4.186	32	3.836	2.146	77	0.869	0.728
-12	24.984	4.152	33	3.697	2.101	78	0.843	0.710
-11	23.795	4.117	34	3.563	2.057	79	0.819	0.692
-10	22.671	4.082	35	3.435	2.012	80	0.795	0.675
-9	21.606	4.045	36	3.313	1.969	81	0.773	0.658
-8	20.598	4.008	37	3.195	1.926	82	0.751	0.641
-7	19.644	3.969	38	3.082	1.883	83	0.729	0.625
-6	18.732	3.930	39	2.974	1.842	84	0.709	0.610
-5	17.881	3.890	40	2.870	1.800	85	0.689	0.595
-4	17.068	3.850	41	2.770	1.760	86	0.669	0.580
-3	16.297	3.808	42	2.674	1.720	87	0.651	0.566
-2	15.565	3.766	43	2.583	1.681	88	0.633	0.552
-1	14.871	3.723	44	2.494	1.642	89	0.615	0.538
0	14.212	3.680	45	2.410	1.604	90	0.598	0.525
1	13.586	3.635	46	2.328	1.567	91	0.582	0.512
2	12.991	3.590	47	2.250	1.530	92	0.566	0.499
3	12.426	3.545	48	2.174	1.495	93	0.550	0.487
4	11.889	3.499	49	2.102	1.459	94	0.535	0.475
5	11.378	3.452	50	2.032	1.425	95	0.521	0.463
6	10.893	3.406	51	1.965	1.391	96	0.507	0.452
7	10.431	3.358	52	1.901	1.357	97	0.493	0.441
8	9.991	3.310	53	1.839	1.325	98	0.480	0.430
9	9.573	3.262	54	1.779	1.293	99	0.467	0.419
10	9.174	3.214	55	1.721	1.262	100	0.455	0.409
11	8.795	3.165	56	1.666	1.231			
12	8.433	3.116	57	1.613	1.201			
13	8.089	3.067	58	1.561	1.172			
14	7.760	3.017	59	1.512	1.143			

Resistance at 25°C: 5 kΩ.

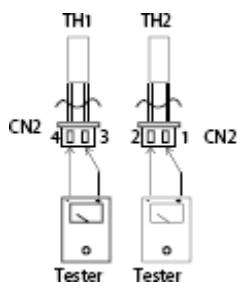

TH1: indoor room temperature sensor and outside air temperature sensor

TH2: indoor exchange temperature sensor and outside exchange temperature sensor

Before measuring resistance, disconnect connectors as shown above.


1) Outdoor unit sensor temperature characteristics

TEMP. (°C)	R min (k Ohm)	R(t) (k Ohm)	R max (k Ohm)	TEMP. (°C)	R min (k Ohm)	R(t) (k Ohm)	R max (k Ohm)	TEMP. (°C)	R min (k Ohm)	R(t) (k Ohm)	R max (k Ohm)
-30	283.3	322.9	367.7	24	19.36	20.89	22.52	78	2.563	2.654	2.745
-29	267.4	304.4	346.3	25	18.55	20	21.54	79	2.481	2.567	2.654
-28	252.5	287.1	307.4	26	17.77	19.14	20.6	80	2.402	2.484	2.567
-27	238.5	270.9	307.4	27	17.03	18.32	19.7	81	2.327	2.404	2.483
-26	225.4	255.7	289.8	28	16.32	17.55	18.85	82	2.254	2.327	2.401
-25	213.1	241.4	273.3	29	15.65	16.81	18.04	83	2.183	2.253	2.323
-24	201.5	228	257.9	30	15	16.1	17.27	84	2.115	2.182	2.248
-23	190.6	215.5	243.4	31	14.39	15.43	16.54	85	2.05	2.113	2.176
-22	180.3	203.6	229.8	32	13.81	14.79	15.34	86	1.985	2.047	2.109
-21	170.7	192.5	217	33	13.25	14.18	15.17	87	1.922	1.983	2.045
-20	161.6	182.1	205	34	12.72	13.6	14.54	88	1.861	1.922	1.983
-19	153.1	172.3	193.7	35	12.21	13.05	13.93	89	1.802	1.862	1.923
-18	145	163.1	183.2	36	11.72	12.52	13.36	90	1.746	1.805	1.865
-17	137.5	154.4	173.2	37	11.26	12.01	12.81	91	1.692	1.75	1.809
-16	130.3	146.2	163.9	38	10.82	11.53	12.29	92	1.639	1.697	1.755
-15	123.6	138.5	155.1	39	10.29	11.07	11.78	93	1.589	1.646	1.703
-14	117.3	131.3	146.8	40	9.986	10.63	11.31	94	1.54	1.596	1.653
-13	111.3	124.4	139	41	9.6	10.21	10.85	95	1.493	1.549	1.604
-12	105.6	118	131.7	42	9.231	9.813	10.42	96	1.448	1.502	1.558
-11	100.3	111.9	124.7	43	8.878	9.43	10	97	1.404	1.458	1.512
-10	95.24	106.2	118.2	44	8.54	9.064	9.612	98	1.362	1.415	1.469
-9	90.49	100.8	112.1	45	8.217	8.714	9.233	99	1.321	1.373	1.426
-8	85.99	95.68	106.3	46	7.908	8.38	8.872	100	1.284	1.335	1.387
-7	81.75	90.86	100.8	47	7.612	8.06	8.526	101	1.245	1.296	1.348
-6	77.74	86.31	95.74	48	7.328	7.754	8.196	102	1.209	1.258	1.309
-5	73.94	82.01	90.88	49	7.057	7.461	7.88	103	1.173	1.222	1.272
-4	70.35	77.95	86.29	50	6.797	7.18	7.578	104	1.139	1.187	1.236

-3	66.96	74.11	81.96	51	6.548	6.912	7.289	105	1.105	1.153	1.202
-2	63.74	70.48	77.87	52	6.309	6.655	7.013	106	1.073	1.12	1.168
-1	60.69	67.05	74	53	6.08	6.409	6.748	107	1.042	1.089	1.136
0	57.81	63.8	70.34	54	5.861	6.173	6.495	108	1.013	1.058	1.104
1	55.08	60.72	66.88	55	5.651	5.947	6.253	109	0.9833	1.028	1.074
2	52.49	57.81	63.61	56	5.449	5.73	6.02	110	0.9553	0.9997	1.045
3	50.03	55.05	60.52	57	5.255	5.522	5.798	111	0.9283	0.9719	1.016
4	47.71	52.44	57.59	58	5.07	5.323	5.585	112	0.9021	0.9451	0.9892
5	45.5	49.97	54.82	59	4.891	5.132	5.381	113	0.8765	0.9191	0.9626
6	43.41	47.62	52.2	60	4.72	4.949	5.101	114	0.8524	0.894	0.9367
7	41.42	45.4	49.71	61	4.556	4.774	4.997	115	0.8087	0.8595	0.9117
8	39.53	43.2	42.33	62	4.398	4.605	4.817	116	0.8059	0.8461	0.8875
9	37.74	41.29	45.12	63	4.247	4.448	4.644	117	0.7837	0.8233	0.8641
10	36.04	39.39	43.01	64	4.101	4.288	4.479	118	0.7623	0.8012	0.8413
11	34.42	37.59	41	65	3.961	4.139	4.32	119	0.7415	0.7798	0.8193
12	32.89	35.87	39.1	66	3.827	3.995	4.167	120			
13	31.43	34.25	37.29	67	3.698	3.858	4.021	121	0.702	0.7386	0.7773
14	30.04	32.71	35.58	68				122	0.6631	0.7195	0.7572
15	29.72	31.24	33.95	69				123	0.6649	0.7007	0.7378
16				70	3.339	3.476	3.616	124	0.6472	0.6824	0.7189
17				71	3.229	3.359	3.491	125	0.6301	0.6647	0.7006
18	25.13	27.26	29.55	72	3.122	3.246	3.372	126	0.6135	0.6476	0.6829
19	24.05	26.07	28.23	73	3.02	3.138	3.257	127	0.5974	0.6309	0.6657
20	23.02	24.93	26.97	74	2.921	3.033	3.146	128	0.5818	0.6148	0.649
21	22.04	23.84	25.77	75	2.827	2.933	3.04	129	0.5667	0.5991	0.6328
22	21.1	22.81	24.63	76	2.735	2.836	2.938	130	0.5521	0.5839	0.6171
23	20.21	21.83	23.55	77	2.647	2.743	2.84				

R—Resistance

Resistance at 25°C:20 kΩ

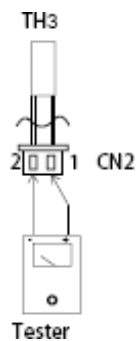

TH3: Outdoor unit discharge pipe sensor

Before measuring resistance, disconnect connectors as shown above.