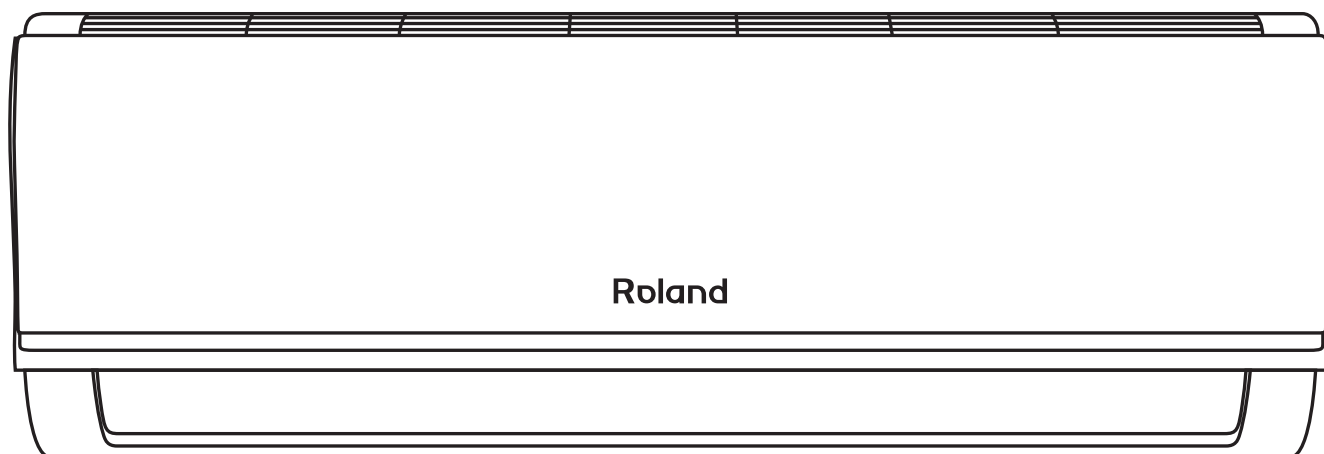


Roland

FAVORITE

ON-OFF Series

Service Manual 2019



1. Safety Precautions	1
1. In case of Accidents or Emergency	
2. Pre-Installation and Installation	
3. Operation and Maintenance	
2. Specifications.....	3
1. Model Reference	
2. Electrical Wiring Diagrams	
3. Product Features	9
1. Operation Modes and Functions	
4. Maintenance and Disassembly	14
1. Maintenance	
2. Disassembly	
5. Troubleshooting.....	57
1. Safety Caution	
2. General Troubleshooting	
3. Error Diagnosis and Troubleshooting Without Error Code	
4. Quick Maintenance by Error Code	
5. Troubleshooting by Error Code	
Appendix	76
i) Temperature Sensor Resistance Value Table for T1,T2,T3 and T4 (°C – K)	


Safety Precautions


Contents

1.	In Case of Accidents or Emergency.....	2
2.	Pre-Installation	2
3.	Operation and Maintenance	2

To prevent personal injury, or property or unit damage, adhere to all precautionary measures and instructions outlined in this manual. Before servicing a unit, refer to this service manual and its relevant sections.

Failure to adhere to all precautionary measures listed in this section may result in personal injury, damage to the unit or to property, or in extreme cases, death.

 **WARNING** indicates a potentially hazardous situation which if not avoided could result in serious personal injury, or death.

 **CAUTION** indicates a potentially hazardous situation which if not avoided could result in minor or moderate personal injury, or unit damage.

1. In case of Accidents or Emergency

WARNING

- If a gas leak is suspected, immediately turn off the gas and ventilate the area if a gas leak is suspected before turning the unit on.
- If strange sounds or smoke is detected from the unit, turn the breaker off and disconnect the power supply cable.
- If the unit comes into contact with liquid, contact an authorized service center.
- If liquid from the batteries makes contact with skin or clothing, immediately rinse or wash the area well with clean water.
- Do not insert hands or other objects into the air inlet or outlet while the unit is plugged in.
- Do not operate the unit with wet hands.
- Do not use a remote controller that has previously been exposed to battery damage or battery leakage.

CAUTION

- Clean and ventilate the unit at regular intervals when operating it near a stove or near similar devices.
- Do not use the unit during severe weather conditions. If possible, remove the product from the window before such occurrences.

2. Pre-Installation and Installation

WARNING

- Use this unit only on a dedicated circuit.
- Damage to the installation area could cause the unit to fall, potentially resulting in personal injury, property damage, or product failure.
- Only qualified personnel should disassemble, install, remove, or repair the unit.
- Only a qualified electrician should perform electrical work. For more information, contact your dealer, seller, or an authorized service center.

CAUTION

- While unpacking be careful of sharp edges around the unit as well as the edges of the fins on the condenser and evaporator.

3. Operation and Maintenance

WARNING

- Do not use defective or under-rated circuit breakers.
- Ensure the unit is properly grounded and that a dedicated circuit and breaker are installed.
- Do not modify or extend the power cable. Ensure the power cable is secure and not damaged during operation.
- Do not unplug the power supply plug during operation.
- Do not store or use flammable materials near the unit.
- Do not open the inlet grill of the unit during operation.
- Do not touch the electrostatic filter if the unit is equipped with one.
- Do not block the inlet or outlet of air flow to the unit.
- Do not use harsh detergents, solvents, or similar items to clean the unit. Use a soft cloth for cleaning.
- Do not touch the metal parts of the unit when removing the air filter as they are very sharp.
- Do not step on or place anything on the unit or outdoor units.
- Do not drink water drained from the unit
- Avoid direct skin contact with water drained from the unit.
- Use a firm stool or step ladder according to manufacturer procedures when cleaning or maintaining the unit.

CAUTION

- Do not install or operate the unit for an extended period of time in areas of high humidity or in an environment directly exposing it to sea wind or salt spray.
- Do not install the unit on a defective or damaged installation stand, or in an unsecure location.
- Ensure the unit is installed at a level position
- Do not install the unit where noise or air discharge created by the outdoor unit will negatively impact the environment or nearby residences.
- Do not expose skin directly to the air discharged by the unit for prolonged periods of time.
- Ensure the unit operates in areas water or other liquids.
- Ensure the drain hose is installed correctly to ensure proper water drainage.
- When lifting or transporting the unit, it is recommended that two or more people are used for this task.
- When the unit is not to be used for an extended time, disconnect the power supply or turn off the breaker.

Specifications

Contents

1.	Model Reference.....	4
2.	Electrical Wiring Diagrams	5
2.1	Indoor Unit.....	5
2.2	Outdoor Unit.....	7

1. Model Reference

Refer to the following table to determine the specific indoor and outdoor unit model number of your purchased equipment.

Indoor Unit Model	Outdoor Unit Model	Capacity (kW)	Power Supply
		2,2	220-240V~, 50Hz, 1Phase
FU-07HSS010/N2-IN	FU-07HSS010/N2-OUT		
		2,64	
FU-09HSS010/N2-IN	FU-09HSS010/N2-OUT		
		3,52	
FU-12HSS010/N2-IN	FU-12HSS010/N2-OUT		
		5,28	
FU-18HSS010/N2-IN	FU-18HSS010/N2-OUT		
		7,35	
FU-24HSS010/N2-IN	FU-24HSS010/N2-OUT		

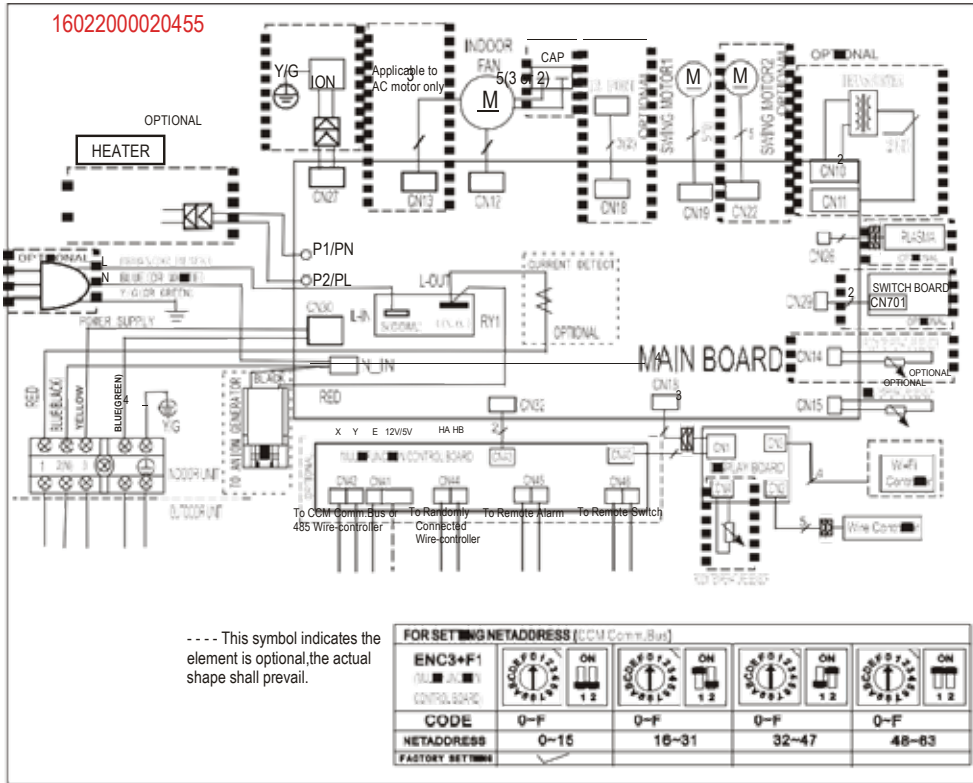
Specifications

2. Electrical Wiring Diagrams

2.1 Indoor unit

Abbreviation	Paraphrase
Y/G	Yellow-Green Conductor
ION	Positive and Negative Ion Generator
CAP	Capacitor
PLASMA	Electronic Dust Collector
to CCM Comm.Bus	Central Controller (for CAC)
X Y E	485 Communication Line
L	LIVE
N	NEUTRAL
Heater	The Electric Heating Belt of Indoor Unit
T1	Indoor Room Temperature
T2	Coil Temperature of Indoor Heat Exchanger Middle
T3	Coil Temperature of Condenser
T4	Outdoor Ambient Temperature
TH	Compressor Suction Temperature
EEV	Electric Expansive Valve
T2B	Coil Temperature of Indoor Heat Exchanger Outlet

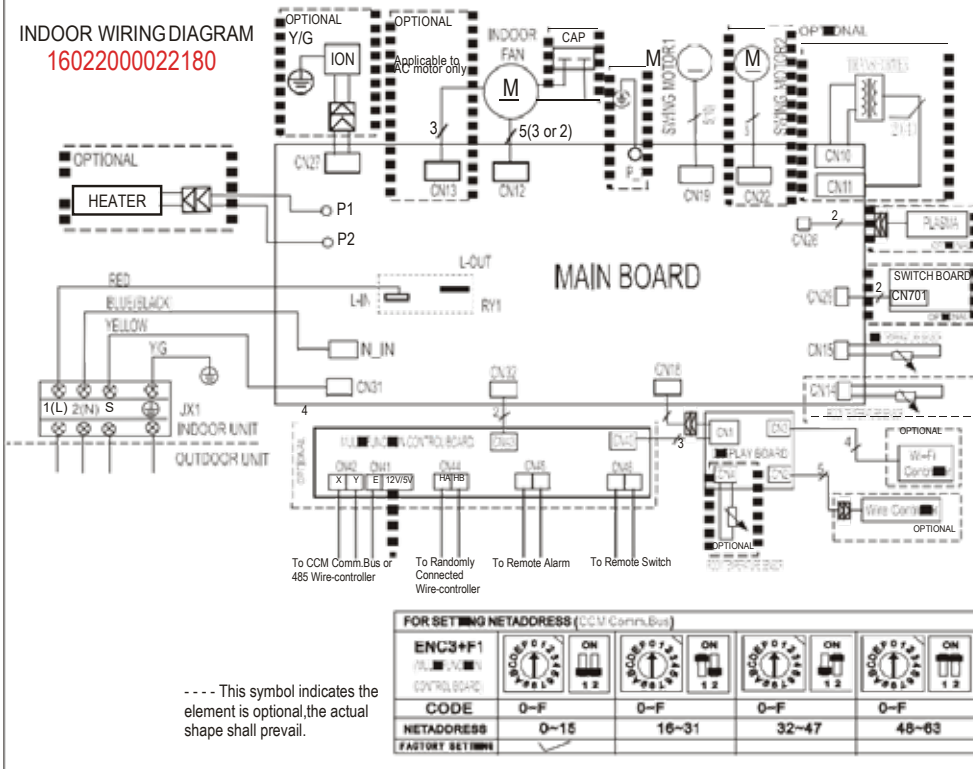
INDOOR WIRING DIAGRAM OPTIONAL

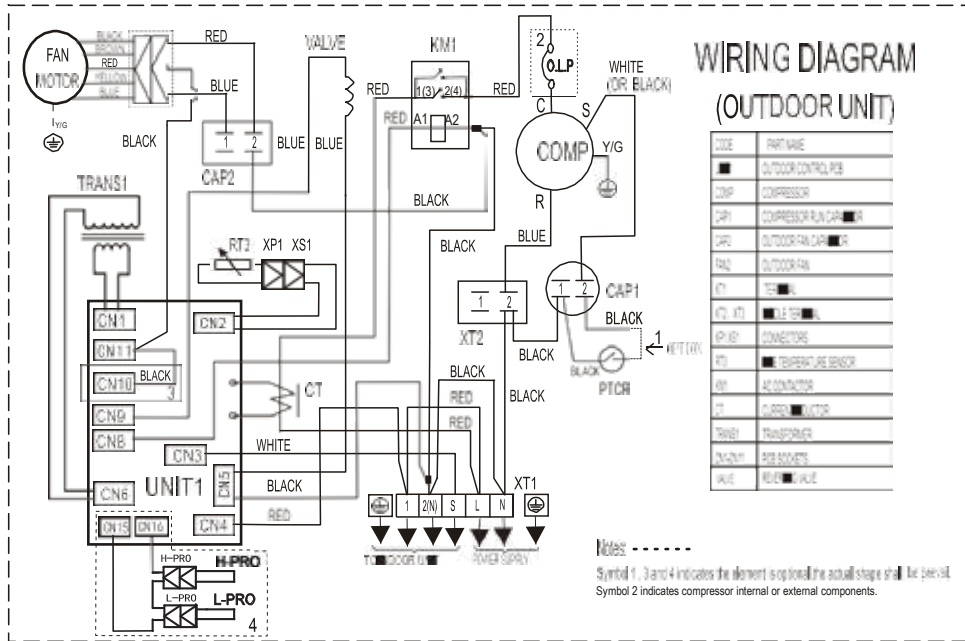


FU-24HSS010/N2-IN

INDOOR WIRING DIAGRAM

16022000022180





Product Features

Contents

1.	Operation Modes and Functions.....	10
1.1	Abbreviation	10
1.2	Safety Features	10
1.3	Digital Display	10
1.4	Fan Mode	11
1.5	Cooling Mode	11
1.6	Heating Mode	11
1.7	Auto-mode.....	11
1.8	Drying Mode	12
1.9	Forced Operation Function	12
1.10	Auto-Restart Function	12
1.11	Refrigerant Leakage Detection.....	12
1.12	8°C Heating(Optional).....	12
1.13	Self Clean(Optional).....	12
1.14	Follow Me(Optional).....	12
1.15	Information Inquiry	13

1. Operation Modes and Functions

1.1 Abbreviation

Unit element abbreviations

Abbreviation	Element
T1	Indoor room temperature
T2	Coil temperature of evaporator
T3	Coil temperature of condenser
T4	Outdoor ambient temperature

1.2 Safety Features

Compressor three-minute delay at restart

Compressor functions are delayed for up to one minute upon the first startup of the unit, and are delayed for up to three minutes upon subsequent unit restarts.

Zero crossing detection error protection

If AC can not detect zero crossing signal for 4 minutes or the zero crossing signal time interval is not correct, the unit will stop and the LED will display the failure. The correct zero crossing signal time interval should be between 6-13ms.

Automatic shutoff based on fan speed

If the indoor fan speed registers below 300RPM for 2 minutes, the unit ceases operation and the corresponding error code is displayed on the indoor unit.

Current protection

The current exceeds setting value for certain time, the compressor and outdoor fan will shut off.

Indoor fan delayed operation

- When the unit starts, the louver is automatically activated and the indoor fan will operate after a period of 4 seconds.
- If the unit is in heating mode, the indoor fan is regulated by the anti-cold wind function.

Sensor redundancy and automatic shutoff

If one temperature sensor malfunctions, the air conditioner ceases operation.

Refrigerant leakage detection

This function is active only when cooling mode is selected. It will detect if the compressor is being damaged by refrigerant leakage or by compressor overload. This is measured using the coil temperature of evaporator T2 when the compressor is in operation.

1.3 Digital Display

Unit display functions



Function	Display
Temperature	Set temperature value
Temperature (fan and Drying mode)	Room temperature
Activation of Timer ON, Fresh, Swing, Turbo, or Silent	0n (3s)
Cancellation of Timer OFF, Fresh, Swing, Turbo, or Silent	0F (3s)
Defrost	dF
Warming in heating mode	cF
Self-clean (available on select units only)	SC
Heating in room temperature under 8°C	FP

1.4 Fan Mode

When fan mode is activated:

- The outdoor fan and compressor are stopped.
- Temperature control is disabled and no temperature setting is displayed.
- The indoor fan speed can be set to high, med, low, or auto.
- The louver operations are identical to those in cooling mode.
- Auto fan: In fan-only mode, AC operates the same as auto fan in cooling mode with the temperature set at 24°C.

1.5 Cooling Mode

1.5.1 Compressor Control

When indoor room temp. T1 is lower than setting value, the compressor and outdoor fan will shut off.

1.5.2 Indoor Fan Control

In cooling mode, the indoor fan operates continuously. The fan speed can be set to high, medium, low, or auto.

1.5.3 Outdoor Fan Control

The On-off outdoor units have single fan speed. The outdoor fan will run following the compressor except when AC is in evaporator high temp. protection in heating mode, condenser high temp. protection in cooling mode, defrosting mode and the current protection.

1.5.4 Evaporator Temperature Protection

When evaporator temperature drops below a configured value, the compressor and outdoor fan ceases operations.

1.5.5 Condenser Temperature Protection (only for)

When condenser temperature is more than setting value, the compressor will stop.

1.6 Heating Mode(for heat pump models)

1.6.1 Compressor Control

When indoor room temp. T1 is higher than setting value the compressor and outdoor fan will shut off.

1.6.2 Indoor Fan Control

- When the compressor is on, the indoor fan can be set to high/med/low/auto. And the anti-cold wind function has the priority.
- The indoor fan speed will adjust according to the value

of T1-TS.

1.6.3 Outdoor Fan Control

The outdoor units have single fan speed. The outdoor fan will run following the compressor except when AC is in evaporator high temp. protection in heating mode, condenser high temp. protection in cooling mode, defrosting mode and the current protection.

1.6.4 Defrosting mode

For FU-24HSS010/N2-IN:

- The unit enters defrosting mode according to changes in the temperature value of T3 as well as the compressor running time.
- In defrosting mode, the compressor continues to run, the indoor and outdoor motor will cease operation, the defrost light of the indoor unit will turn on, and the “df” symbol is displayed.
- If any one of the following conditions is satisfied, defrosting ends and the machine switches to normal heating mode:
 - Unit runs for 10 minutes consecutively in defrosting mode.
 - $T3 \geq TC2$.

For other models:

- The unit enters the defrosting mode according to the value of temp difference between T2 and T1, and also the compressor running time.
- During the defrosting mode, the compressor keep running, indoor and outdoor motor will stop, defrost lamp of the indoor unit will be lighted “df” Will be displayed (for some units).
- If any one of the following conditions is satisfied, defrosting ends and the machine switches to normal heating mode:
 - The current of compressor maintained above $I_{DEFROST}$ for 7 seconds.
 - Times up.
 - $T2 \geq 2^{\circ}C$ after entering defrosting mode for 3 minutes.
 - $T2 - T2_{min} \geq 2^{\circ}C$ maintained 4 minutes after entering defrosting mode for 2 minutes.

1.6.5 Evaporator Temperature Protection

When the evaporator temperature exceeds a preset protection value, the compressor stops.

1.7 Auto-mode

- This mode can be selected with the remote controller.
- In auto mode, the machine selects cooling, heating, or fan-only mode on the basis of ΔT ($\Delta T = T_1 - T_s$).

ΔT	Running mode
$\Delta T > 2^\circ\text{C}$	Cooling
$-3^\circ\text{C} \leq \Delta T \leq 2^\circ\text{C}$	Fan-only
$\Delta T < -3^\circ\text{C}$	Heating*

Heating*: In auto mode, cooling only models run the fan

- AC will run in auto mode in the below cases:
 - Pressing the forced auto button.
 - If AC is off, it will run in auto mode when the timer on function is active.
 - After setting the mode, AC will run in auto mode if the compressor keeps not running for certain time.

1.8 Drying mode

- The compressor is cycled running with 10 minutes on and then 5 minutes off. The indoor fan will keep running at low speed.
- In drying mode, if room temperature is lower than 10°C , the compressor will stop and not resume until room temperature exceeds 13°C .
- The evaporator anti-freezing protection is the same as that in cooling mode.

1.9 Forced operation function

- Forced cooling mode:

The compressor and outdoor fan continue to run and the indoor fan runs at low speed. After running for 30 minutes, the AC will switch to auto mode with a preset temperature of 24°C .

- Forced auto mode:

Forced auto mode operates the same as normal auto mode with a preset temperature of 24°C .

- The unit exits forced operation when it receives the following signals:
 - Switch on
 - Switch off
 - Timer on
 - Timer off
 - Changes in:
 - mode
 - fan speed
 - sleeping mode

1.10 Auto-Restart function

- The indoor unit has an auto-restart module that allows the unit to restart automatically. The module automatically stores the current settings (not including the swing setting) and, in the case of a sudden power failure, will restore those setting automatically within 3 minutes after power returns.
- If the unit was in forced cooling mode, it will run in this mode for 30 minutes and turn to auto mode with temperature set to 24°C .
- If there is a power failure while the unit is running, the compressor starts 3 minutes after the unit restarts. If the unit was already off before the power failure, the compressor starts 20 seconds after the unit restarts.

1.11 Refrigerant Leakage Detection

- With this new technology, the display area will show "EC" when the outdoor unit detects refrigerant leakage.
- When compressor is active, the value of the Coil temperature of evaporator T2 has no change or very little change.

1.12 8°C Heating(Optional)

- In heating mode, the temperature can be set to as low as 8°C , preventing the indoor area from freezing if unoccupied during severe cold weather.
- When the compressor is off, the indoor fan motor is off.

1.13 Selfclean(Optional)

- If you press "Self Clean" when the unit is in cooling or drying mode:
 - For cooling models, the indoor unit will run in low fan mode for a certain time, then ceases operation.
 - For heat pump models, the indoor unit will run in fan-only mode, then low heat, and finally in fan-only mode.
- Self Clean keeps the indoor unit dry and prevents mold growth.

1.14 Follow me(Optional)

- If you press "Follow Me" on the remote, the indoor unit will beep. This indicates the follow me function is active.
- Once active, the remote control will send a signal every 3 minutes, with no beeps. The unit automatically sets the temperature according to the measurements from the remote control.

- The unit will only change modes if the information from the remote control makes it necessary, not from the unit's temperature setting.
- If the unit does not receive a signal for 7 minutes or you press "Follow Me," the function turns off. The unit regulates temperature based on its own sensor and settings.

1.15 Information Inquiry

- To enter information inquiry status, complete the following procedure within ten seconds:

- Press LED 3 times.
- Press SWING 3 times.
- If you are successful, you will hear beeps for a certain time.
- Use the LED and SWING buttons to cycle through information displayed.
- Pressing LED will display the next code in the sequence. Pressing SWING will show the previous.
- The following table shows information codes. The screen will display this code for two seconds, then the information for 25 seconds.

Displayed code	Explanation	Displayed value	Meaning	Additional Notes
T1	Room temperature	-14—70	-14—70	1. All displayed temperatures use actual values. 2. All temperatures are displayed in °C regardless of remote used. 3. If the actual value exceeds the range, it will display the maximum value or minimum value.
T2	Indoor coil temperature			
T3	Outdoor coil temperature			

Maintenance and Disassembly

Contents

1.	Maintenance	15
1.1	First Time Installation Check	15
1.2	Refrigerant Recharge	17
1.3	Re-Installation	18
1.3.1	Indoor Unit	18
1.3.2	Outdoor Unit	20
2.	Disassembly	22
2.1	Indoor Unit	22
2.2	Outdoor Unit	34

1. Maintenance

1.1 First Time Installation Check

Air and moisture trapped in the refrigerant system affects the performance of the air conditioner by:

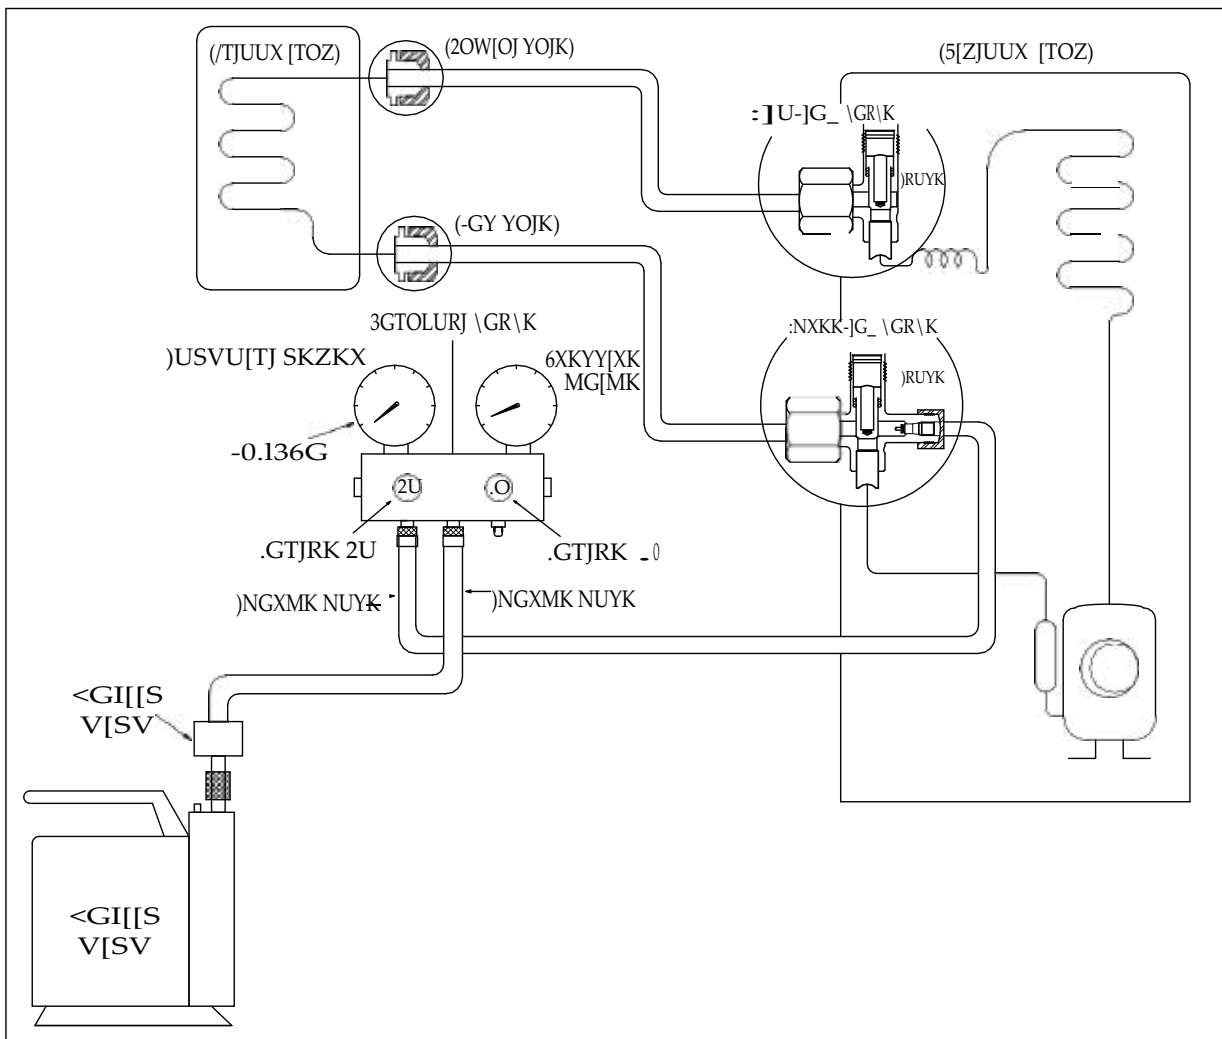
- Increasing pressure in the system.
- Increasing the operating current.
- Decreasing the cooling or heating efficiency.
- Congesting the capillary tubing due to ice build-up in the refrigerant circuit.
- Corroding the refrigerant system.

To prevent air and moisture from affecting the air conditioner's performance, the indoor unit, as well as the pipes between the indoor and outdoor unit, must be leak tested and evacuated.

Leak test (soap water method)

Use a soft brush to apply soapy water or a neutral liquid detergent onto the indoor unit connections and outdoor unit connections. If there is gas leakage, bubbles will form on the connection.

Air purging with vacuum pump

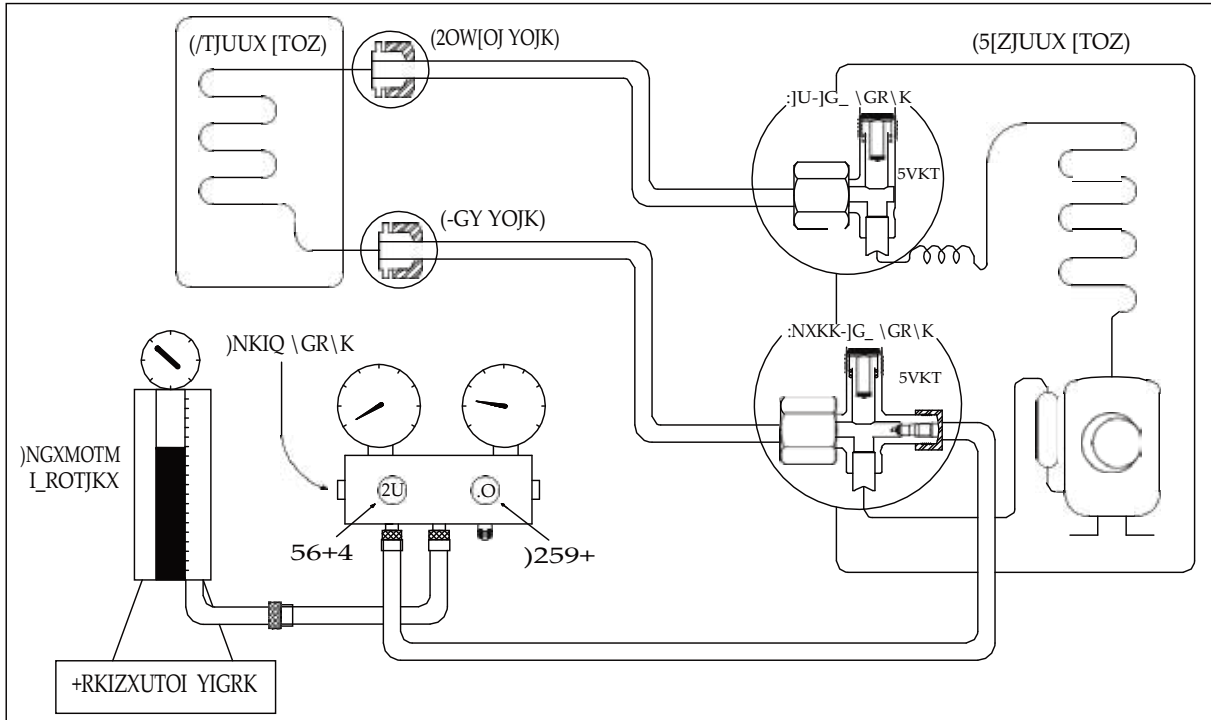


Maintenance and Disassembly

Procedure:

1. Tighten the flare nuts of the indoor and outdoor units, and confirm that both the 2- and 3-way valves are closed.
2. Connect the charge hose with the push pin of Handle Lo to the gas service port of the 3-way valve.
3. Connect the charge hose of Handle Hi connection to the vacuum pump.
4. Fully open the Handle Lo manifold valve.
5. Using the vacuum pump, evacuate the system for 30 minutes.
 - a. Check whether the compound meter indicates -0.1 MPa (14.5 Psi).
 - If the meter does not indicate -0.1 MPa (14.5 Psi) after 30 minutes, continue evacuating for an additional 20 minutes.
 - If the pressure does not achieve -0.1 MPa (14.5 Psi) after 50 minutes, check for leakage.
 - If the pressure successfully reaches -0.1 MPa (14.5 Psi), fully close the Handle Lo valve and cease vacuum pump operations.
 - b. Wait for 5 minutes then check whether the gauge needle moves after turning off the vacuum pump.
6. Loosen the flare nut of the 3-way valve for 6 or 7 seconds and then tighten the flare nut again.
 - a. Confirm the pressure display in the pressure indicator is slightly higher than the atmospheric pressure.
 - b. Remove the charge hose from the 3-way valve.
7. Fully open the 2- and 3-way valves and tighten the cap of the 3-way valve.

1.2 Refrigerant Recharge



Prior to recharging the refrigerant, confirm the additional amount of refrigerant required using the following table:

Models	Standard length	Max. elevation	Max. length	Additional refrigerant
<18k	5m (16.4ft)	8m (26.2ft)	20m (65.6ft)	20g/m (0.21oz/ft)
18k	5m (16.4ft)	10m (32.8ft)	25m (82ft)	20g/m (0.21oz/ft)
22k&24k &27k	5m (16.4ft)	10m (32.8ft)	25m (82ft)	40g/m (0.42oz/ft)

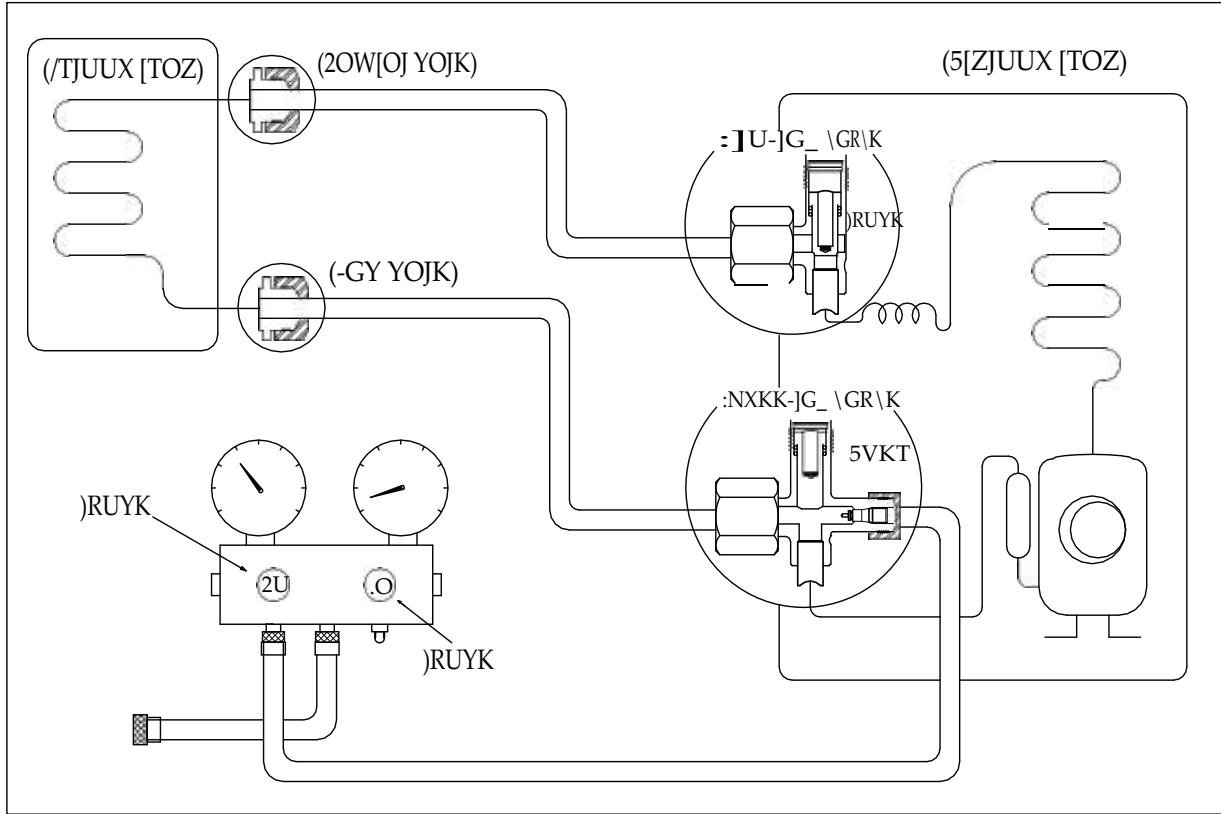
Procedure:

1. Connect the charge hose to the 3-way service port and then open the 2- and the 3-way valves.
2. Connect the charge hose to the valve at the bottom of the cylinder.
3. If the refrigerant is R410A, invert the cylinder to ensure a complete liquid charge.
4. Open the valve at the bottom of the cylinder and close the check valve on the charge set to purge the air.
5. Place the charging cylinder onto an electronic scale and record the starting weight.
6. Operate the air conditioner in cooling mode.
7. Open the valves (Low side) on the charge set and charge the system with liquid refrigerant.
8. When the electronic scale displays the correct weight (refer to the gauge and the pressure of the low side to confirm), disconnect the charge hose from the 3-way valve's service port immediately and turn off the air conditioner before disconnecting the hose.
9. Mount the valve stem caps and the service port.
10. Use a torque wrench to tighten the service port cap to a torque of 18 N.m.
11. Check for gas leakage.

1.3 Re-Installation

1.3.1 Indoor Unit

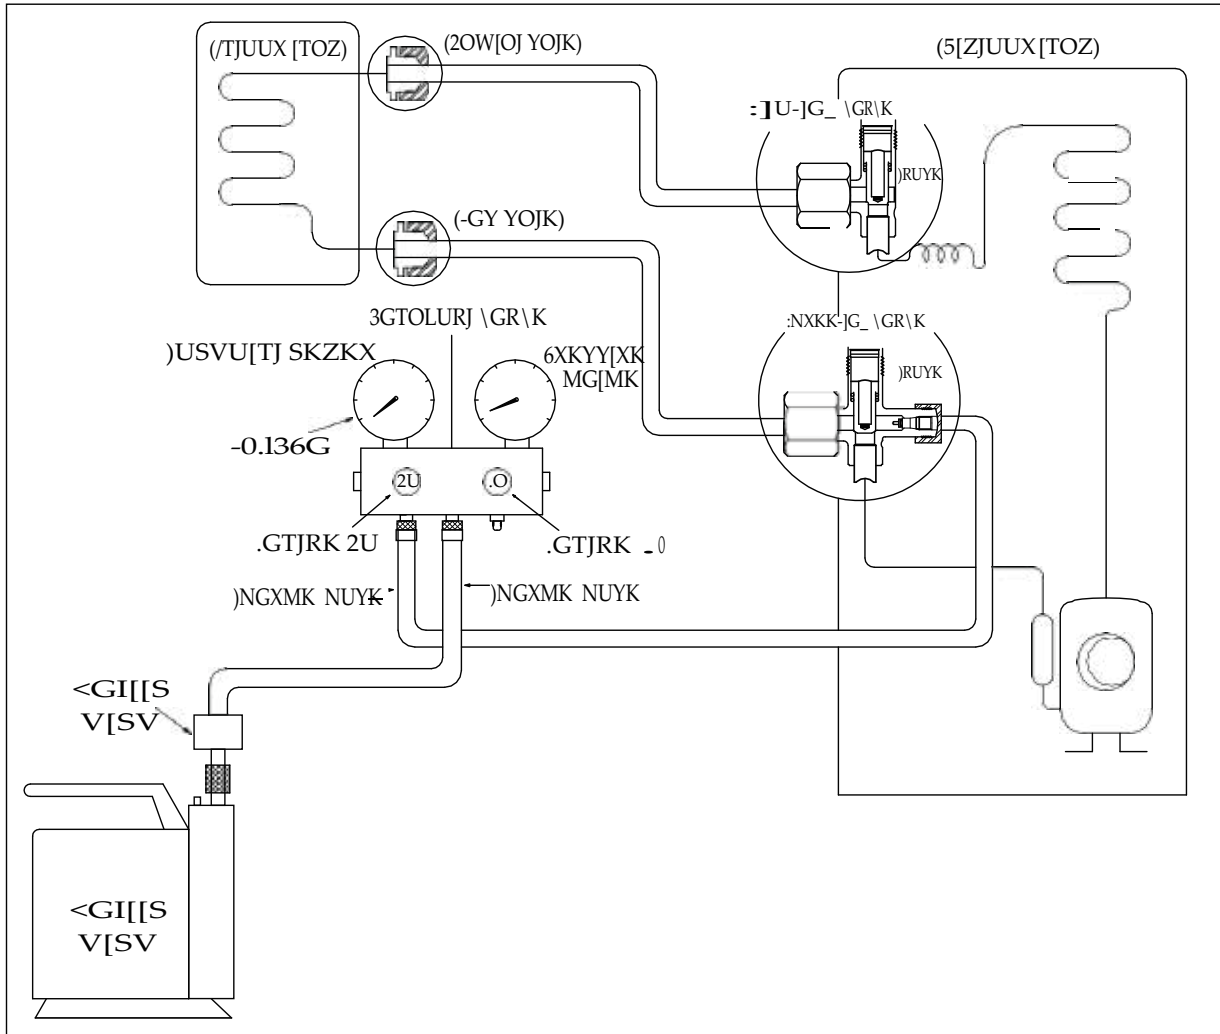
Collecting the refrigerant into the outdoor unit



Procedure:

1. Confirm that the 2- and 3-way valves are opened.
2. Remove the valve stem caps and ensure that the valve stems are opened (use as hexagonal wrench to open the valve stems).
3. Connect the charge hose with the push pin of Handle Lo to the 3-way valve's gas service port.
4. Open the Handle Lo valve of the manifold valve to purge air from the charge hose for 5 seconds and then close it quickly.
5. Close the 2-way valve.
6. Operate the air conditioner in cooling mode. Cease operations when the gauge reaches 0.1 MPa (14.5 Psi).
7. Close the 3-way valve so that the gauge rests between 0.3 MPa (43.5 Psi) and 0.5 MPa (72.5 Psi).
8. Disconnect the charge set, and tighten the 2- and 3-way valve's stem nuts (use a torque wrench to tighten the 3-way valves service port cap to a torque of 18 N.m).
9. Check for gas leakage.

Air purging with vacuum pump

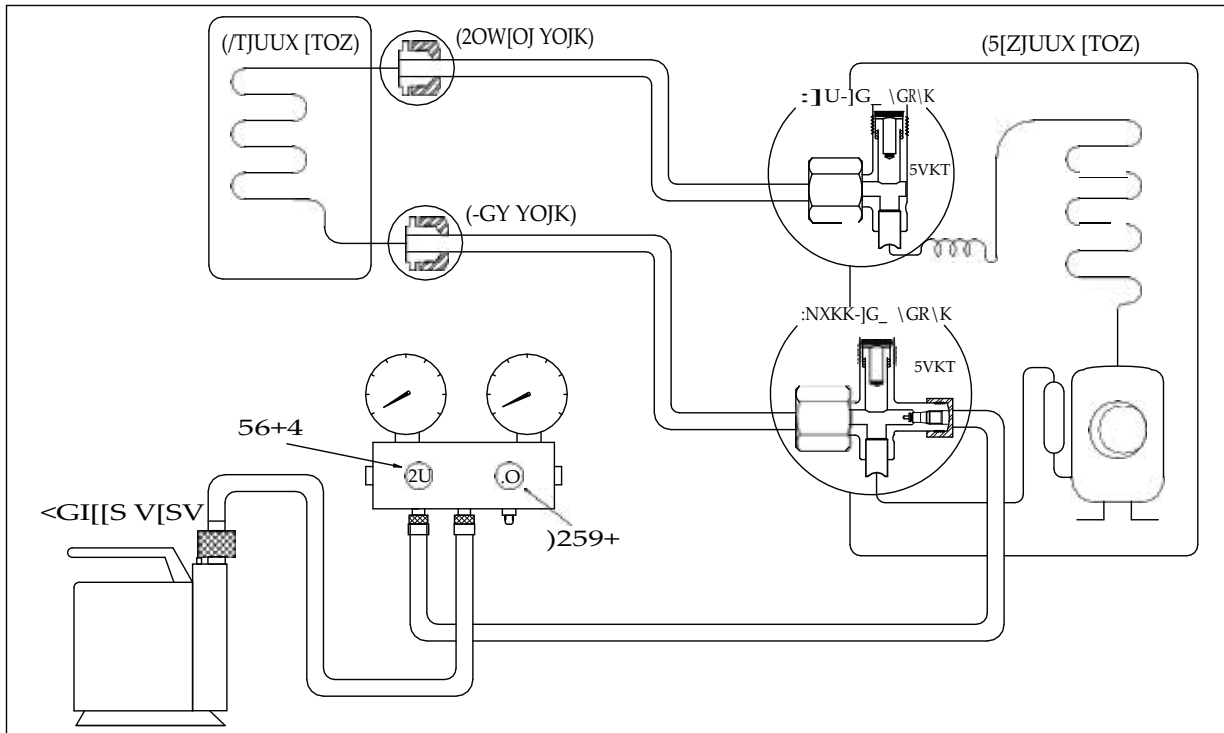


Procedure:

1. Tighten the flare nuts of the indoor and outdoor units, and confirm that both the 2- and 3-way valves are closed.
2. Connect the charge hose with the push pin of Handle Lo to the gas service port of the 3-way valve.
3. Connect the charge hose of Handle Hi connection to the vacuum pump.
4. Fully open the Handle Lo manifold valve.
5. Using the vacuum pump, evacuate the system for 30 minutes.
 - a. Check whether the compound meter indicates -0.1 MPa (14.5 Psi).
 - If the meter does not indicate -0.1 MPa (14.5 Psi) after 30 minutes, continue evacuating for an additional 20 minutes.
 - If the pressure does not achieve -0.1 MPa (14.5 Psi) after 50 minutes, check for leakage.
 - If the pressure successfully reaches -0.1 MPa (14.5 Psi), fully close the Handle Lo valve and cease vacuum pump operations.
 - b. Wait for 5 minutes then check whether the gauge needle moves after turning off the vacuum pump.
6. Loosen the flare nut of the 3-way valve for 6 or 7 seconds and then tighten the flare nut again.
 - c. Confirm the pressure display in the pressure indicator is slightly higher than the atmospheric pressure.
 - d. Remove the charge hose from the 3-way valve.
7. Fully open the 2- and 3-way valves and tighten the cap of the 3-way valve.

1.3.2 Outdoor Unit

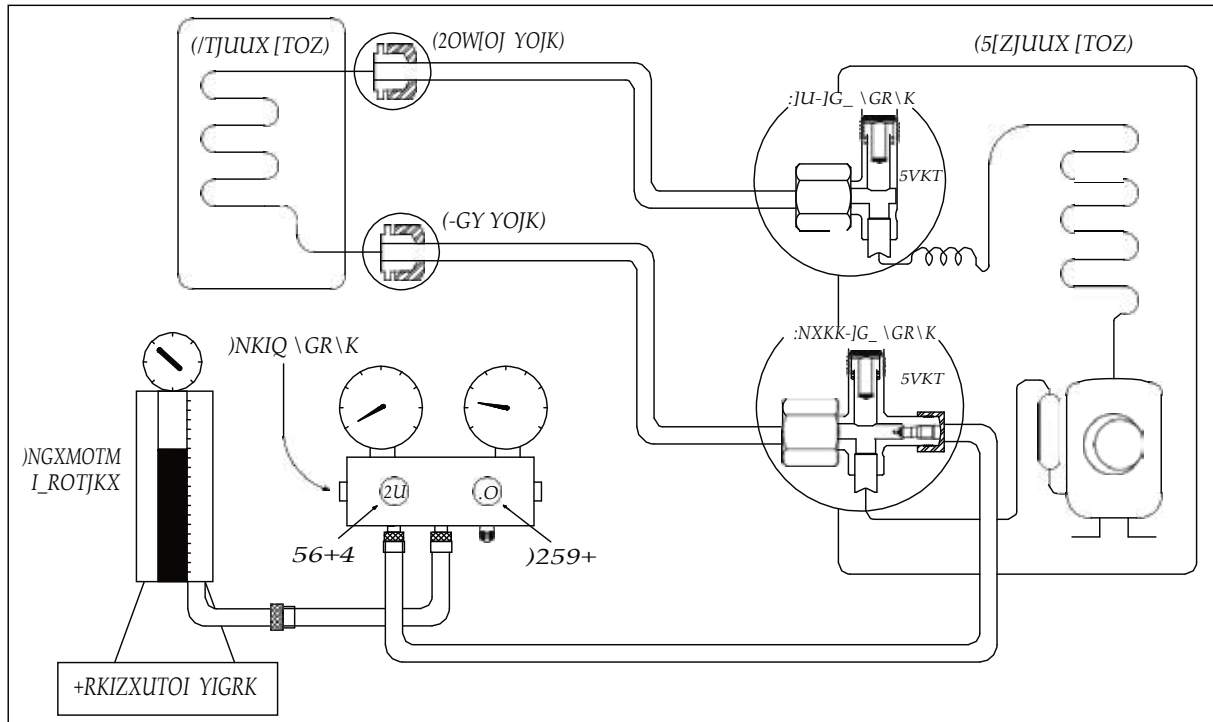
Evacuation for the whole system



Procedure:

1. Confirm that the 2- and 3-way valves are opened.
2. Connect the vacuum pump to the 3-way valve's service port.
3. Evacuate the system for approximately one hour. Confirm that the compound meter indicates -0.1 MPa (14.5Psi).
4. Close the valve (Low side) on the charge set and turn off the vacuum pump.
5. Wait a period of five minutes then check whether the gauge needle moves after turning off the vacuum pump.
6. Disconnect the charge hose from the vacuum pump.

Refrigerant charging



Procedure:

1. Connect the charge hose to the 3-way service port and then open the 2- and the 3-way valves.
2. Connect the charge hose to the valve at the bottom of the cylinder.
3. If the refrigerant is R410A, invert the cylinder to ensure a complete liquid charge.
4. Open the valve at the bottom of the cylinder and close the check valve on the charge set to purge the air.
5. Place the charging cylinder onto an electronic scale and record the starting weight.
6. Operate the air conditioner in cooling mode.
7. Open the valves (Low side) on the charge set and charge the system with liquid refrigerant.
8. When the electronic scale displays the correct weight (refer to the gauge and the pressure of the low side to confirm), disconnect the charge hose from the 3-way valve's service port immediately and turn off the air conditioner before disconnecting the hose.
9. Mount the valve stem caps and the service port.
10. Use a torque wrench to tighten the service port cap to a torque of 18 N.m.
11. Check for gas leakage.

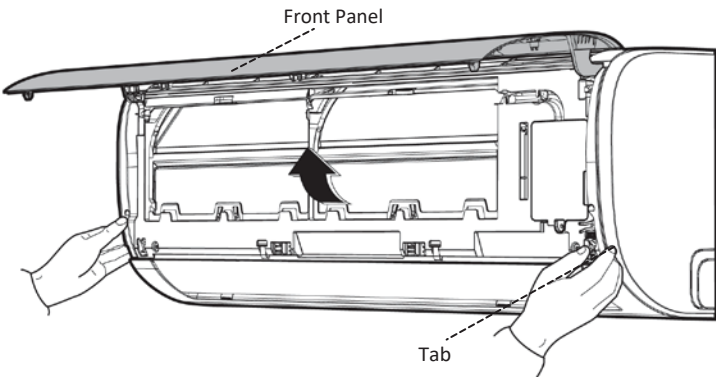
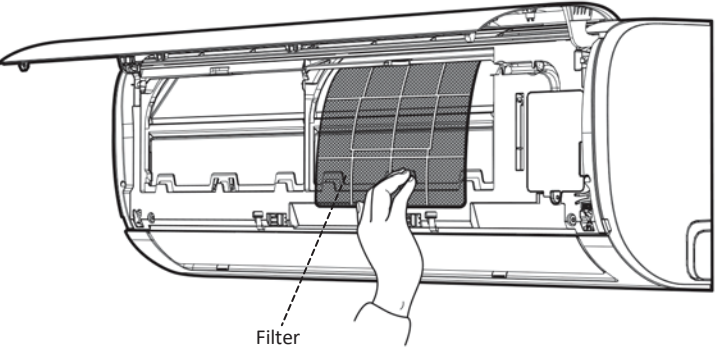
Note: 1. Mechanical connectors used indoors shall comply with local regulations.

2. When mechanical connectors are reused indoors, sealing parts shall be renewed. When flared joints are reused indoors, the flare part shall be re-fabricated.

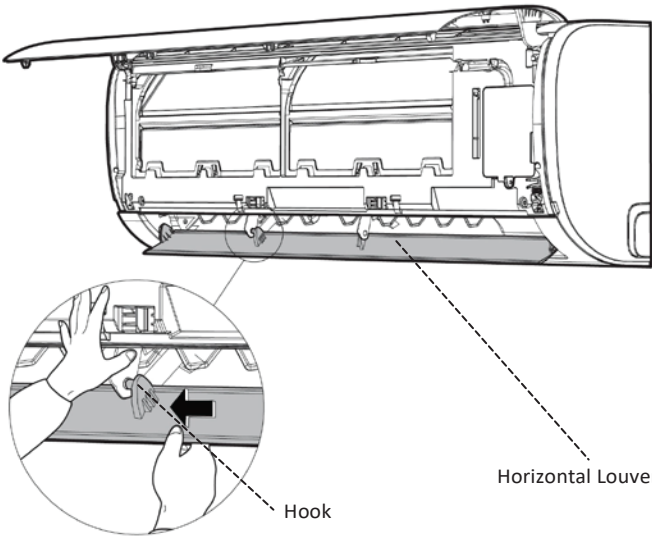
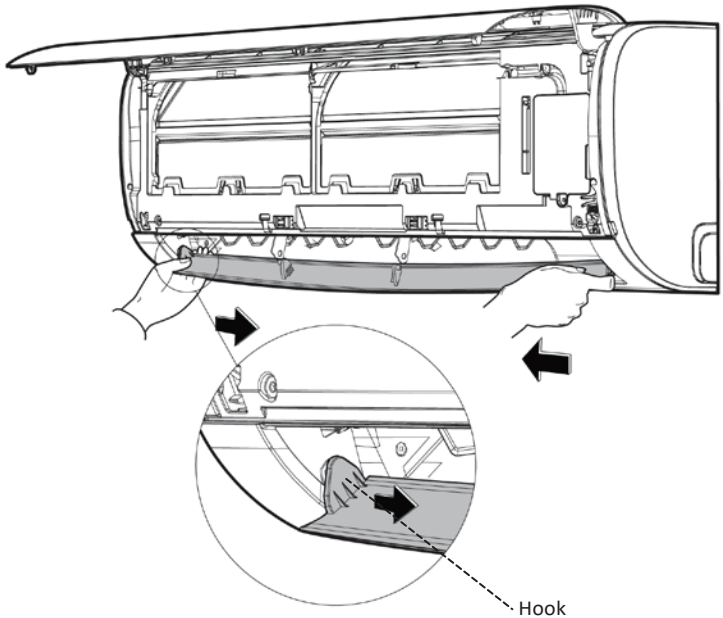
2. Disassembly

2.1 Indoor unit

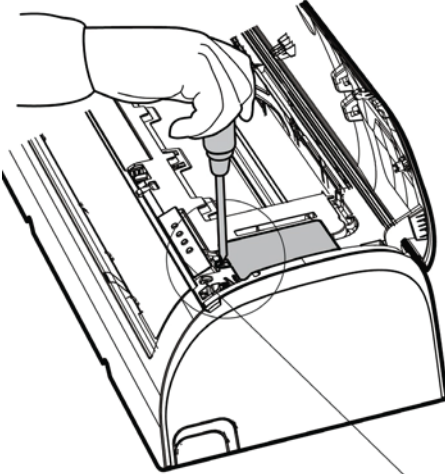
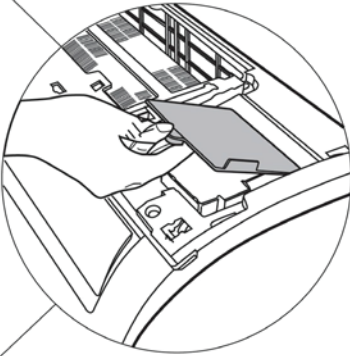

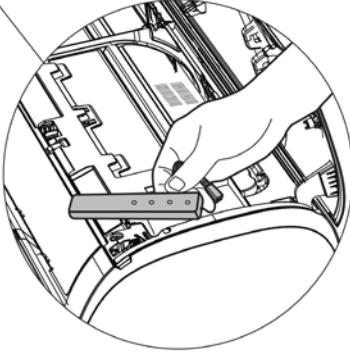
1. Front Panel

Procedure	Illustration
<p>1) Hold the front panel by the tabs on the both sides and lift it (see CJ_AF_001).</p>	 <p style="text-align: center;">CJ_AF_001</p>
<p>2) Push up the bottom of an air filter, and then pull it out downwards (see CJ_AF_002).</p>	 <p style="text-align: center;">CJ_AF_002</p>

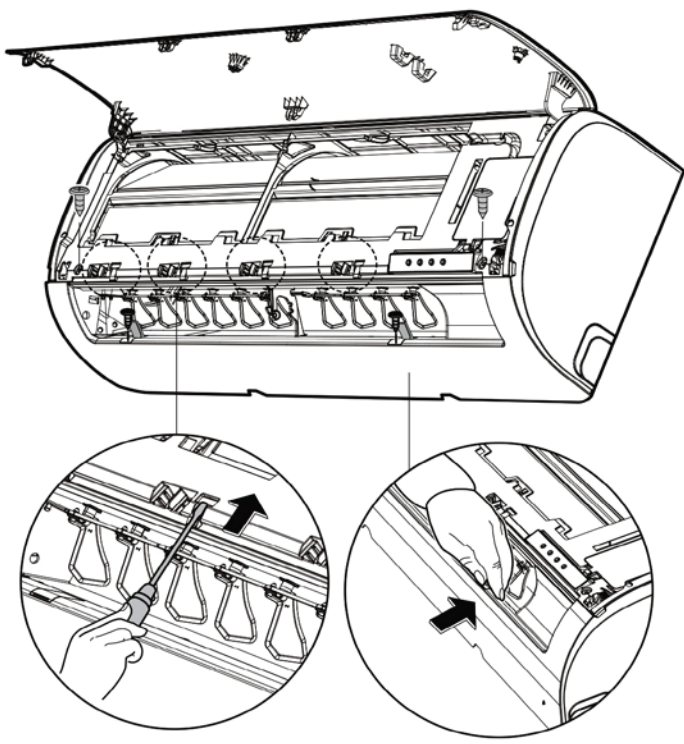
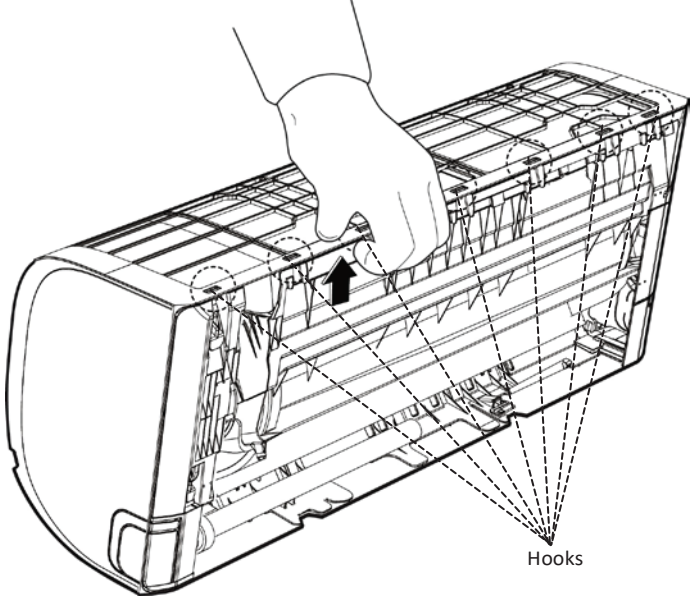
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>3) Open the horizontal louver and push the hook towards left to open it (see CJ_AF_003).</p>	 <p>The illustration shows a side view of the unit's front panel with the horizontal louver partially open. A circular inset provides a magnified view of the louver's edge, where a hand is shown pushing a hook component to the left. Labels include 'Horizontal Louver' and 'Hook'. The reference code 'CJ_AF_003' is centered below the inset.</p>
<p>4) Bend the horizontal louver lightly by both hands to loosen the hooks, then remove the horizontal louver (see CJ_AF_004).</p>	 <p>The illustration shows the front panel with the horizontal louver being bent downwards by two hands. A circular inset shows a magnified view of the louver's edge being bent away from the hook. Labels include 'Hook' and the reference code 'CJ_AF_004' centered below the inset.</p>

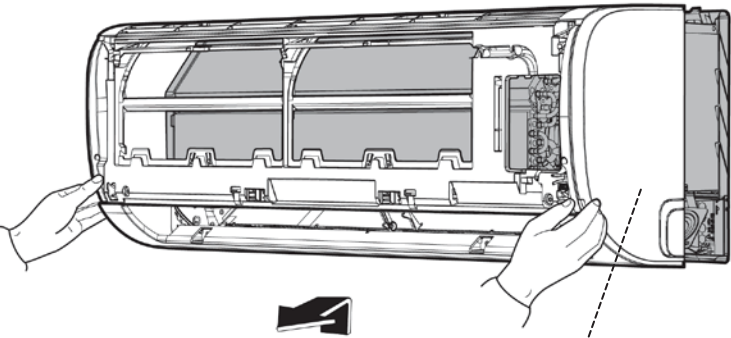
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>5) Remove 1 screw and then remove the electrical cover(see CJ_AF_005-1 and CJ_AF_005-2).</p>	 
<p>6) Disconnect the connector for display board(see CJ_AF_005-3) .</p>	
<p>7) Remove the display board(see CJ_AF_005-4).</p>	
	<p>CJ_AF_005</p>

Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>8) Open the screw caps(2) and the remove the screws(see CJ_AF_006).</p> <p>9) Release the 4 hooks.</p>	 <p style="text-align: center;">CJ_AF_006</p>
<p>10) Release the seven hooks in the back (see CJ_AF_007).</p>	 <p style="text-align: center;">CJ_AF_007</p>

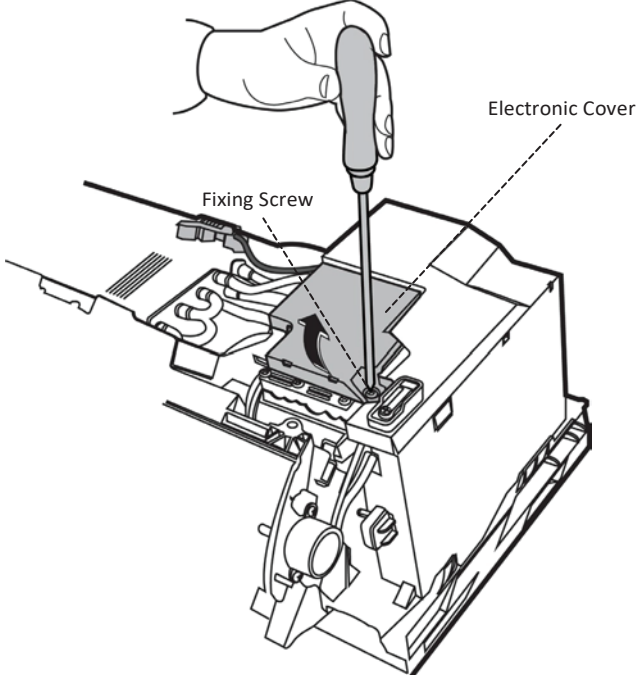
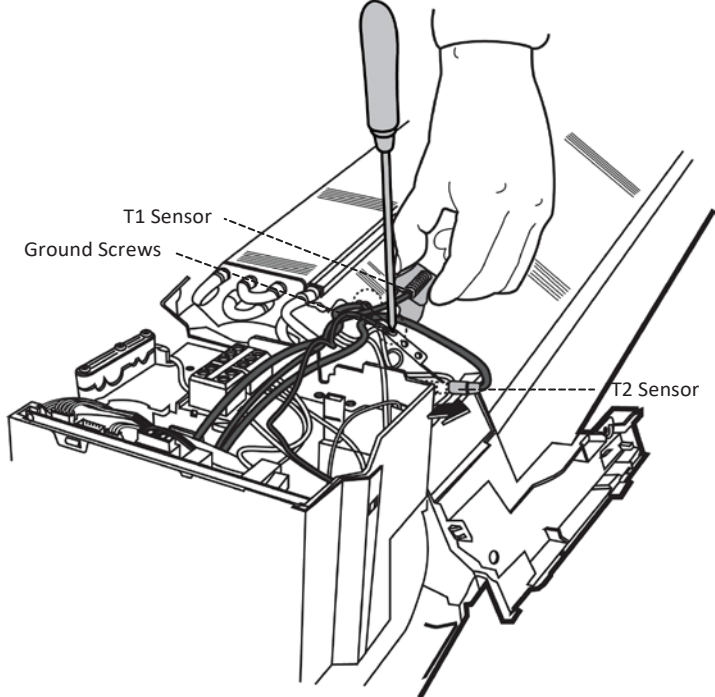
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>11) Pull out the panel frame while pushing the hook through a clearance between the panel frame and the heat exchanger (see CJ_AF_008).</p>	 <p data-bbox="925 728 1077 761">CJ_AF_008</p> <p data-bbox="1165 728 1284 761">Panel Frame</p>

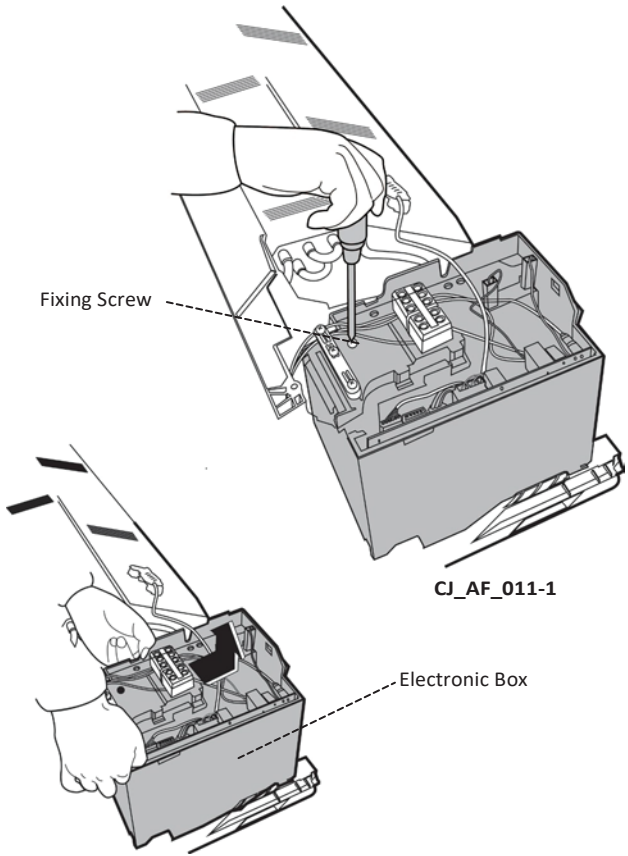
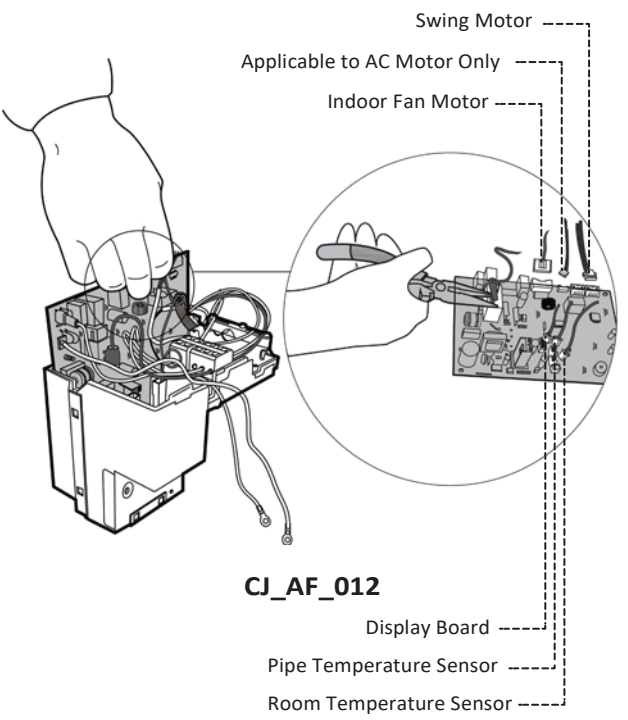
Note: This section is for reference only. Actual unit appearance may vary.

2. Electrical parts

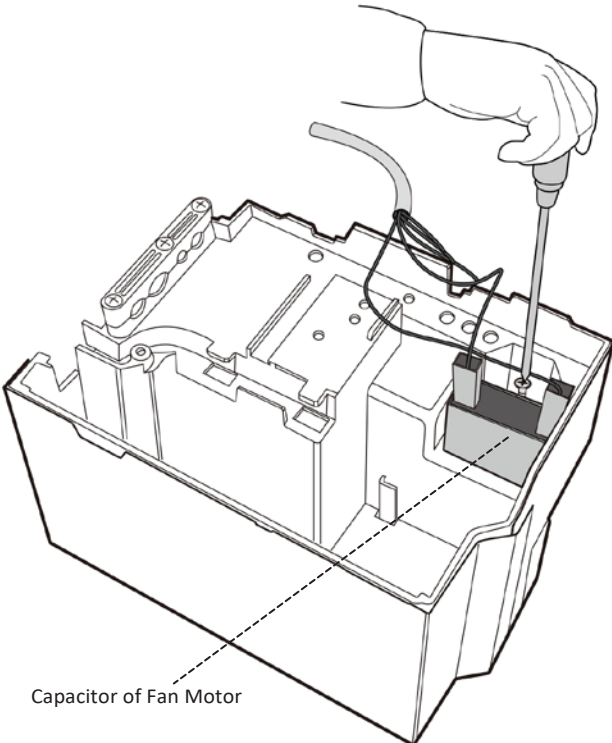
Note: Remove the front panel (refer to 1. Front panel) before disassembling electrical parts.

Procedure	Illustration
<p>1) Remove the fixing screw and then remove the cover of electronic box and the terminal cover (see CJ_AF_009).</p>	 <p>CJ_AF_009</p>
<p>2) Pull out the room temperature sensor (T1) and the coil temperature sensor (T2) (see CJ_AF_010).</p> <p>3) Remove the two screws used for the ground connection (see CJ_AF_010).</p>	 <p>CJ_AF_010</p>

Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>4) Remove the fixing screw (see CJ_AF_011-1).</p> <p>5) Pull out the Electrical control box along the direction indicated in right image. to remove it (see CJ_AF_011-2).</p>	 <p style="text-align: right;">CJ_AF_011-1</p> <p style="text-align: center;">CJ_AF_011-2</p>
<p>6) Disconnect the wires. Then remove the electronic main board (see CJ_AF_012).</p>	 <p style="text-align: right;">CJ_AF_012</p>

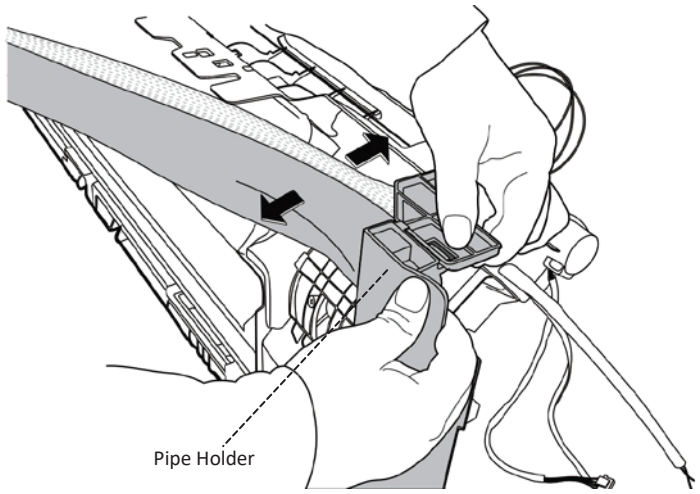
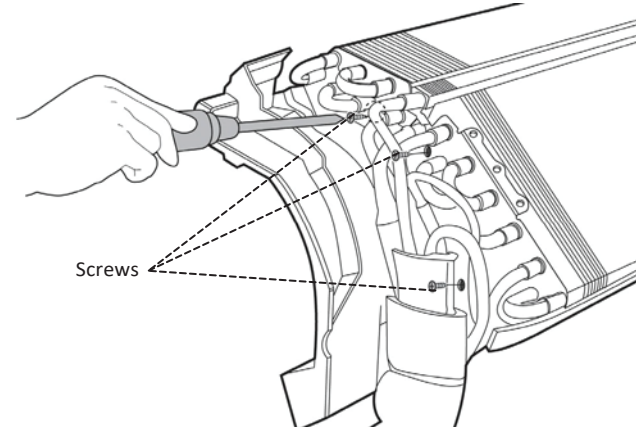
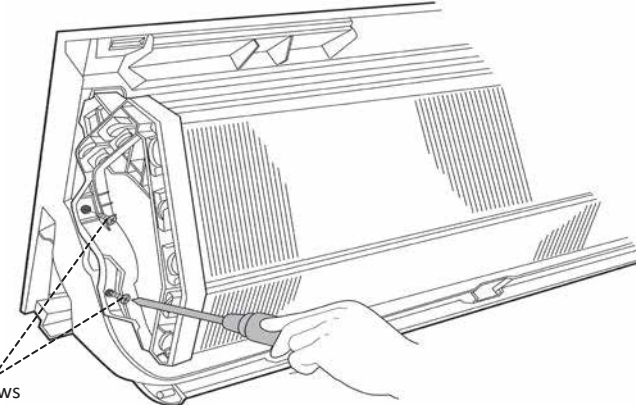
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>7) Remove the fixing screw, then remove the capacitor of fan motor (see CJ_AF_013).</p>	 <p data-bbox="941 1086 1085 1120">CJ_AF_013</p>

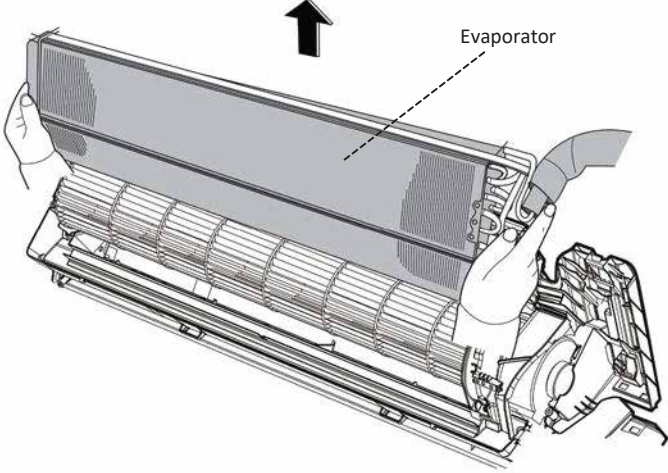
Note: This section is for reference only. Actual unit appearance may vary.

3. Evaporator

Note: Remove the front panel and electrical parts (refer to 1. Front panel and 2. Electrical parts) before disassembling evaporator.

Procedure	Illustration
1) Disassemble the pipe holder located at the rear of the unit (see CJ_AF_014).	 <p style="text-align: center;">CJ_AF_014</p>
2) Remove the screws on the evaporator located at the fixed plate (see CJ_AF_015).	 <p style="text-align: center;">CJ_AF_015</p>
3) Remove the two screws on the evaporator located at the base of the bearing side (see CJ_AF_016).	 <p style="text-align: center;">CJ_AF_016</p>

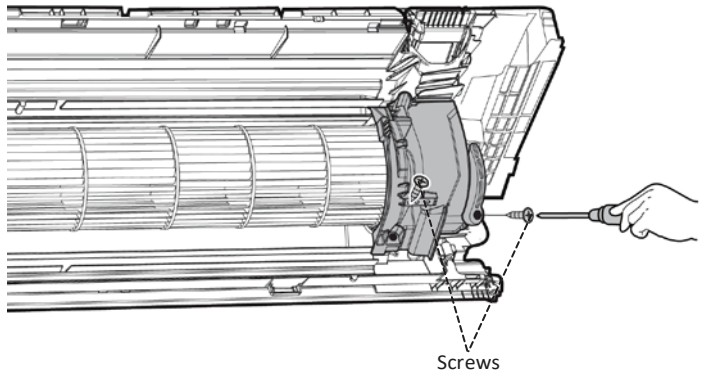
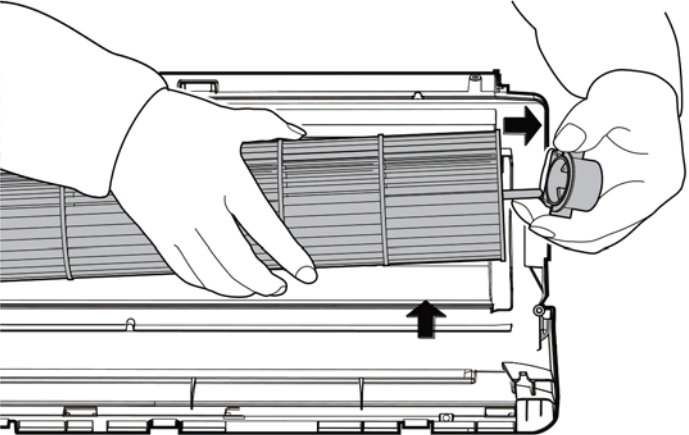
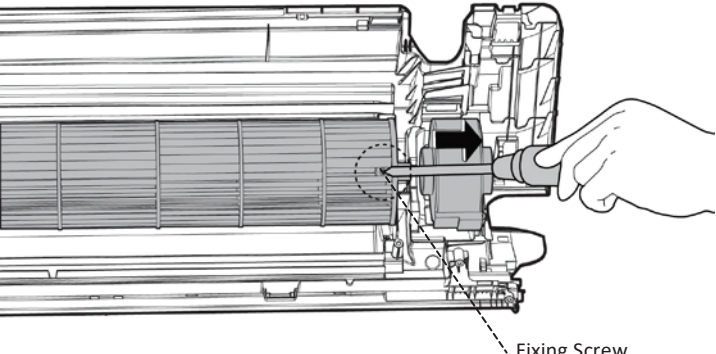
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
4) Pull out the evaporator (see CJ_AF_017).	 <p data-bbox="967 860 1104 891">CJ_AF_017</p>

Note: This section is for reference only. Actual unit appearance may vary.

4. Fan motor and fan

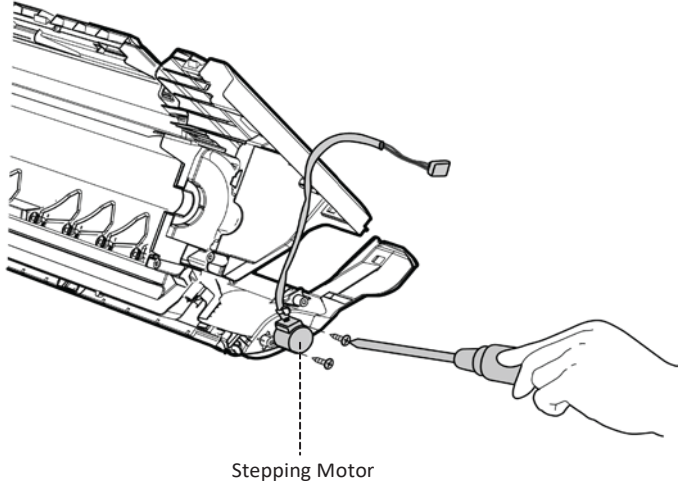
Note: Remove the front panel, electrical parts and evaporator (refer to 1. Front panel, 2. Electrical parts, and 3. Evaporator). before disassembling fan motor and fan.

Procedure	Illustration
1) Remove the two screws and remove the fixing board of the fan motor (see CJ_AF_018).	 <p>CJ_AF_018</p>
2) Remove the Bearing sleeve(see CJ_AF_019).	 <p>CJ_AF_019</p>
3) Remove the fixing screw (see Fig CJ_AF_020). 4) Pull out the fan motor and fan assembly from the side.	 <p>CJ_AF_020</p>

Note: This section is for reference only. Actual unit appearance may vary.

5. Step motor

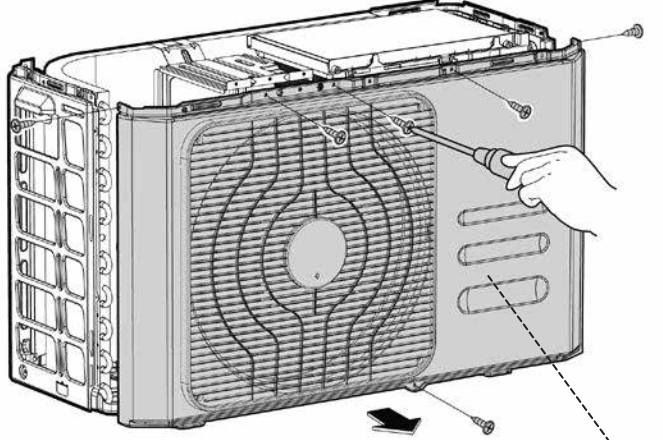
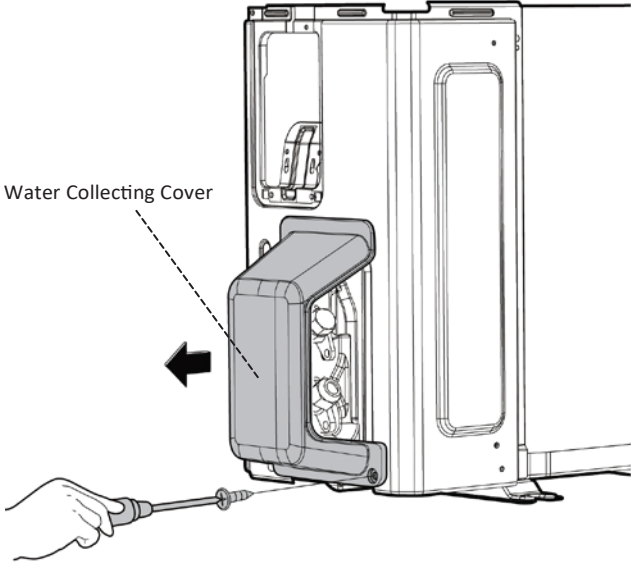
Note: Remove the front panel and electrical parts (refer to 1. Front panel, 2. Electrical parts) before disassembling step motor.

Procedure	Illustration
1) Remove the two screws, then remove the stepping motor (see CJ_AF_021).	 <p data-bbox="927 907 1074 929">Stepping Motor</p> <p data-bbox="967 1003 1106 1025">CJ_AF_021</p>

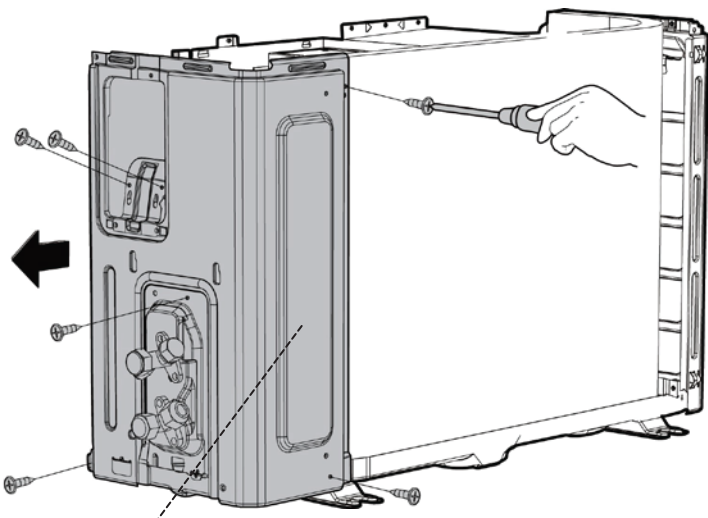
Note: This section is for reference only. Actual unit appearance may vary.

2.2 Outdoor unit

1. Panel Plate

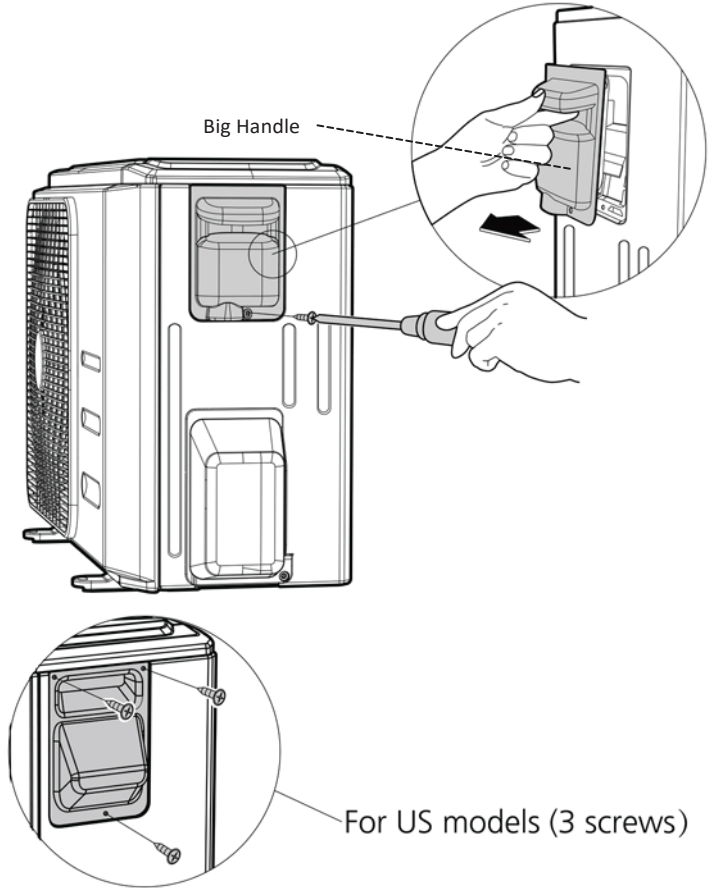
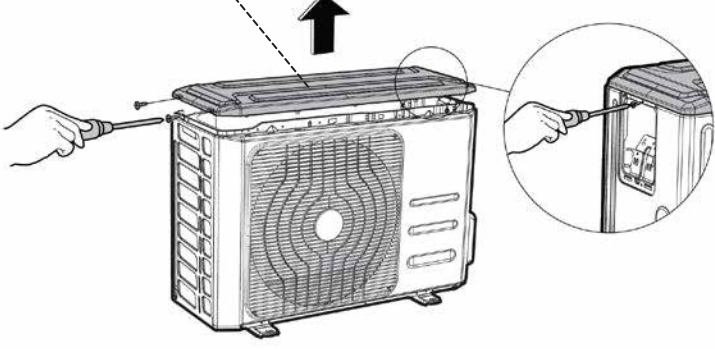
Procedure	Illustration
<p>4) Remove the screws of the front panel and then remove the front panel (6 screws) (see CJ_AA30_003).</p>	 <p>CJ_AA30_003</p> <p>Front Panel</p>
<p>5) Remove the screws of water collecting cover (1 screw) (see CJ_AA30_004).</p>	 <p>Water Collecting Cover</p> <p>CJ_AA30_004</p>

Note: This section is for reference only. Actual unit appearance may vary.

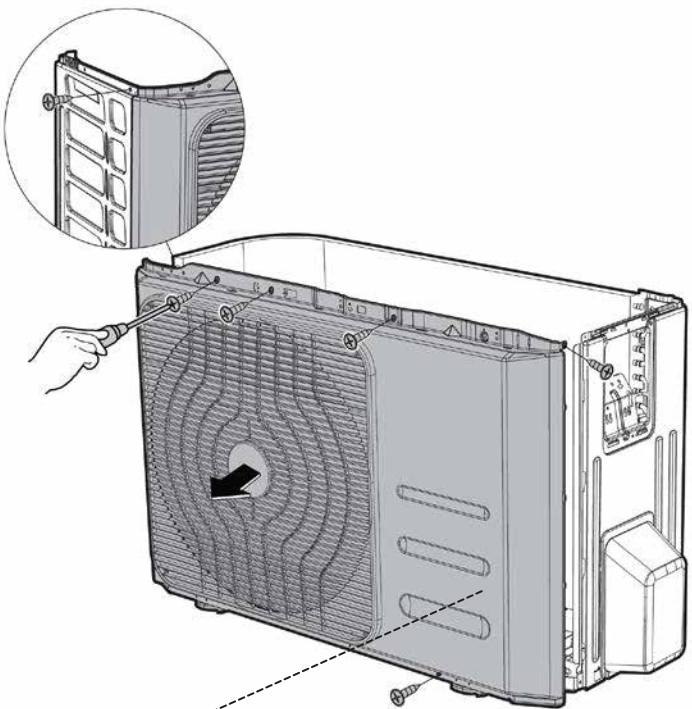
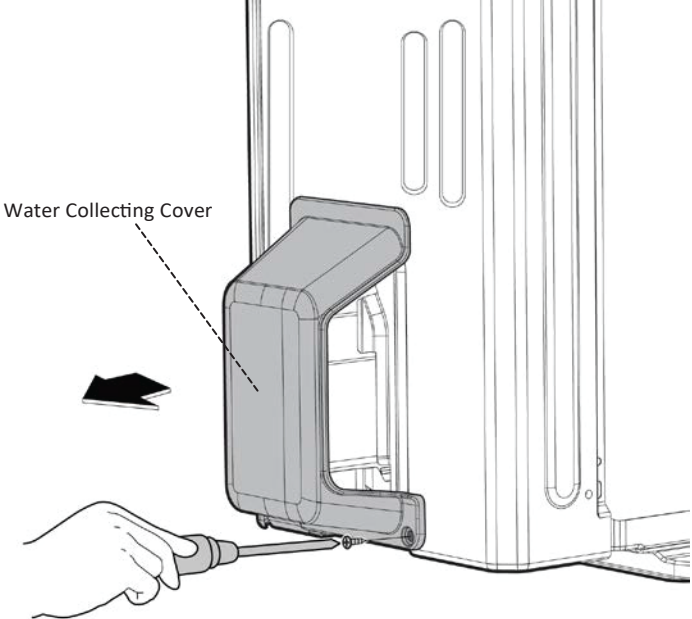
Procedure	Illustration
<p>6) Remove the screws of the right panel and then remove the right panel (6 screws) (see CJ_AA30_005).</p>	 <p style="text-align: center;">CJ_AA30_005</p> <p>The Right Panel</p>

Note: This section is for reference only. Actual unit appearance may vary.

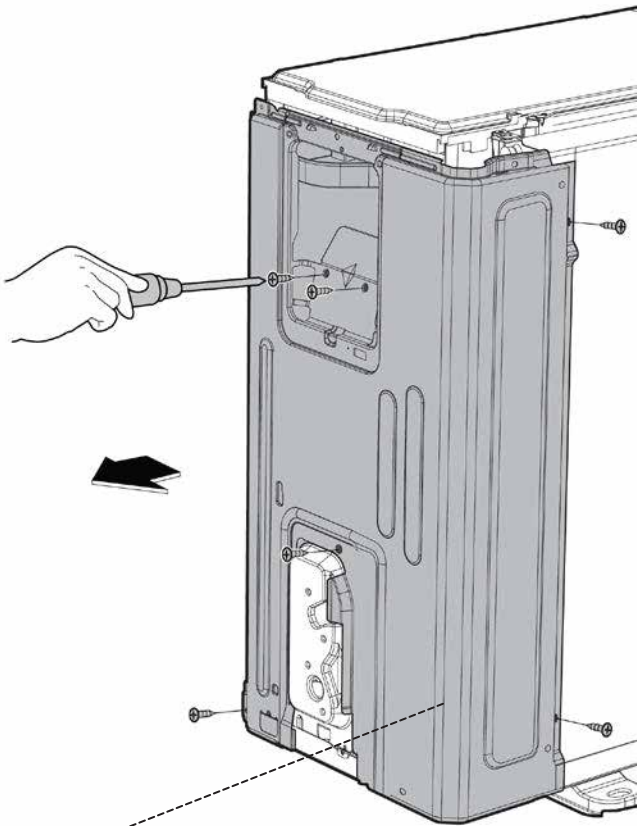
FU-07HSS010/N2-OUT;

Procedure	Illustration
<p>1) Turn off the air conditioner and the power breaker.</p> <p>2) Remove the screws of the big handle and then remove the big handle (1 screws) (see CJ_AB30_001).</p>	 <p>Big Handle</p> <p>For US models (3 screws)</p> <p>CJ_AB30_001</p>
<p>3) Remove the screws of the top cover and then remove the top cover (3 screws). One of the screws is located underneath the big handle (see CJ_AB30_002).</p>	 <p>Top Cover</p> <p>CJ_AB30_002</p>

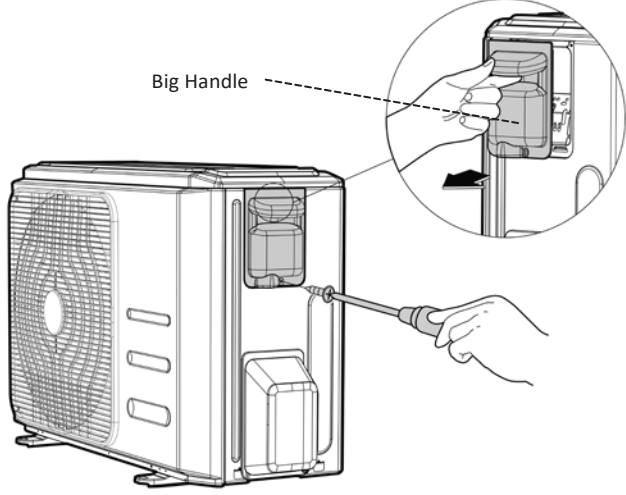
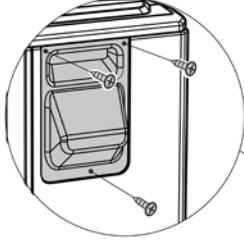
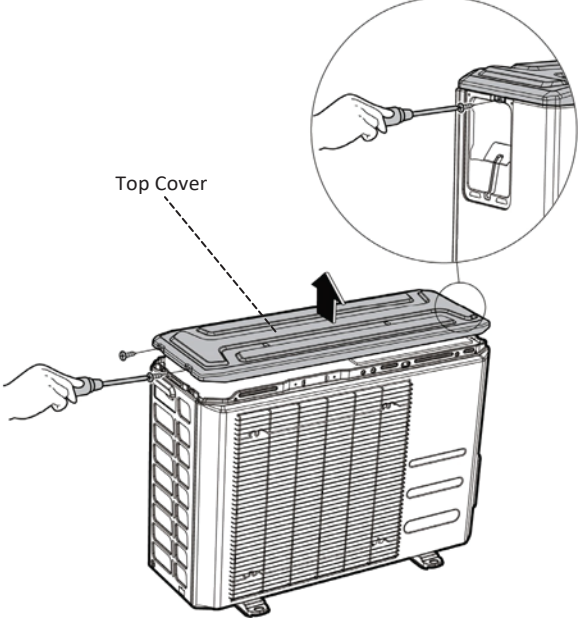
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>4) Remove the screws of the front panel and then remove the front panel (6 screws) (see CJ_AB30_003).</p>	 <p>Front Panel</p> <p>CJ_AB30_003</p>
<p>5) Remove the screws of water collecting cover (1 screw) (see CJ_AB30_004).</p>	 <p>Water Collecting Cover</p> <p>CJ_AB30_004</p>

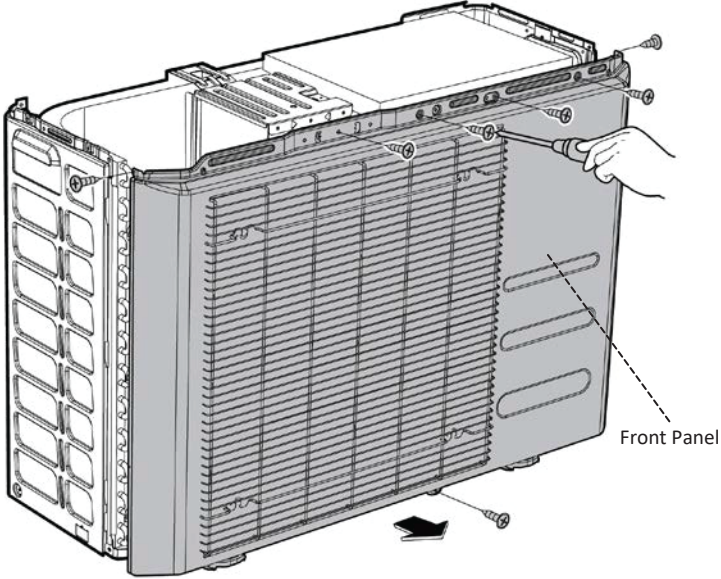
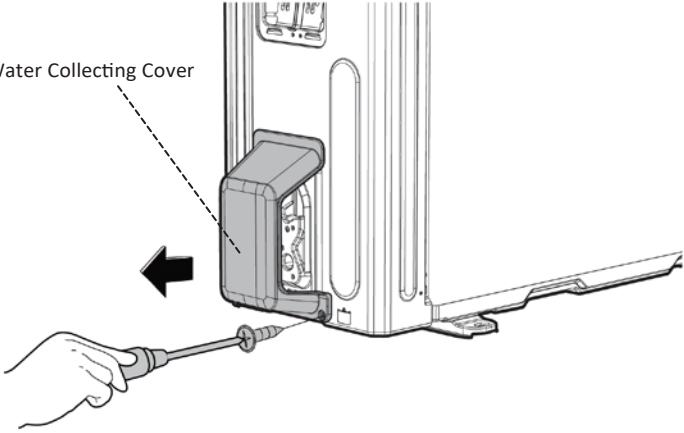
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>6) Remove the screws of the right panel and then remove the right panel (5 screws) (see CJ_AB30_005).</p>	 <p data-bbox="798 1189 901 1216">Right Panel</p> <p data-bbox="927 1240 1098 1267">CJ_AB30_005</p>

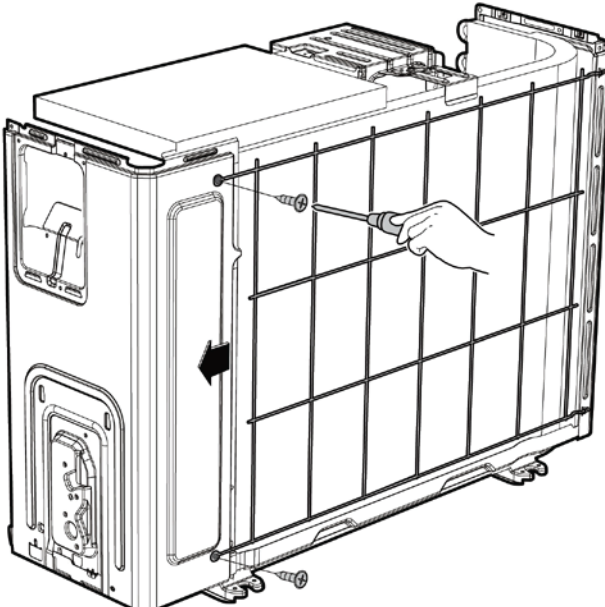
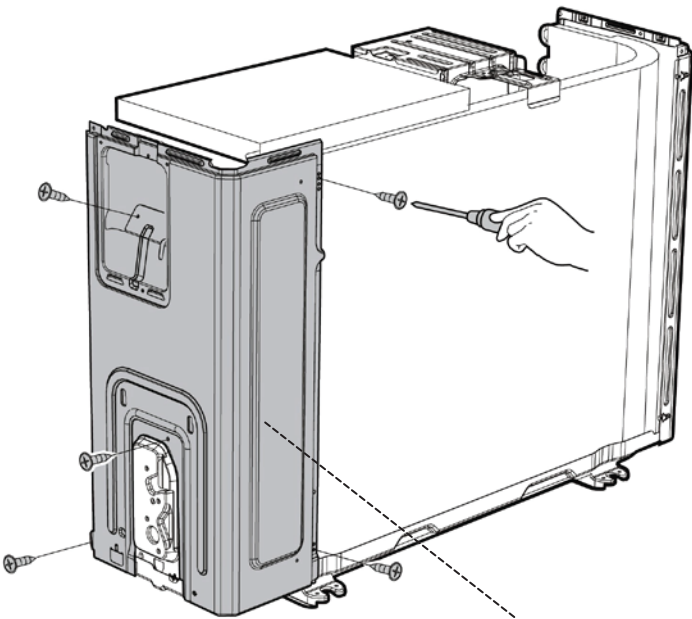
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>1) Turn off the air conditioner and the power breaker.</p> <p>2) Remove the screws of the big handle and then remove the big handle (1 screws) (see CJ_BA30_001).</p>	 <p>Big Handle</p>  <p>For US models (3 screws)</p> <p>CJ_BA30_001</p>
<p>3) Remove the screws of the top cover and then remove the top cover (3 screws). One of the screws is located underneath the big handle (see CJ_BA30_002).</p>	 <p>Top Cover</p> <p>CJ_BA30_002</p>

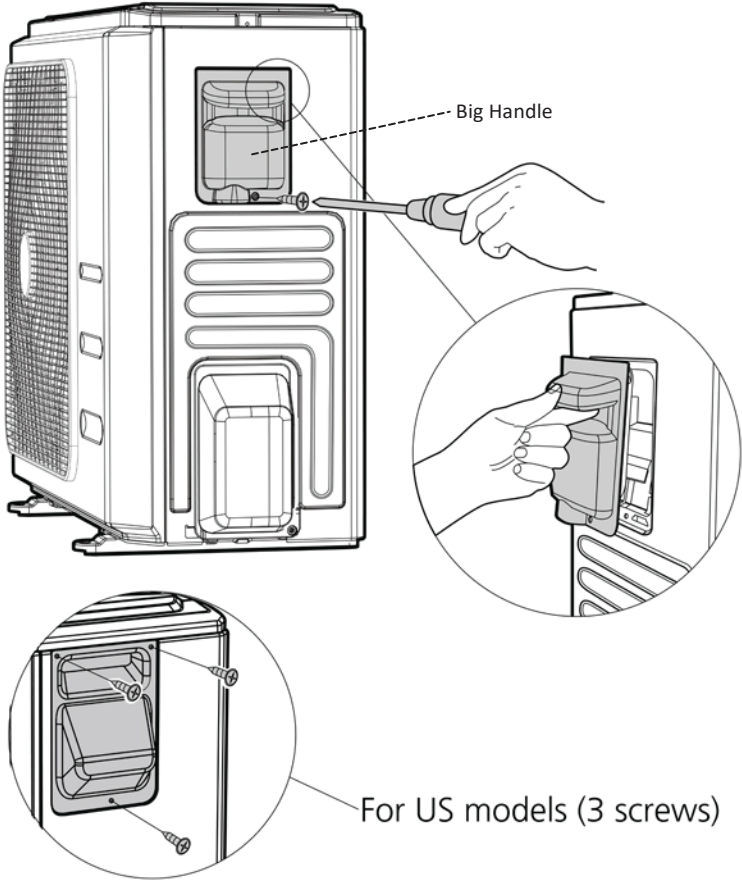
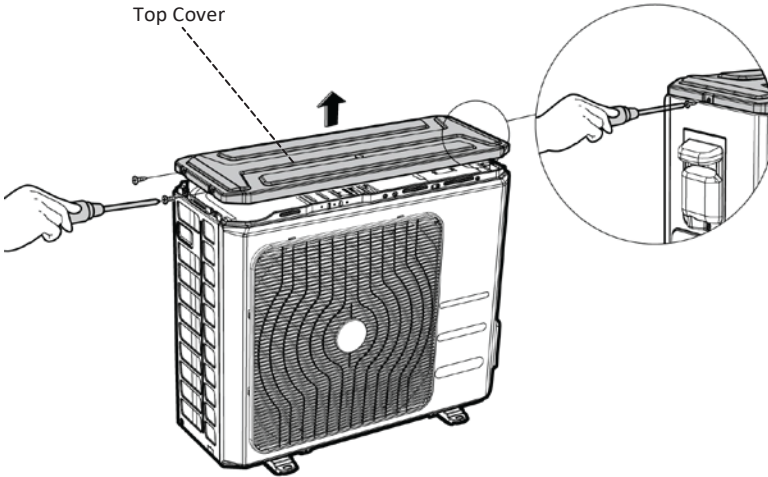
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>4) Remove the screws of the front panel and then remove the front panel (7 screws) (see CJ_BA30_003).</p>	 <p style="text-align: center;">CJ_BA30_003</p>
<p>5) Remove the screws of water collecting cover (1 screw) (see CJ_BA30_004).</p>	 <p style="text-align: center;">CJ_BA30_004</p>

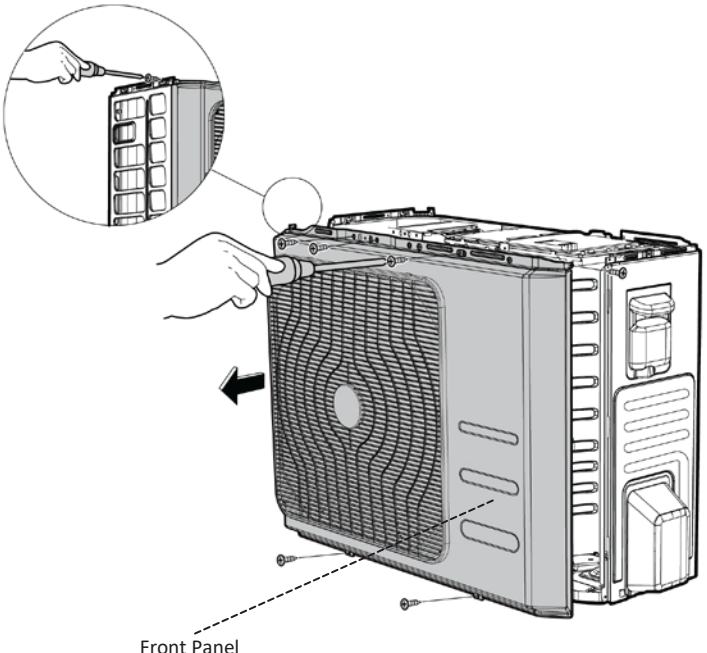
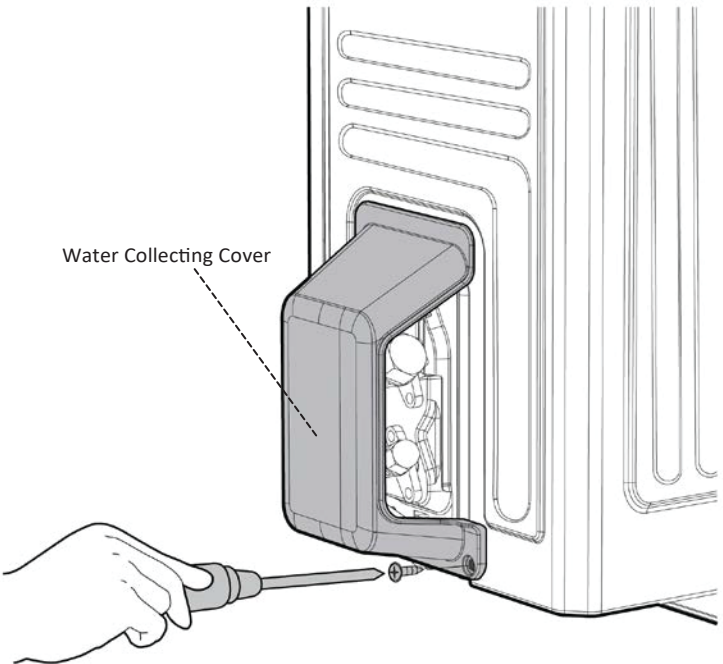
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>6) Remove the screws of the rear net and then remove the rear net (2 screws) (see CJ_BA30_005).</p>	 <p style="text-align: center;">CJ_BA30_005</p>
<p>7) Remove the screws of the right panel and then remove the right panel (5 screws) (see CJ_BA30_006).</p>	 <p style="text-align: center;">CJ_BA30_006</p> <p style="text-align: right;">Right Panel</p>

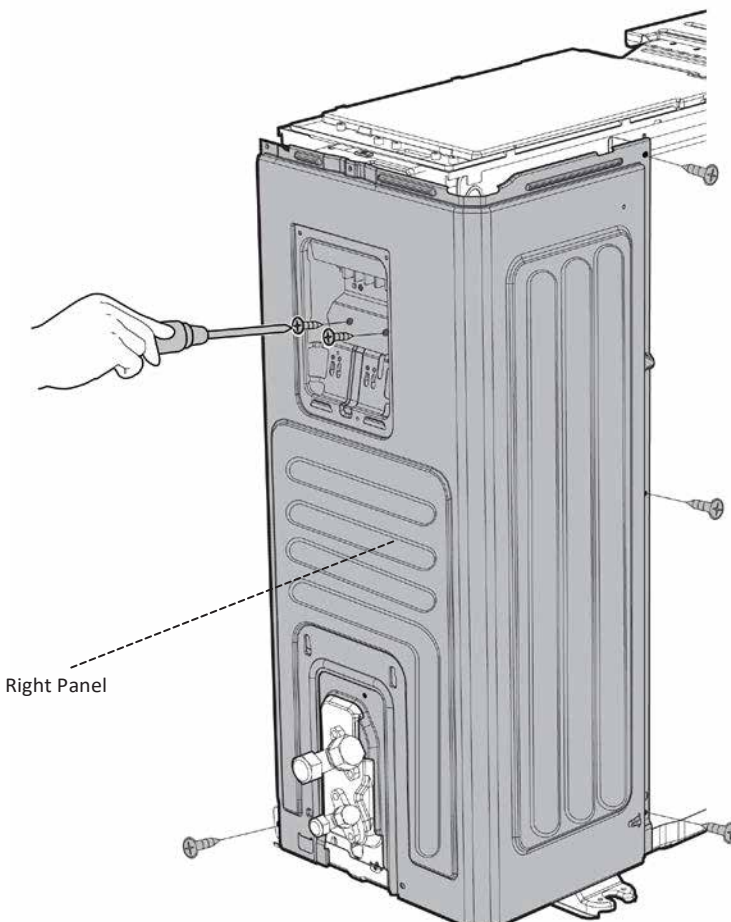
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>1) Turn off the air conditioner and the power breaker.</p> <p>2) Remove the screws of the big handle and then remove the big handle (1 screws) (see CJ_CA30_001).</p>	 <p>Big Handle</p> <p>For US models (3 screws)</p> <p>CJ_CA30_001</p>
<p>3) Remove the screws of the top cover and then remove the top cover (3 screws). One of the screws is located underneath the big handle (see CJ_CA30_002).</p>	 <p>Top Cover</p> <p>CJ_CA30_002</p>

Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>4) Remove the screws of the front panel and then remove the front panel (7 screws) (see CJ_CA30_003).</p>	 <p>Front Panel</p> <p>CJ_CA30_003</p>
<p>5) Remove the screws of water collecting cover and then remove the water collecting cover (1 screw) (see CJ_CA30_004).</p>	 <p>Water Collecting Cover</p> <p>CJ_CA30_004</p>

Note: This section is for reference only. Actual unit appearance may vary.

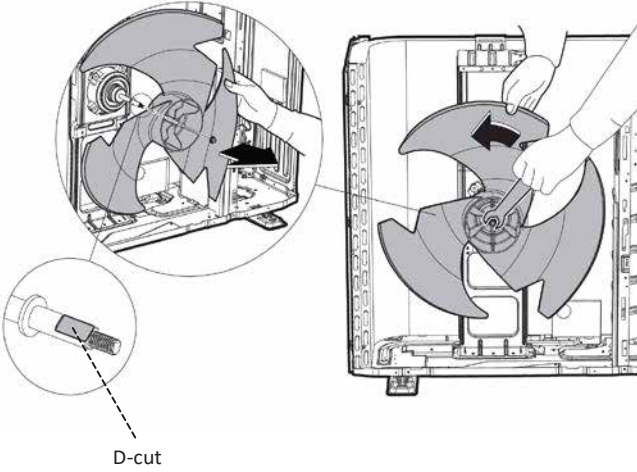
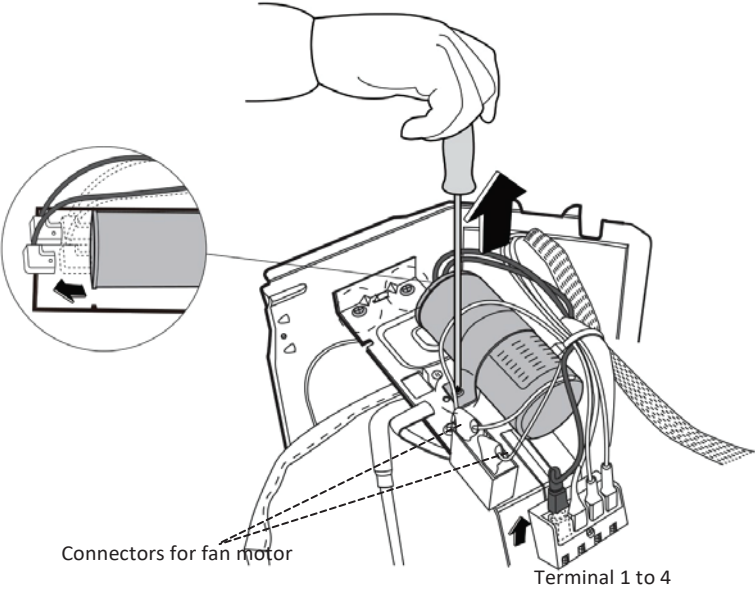
Procedure	Illustration
<p>6) Remove the screws of the right panel and then remove the right panel (6 screws) (see CJ_CA30_005).</p>	 <p>The illustration shows a hand using a screwdriver to remove screws from the right panel of a unit. The unit is shown in a three-quarter view, with the right panel being the focus. A dashed line points to the right panel. The unit has a control panel at the top and a service panel at the bottom. The right panel is being removed, and the screws are shown being unscrewed. The label 'Right Panel' is placed next to the dashed line. The code 'CJ_CA30_005' is located at the bottom of the illustration area.</p> <p data-bbox="638 996 742 1030">Right Panel</p> <p data-bbox="925 1366 1093 1400">CJ_CA30_005</p>

Note: This section is for reference only. Actual unit appearance may vary.

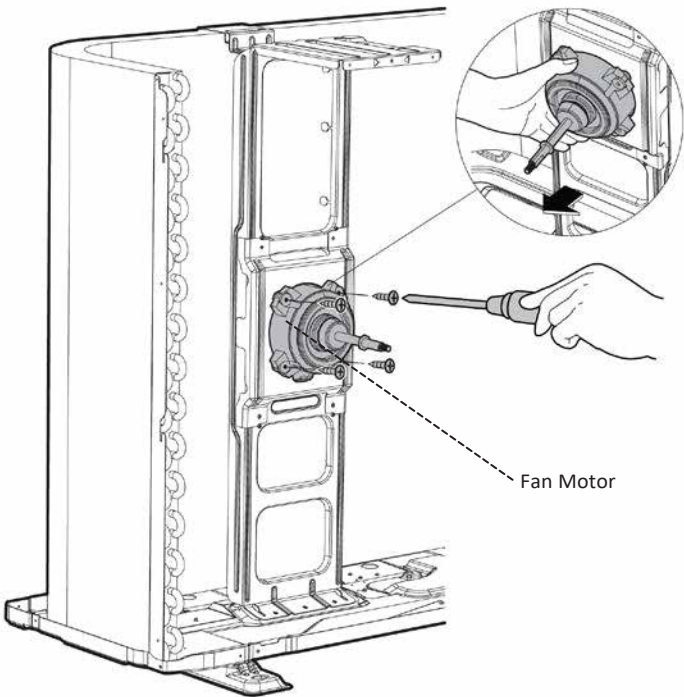
2. Fan disassembly

Note: Remove the panel plate and (refer to 1. Panel plate) before disassembling fan.

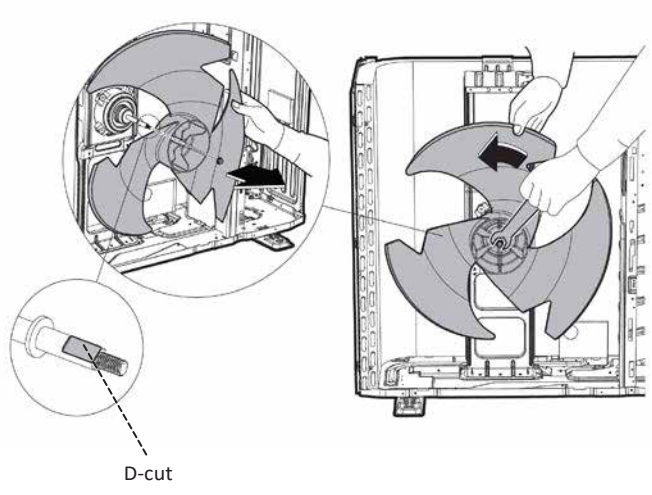
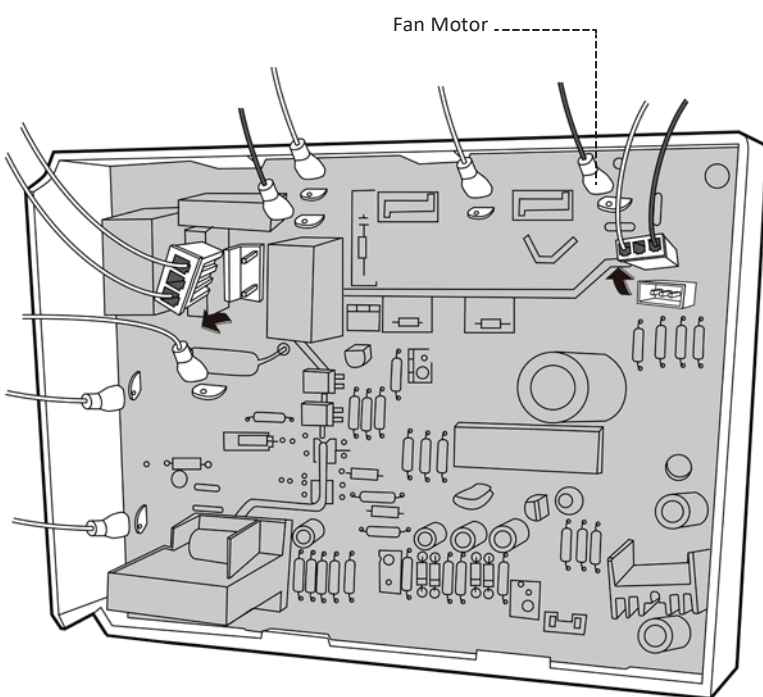
FU-07HSS010/N2-OUT; FU-12HSS010/N2-OUT; FU-18HSS010/N2-OUT

Procedure	Illustration
<p>1) Remove the nut securing the fan with a spanner (see CJ_ODU_001).</p> <p>2) Remove the fan.</p>	 <p style="text-align: center;">CJ_ODU_001</p>
<p>3) Disconnect the connectors for fan motor. (Blue wire, yellow wire, red wire, brown wire and black wire. The blue wire and red wire are on the capacitor. The black wire connects with terminal 4.) (see CJ_ODU_002)</p>	 <p style="text-align: center;">CJ_ODU_002</p>

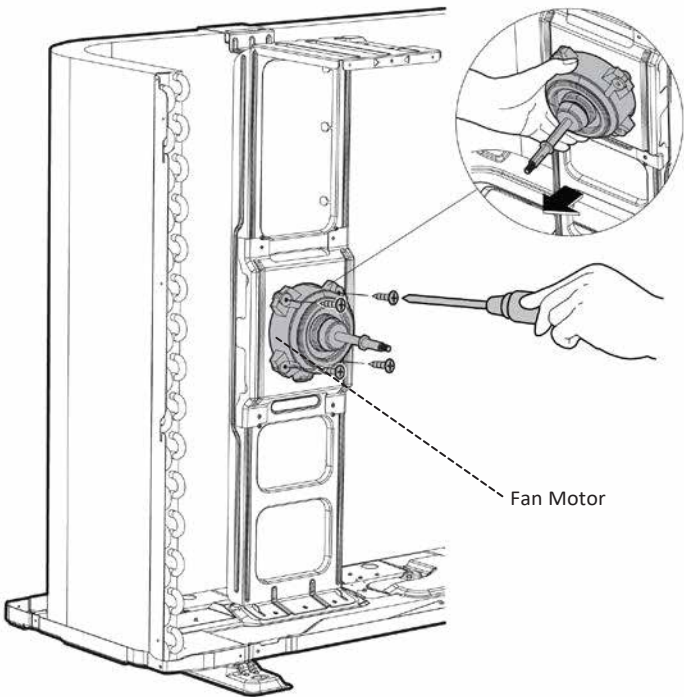
Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>4) Remove the fixing screws of the fan motor (4 screws) (see CJ_ODU_003).</p> <p>5) Remove the fan motor.</p>	 <p data-bbox="949 1086 1125 1131">CJ_ODU_003</p>

Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>1) Remove the nut securing the fan with a spanner (see CJ_ODU_004).</p> <p>2) Remove the fan.</p>	 <p style="text-align: center;">CJ_ODU_004</p>
<p>3) Disconnect the connectors for fan motor. (Blue wire, red wire, brown wire and black wire. The blue wire and brown wire are on the capacitor. The black wire connects with a terminal. And the red wire is on the board.) (see CJ_ODU_005)</p>	 <p style="text-align: center;">CJ_ODU_005</p>

Note: This section is for reference only. Actual unit appearance may vary.

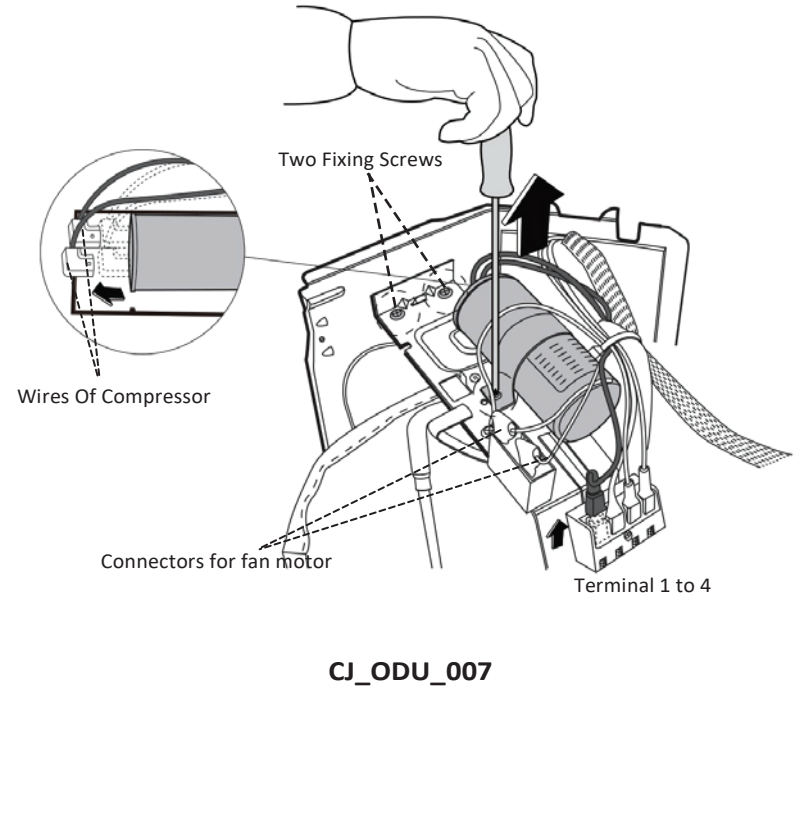
Procedure	Illustration
<p>4) Remove the fixing screws of the fan motor (4 screws) (see CJ_ODU_006).</p> <p>5) Remove the fan motor.</p>	 <p data-bbox="954 1093 1120 1124">CJ_ODU_006</p>

Note: This section is for reference only. Actual unit appearance may vary.

3. Electrical parts

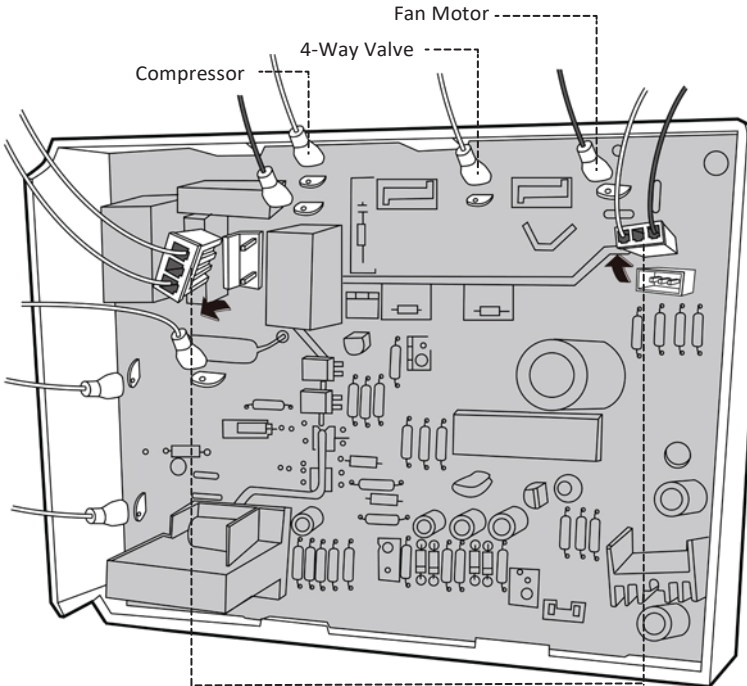
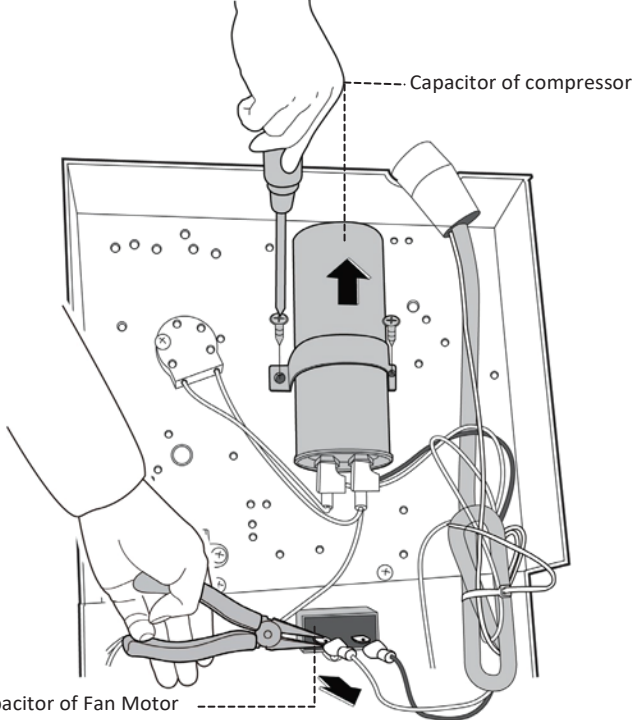
Note: Remove the air outlet grille(refer to 1. Panel plate) before disassembling electrical parts.

FU-07HSS010/N2-OUT; FU-12HSS010/N2-OUT; FU-18HSS010/N2-OUT

Procedure	Illustration
<ol style="list-style-type: none">1) Remove the two screws fixed the electronic control board (see CJ_ODU_007).2) Disconnect the wires connected to the compressor. (Black wire connects with terminal 1, blue wire and red wire connect with the compressor capacitor) (see CJ_ODU_007)3) Disconnect the wires connected to 4-way valve.(Blue wires on terminal 2&3) (see CJ_ODU_007)4) Remove the fixing screw of the compressor capacitor, then pull it out (see CJ_ODU_007)5) Remove the electrical parts (see CJ_ODU_007)	 <p>The illustration shows a hand using a screwdriver to remove two screws from the electronic control board. A circular inset provides a magnified view of the compressor wires. Labels indicate 'Two Fixing Screws', 'Wires Of Compressor', 'Connectors for fan motor', and 'Terminal 1 to 4'. The diagram is titled 'CJ_ODU_007'.</p>

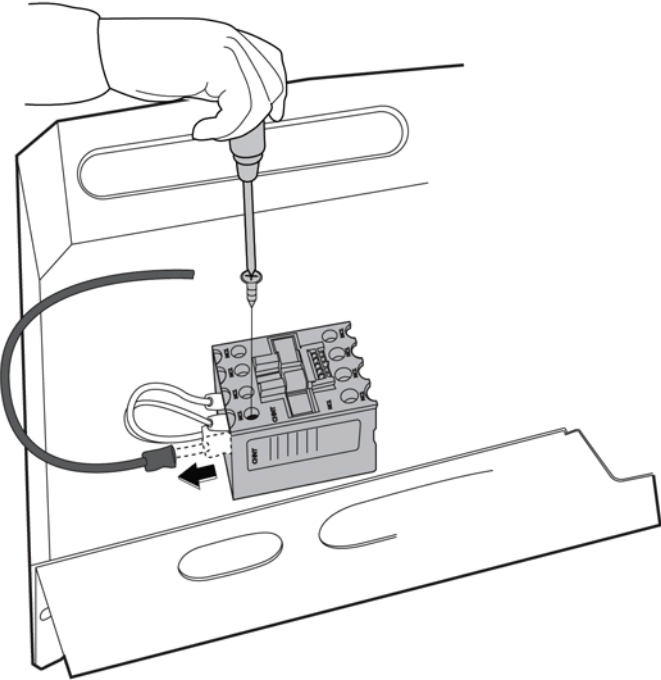
Note: This section is for reference only. Actual unit appearance may vary.

FU-24HSS010/N2-OUT

Procedure	Illustration
<ol style="list-style-type: none"> 1) Disconnect the wires connected to the compressor. (Red wire connects with PCB board, others connects with terminals) (see CJ_ODU_008) 2) Disconnect the wires connected to 4-way valve. (see CJ_ODU_008) 3) Disconnect the wires connected to the transformer. (see CJ_ODU_008) 4) Disconnect the other wires connected to terminals. (see CJ_ODU_008) 5) Remove the PCB board. (see CJ_ODU_008) 	 <p style="text-align: center;">Transformer CJ_ODU_008</p>
<ol style="list-style-type: none"> 6) Remove the screws of the capacitors. (see CJ_ODU_009) 	 <p style="text-align: center;">CJ_ODU_009</p>

Maintenance and Disassembly

Note: This section is for reference only. Actual unit appearance may vary.

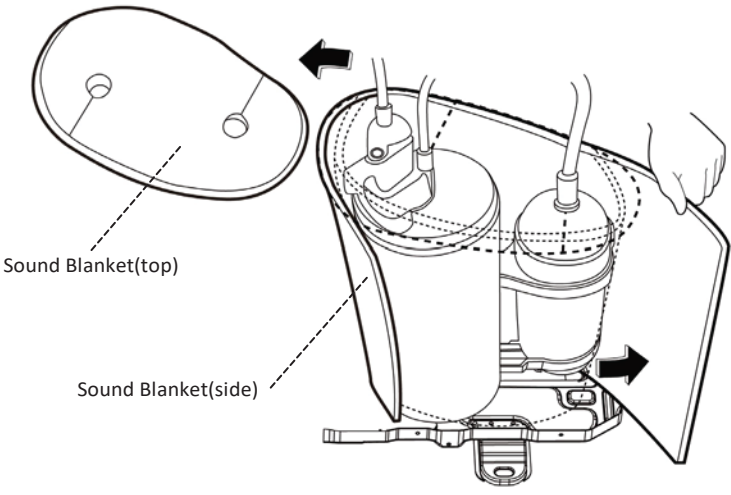
Procedure	Illustration
<p>1) Disconnect the wires and remove the fixing screw of the alternating current contactor. (see CJ_ODU_010)</p>	 <p style="text-align: center;">CJ_ODU_010</p>

Note: This section is for reference only. Actual unit appearance may vary.

4. Sound blanket

! WARNING: Recover refrigerant from the refrigerant circuit before remove the compressor.

Note: Remove the panel plate, electrical parts, and fan assembly (refer to 1. Panel plate, 2. Electrical parts, and 3. Fan assembly) before disassembling sound blanket.

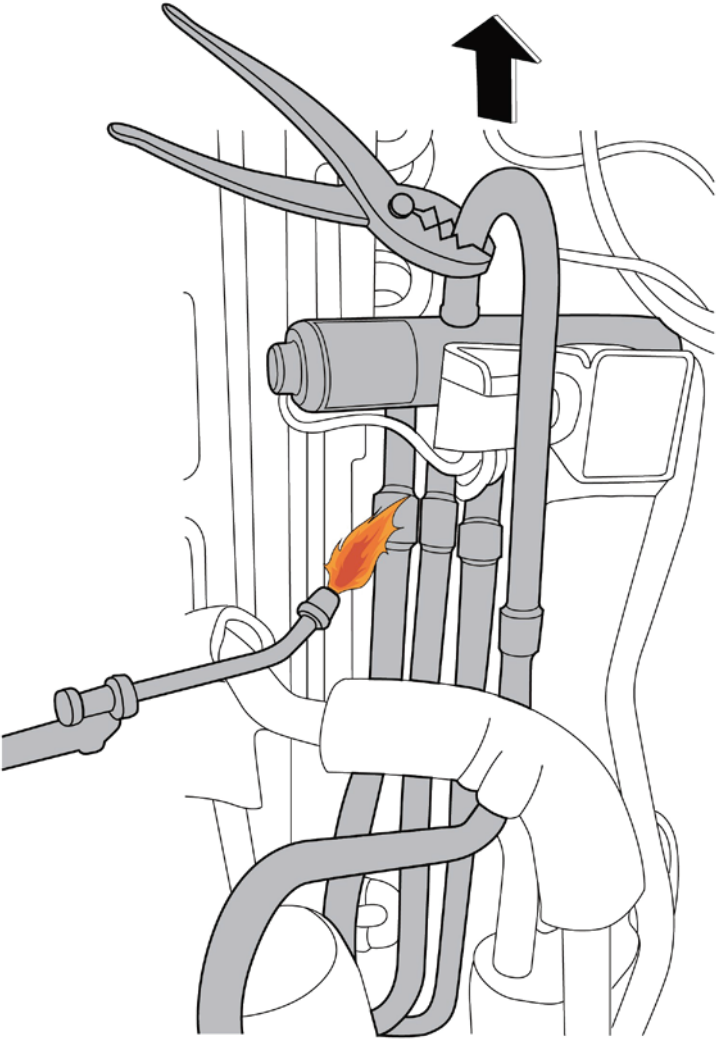
Procedure	Illustration
1) Remove the sound blanket (side and top) (see CJ_ODU_011).	 <p data-bbox="925 1064 1093 1097">CJ_ODU_011</p>

Note: This section is for reference only. Actual unit appearance may vary.

5. Four-way valve (for heat pump models)

! WARNING: Recover refrigerant from the refrigerant circuit before remove the four-way valve.

Note: Remove the panel plate, electrical parts, and fan assembly (refer to 1. Panel plate, 2. Electrical parts, and 3. Fan assembly) before disassembling four-way valve.

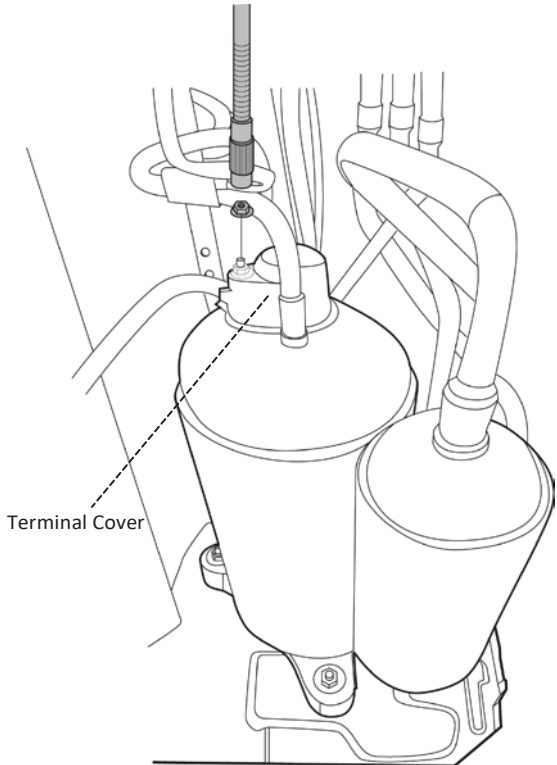
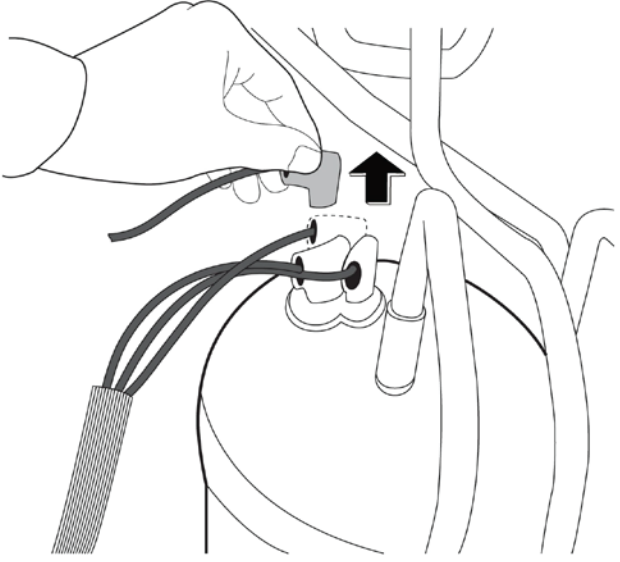
Procedure	Illustration
<ol style="list-style-type: none">1) Heat up the brazed parts and then detach the the four-way valve and the pipe (see CJ_ODU_012).2) Remove the four-way valve assembly with pliers.	 <p data-bbox="954 1653 1120 1684">CJ_ODU_012</p>

Note: This section is for reference only. Actual unit appearance may vary.

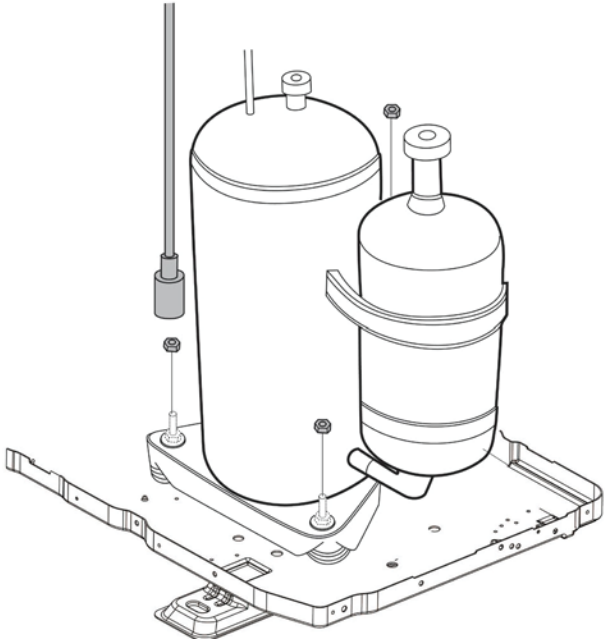
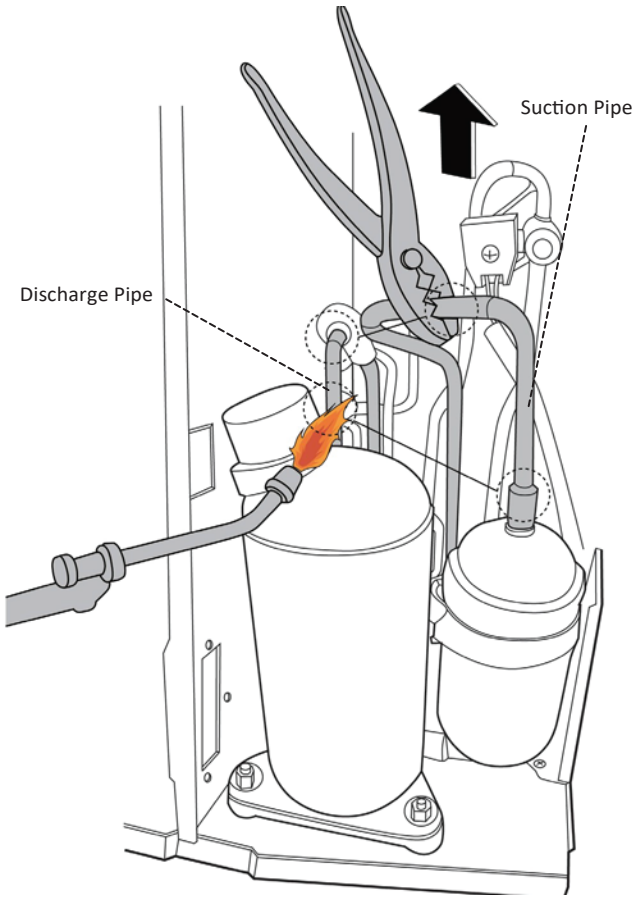
6. Compressor

! WARNING: Recover refrigerant from the refrigerant circuit before remove the compressor.

Note: Remove the panel plate, electrical parts, and fan assembly (refer to 1. Panel plate, 2. Electrical parts, and 3. Fan assembly) before disassembling compressor.

Procedure	Illustration
<p>1) Remove the flange nut of terminal cover and remove the terminal cover (see CJ_ODU_013).</p>	 <p>The diagram shows a top-down view of the compressor assembly. A terminal cover is mounted on top of the compressor. A dashed line points to the terminal cover with the label "Terminal Cover".</p> <p style="text-align: center;">CJ_ODU_013</p>
<p>2) Disconnect the connectors (see CJ_ODU_014).</p>	 <p>The diagram shows a close-up of a hand using a tool to disconnect a connector from the compressor. An upward-pointing arrow indicates the direction of the tool's movement.</p> <p style="text-align: center;">CJ_ODU_014</p>

Note: This section is for reference only. Actual unit appearance may vary.

Procedure	Illustration
<p>3) Remove the hex nuts and washers securing the compressor, located on the bottom plate (see CJ_ODU_015).</p>	 <p style="text-align: center;">CJ_ODU_015</p>
<p>4) Heat up the brazed parts and then remove the the discharge pipe and the suction pipe (see CJ_ODU_016).</p> <p>5) Lift the compressor from the base pan assembly with pliers.</p>	 <p style="text-align: center;">CJ_ODU_016</p>

Note: This section is for reference only. Actual unit appearance may vary.

Troubleshooting

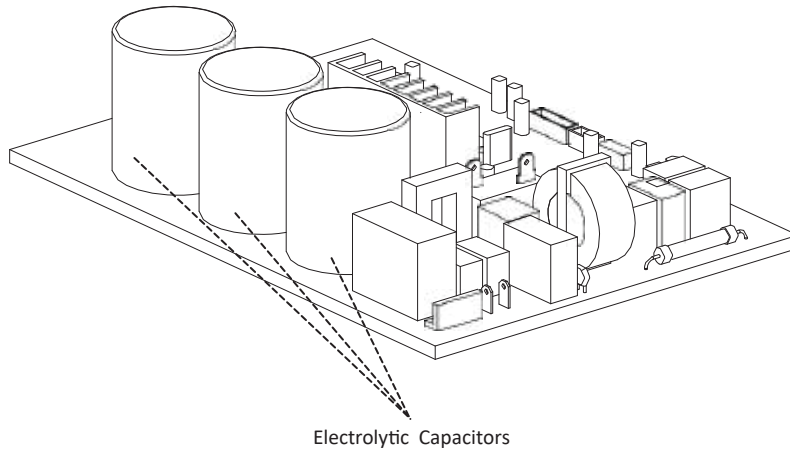
Contents

1.	Safety Caution	58
2.	General Troubleshooting	59
3.	Error Diagnosis and Troubleshooting Without Error Code	60
3.1	Remote maintenance	60
3.2	Field maintenance	61
4.	Quick Maintenance by Error Code	66
5.	Troubleshooting by Error Code	67
5.1	Common Check Procedures	67
5.2	E0(EEPROM parameter error)	68
5.3	E1(Indoor and outdoor unit communication error) (only for $\geq 22k$ models)...	69
5.4	E2 (Zero crossing detection error diagnosis and solution).....	70
5.5	E3 (Fan speed has been out of control diagnosis and solution)	71
5.6	E4/E5/F2 (Open circuit or short circuit of temperature sensor diagnosis and solution) (F2 is only for $\geq 22k$ models)	73
5.7	E7 (Indoor PCB /Display board communication error).....	74
5.8	EC (Refrigerant Leakage Detection diagnosis and solution)	75

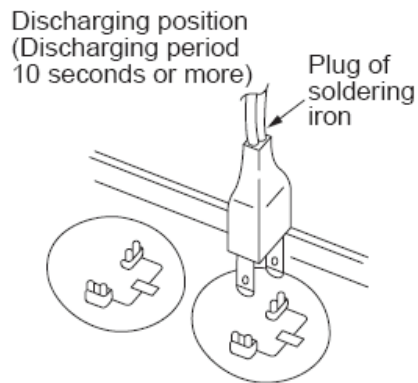
1. Safety Caution

WARNING

Electricity remains in capacitors even when the power supply is off.
Ensure the capacitors are fully discharged before troubleshooting.



For other models, connect discharge resistance (approx. $100\ \Omega$ 40W) or a soldering iron plug between the positive and negative terminals of the electrolytic capacitor. The terminals are located on the bottom surface of the outdoor PCB.



Note: This picture is for reference only. Actual appearances may vary.

2. General Troubleshooting

2.1 Error Display (Indoor Unit)

When the indoor unit encounters a recognized error, the indicator light will flash in a corresponding series, the timer display may turn on or begin flashing, and an error code will be displayed. These error codes are described in the following table:

Indicator flashes	Timer Display	Display	Error Information	Solution
1	OFF	E0	Indoor unit EEPROM parameter error	Page 68
2	OFF	E1	Indoor / outdoor units communication error (only for $\geq 22k$ models)	Page 63
3	OFF	E2	Zero-crossing signal detection error	Page 70
4	OFF	E3	The indoor fan speed is operating outside of the normal range	Page 71
5	OFF	E4	Indoor room temperature sensor T1 is in open circuit or has short circuited	Page 73
6	OFF	E5	Evaporator coil temperature sensor T2 is in open circuit or has short circuited	Page 73
9	OFF	E7	Indoor PCB /Display board communication error	Page 74
7	OFF	EC	Refrigerant leak detected	Page 75
3	ON	F2	Condenser coil temperature sensor T3 open circuit or short circuit (only for $\geq 22k$ models)	Page 73

For other errors:

The display board may show a garbled code or a code undefined by the service manual. Ensure that this code is not a temperature reading.

Troubleshooting:

Test the unit using the remote control. If the unit does not respond to the remote, the indoor PCB requires replacement. If the unit responds, the display board requires replacement.

3. Error Diagnosis and Troubleshooting Without Error Code



WARNING

Be sure to turn off unit before any maintenance to prevent damage or injury.

3.1 Remote maintenance

SUGGESTION: When troubles occur, please check the following points with customers before field maintenance.

	Problem	Solution
1	Unit will not start	Page 62-63
2	The power switch is on but fans will not start	Page 62-63
3	The temperature on the playboard cannot be setted	Page 62-63
4	Unit is on but the wind is not cold(hot)	Page 62-63
5	Unit runs, but shortly stops	Page 62-63
6	The unit startup and stop frequently	Page 62-63
7	Unit runs continuously but insufficient cooling(heating)	Page 62-63
8	Cool can not change to heat	Page 62-63
9	Unit is noisy	Page 62-63

3.2 Field maintenance

	Problem	Solution
1	Unit will not start	Page 64-65
2	Compressor will not start but fans run	Page 64-65
3	Compressor and condenser (outdoor) fan will not start	Page 64-65
4	Evaporator (indoor) fan will not start	Page 64-65
5	Condenser (Outdoor) fan will not start	Page 64-65
6	Unit runs, but shortly stops	Page 64-65
7	Compressor short-cycles due to overload	Page 64-65
8	High discharge pressure	Page 64-65
9	Low discharge pressure	Page 64-65
10	High suction pressure	Page 64-65
11	Low suction pressure	Page 64-65
12	Unit runs continuously but insufficient cooling	Page 64-65
13	Too cool	Page 64-65
14	Compressor is noisy	Page 64-65
15	Horizontal louver can not revolve	Page 64-65

1. Remote Maintenance	Electrical Circuit	Refrigerant Circuit
Possible causes of trouble	☆ Power failure	
	☆ The main power tripped	
	☆ Loose connections	
	☆ Faulty transformer	
		☆ The voltage is too high or too low
		☆ The remote control is powered off
		☆ Broken remote control
		☆ Dirty air filter
		☆ Dirty condenser fins
		☆ The setting temperature is higher/lower than the room's(cooling/heating)
		☆ The ambient temperature is too high/low when the mode is cooling/heating
		☆ Fan mode
		☆ SILENCE function is activated(optional function)
		☆ Frosting and defrosting frequently
Unit will not start	☆	
Operation is erratic, unpredictable, or unit is unresponsive		
The temperature on the playboard cannot be setted		
Unit is on but the wind is not cold(hot)	☆	
Unit runs, but shortly stops		☆
The unit startup and stop frequently	☆	
Unit runs continuously but insufficient cooling(heating)		☆
Cool can not change to heat		☆
Unit is noisy		☆
The unit emits a bad odor		☆
Test method / remedy	Test voltage	
	Close the power switch	
	Inspect connections - tighten	
	Change the transformer	
	Test voltage	
	Replace the battery of the remote control	
	Replace the remote control	
	Clean or replace	
	Clean	
	Adjust the setting temperature	
	Turn the AC later	
	Adjust to cool mode	
	Turn off SILENCE function.	
	Turn the AC later	

Check heat load			☆							Heavy load condition	Others
Tighten bolts or screws		☆								Loosen hold down bolts and / or screws	
Close all the windows and doors			☆							Bad airproof	
Remove the obstacles			☆	☆						The air inlet or outlet of either unit is blocked	
Reconnect the power or press ON/OFF button on remote control to restart								☆		Interference from cell phone towers and remote boosters	
Remove them		☆								Shipping plates remain attached	

2. Field Maintenance		Electrical Circuit																		
Possible causes of trouble	Unit will not start	☆	Power failure																	
	Compressor will not start but fans run		☆	Blown fuse or varistor																
	Compressor and condenser (outdoor) fan will not start		☆	Loose connections	☆															
	Evaporator (indoor) fan will not start		☆	Shorted or broken wires	☆	☆														
	Condenser (Outdoor) fan will not start		☆	Safety device opens	☆															
	Unit runs, but shortly stops			Faulty thermostat / room temperature sensor	☆	☆														
	Compressor short-cycles due to overload			Wrong setting place of temperature sensor			☆													
	High discharge pressure			Faulty transformer	☆															
	Low discharge pressure			Shorted or open capacitor					☆	☆										
	High suction pressure			Faulty magnetic contactor for compressor					☆	☆										
	Low suction pressure			Faulty magnetic contactor for fan							☆	☆								
	Unit runs continuously but insufficient cooling			Low voltage					☆	☆										
	Too cool			Faulty stepping motor	☆															
	Compressor is noisy			Shorted or grounded compressor									☆							
Horizontal louver can not revolve			Shorted or grounded fan motor							☆	☆									
Test method / remedy	Test voltage																			
	Inspect fuse type & size																			
	Inspect connections - tighten	☆																		
	Test circuits with tester	☆																		
	Test continuity of safety device																			
	Test continuity of thermostat / sensor & wiring		☆																	
	Place the temperature sensor at the central of the air inlet grille			☆																
	Check control circuit with tester																			
	Check capacitor with tester																			
	Test continuity of coil & contacts																			
	Test continuity of coil & contacts																			
	Test voltage																			
	Replace the stepping motor	☆																		
	Check resistance with meger tester																			
Check resistance with meger tester																				

Replace the compressor																				☆	Compressor stuck	Refrigerant Circuit	
Leak test				☆	☆		☆		☆	☆											Shortage of refrigerant		
Replace restricted part				☆	☆						☆										Restricted liquid line		
Clean or replace				☆	☆																		Dirty air filter
Clean coil				☆	☆																		Dirty evaporator coil
Check fan				☆	☆																		Insufficient air through evaporator coil
Change charged refrigerant volume			☆			☆		☆	☆	☆													Overcharge of refrigerant
Clean condenser or remove obstacle				☆				☆	☆	☆													Dirty or partially blocked condenser
Purge, evacuate and recharge				☆				☆															Air or noncondensable gas in refrigerant cycle
Remove obstruction to air flow				☆				☆															Short cycling of condensing air
Remove obstruction in air or water flow								☆															High temperature condensing medium
Remove obstruction in air or water flow								☆															Insufficient condensing medium
Replace compressor			☆																				Broken compressor internal parts
Test compressor efficiency				☆		☆	☆																Inefficient compressor
Replace valve					☆																	Expansion valve obstructed	
Replace valve					☆							☆										Expansion valve or capillary tube closed completely	
Replace valve					☆							☆										Leaking power element on expansion valve	
Fix feeler bulb						☆																Poor installation of feeler bulb	
Check heat load				☆		☆																Heavy load condition	Others
Tighten bolts or screws			☆																			Loosen hold down bolts and / or screws	
Remove them			☆																			Shipping plates remain attached	
Choose AC of larger capacity or add the number of AC				☆																		Poor choices of capacity	
Rectify piping so as not to contact each other or with external plate			☆																			Contact of piping with other piping or external plate	

4. Quick Maintenance by Error Code

If you do not have the time to test whether specific parts are faulty, you can directly change the required parts according to the error code.

You can find the parts to replace by error code in the following table.

Part requiring replacement	Error Code								
	E0	E1	E2	E3	E4	E5	e7	EC	F2
Indoor PCB	✓	✓	✓	✓	✓	✓	✓	x	✓
Outdoor PCB	x	✓	x	x	x	x	x	x	x
Indoor fan motor	x	x	x	✓	x	x	x	x	x
Outdoor fan motor	x	x	x	x	x	x	x	x	x
Temperature sensor	x	x	x	x	✓	✓	x	x	x
T2 Sensor	x	x	x	x	x	x	x	✓	x
T3 Sensor	x	x	x	x	x	x	x	x	✓
Additional refrigerant	x	x	x	x	x	x	x	✓	x
Display board	x	x	x	x	x	x	✓	x	x

5. Troubleshooting by Error Code

5.1 Common Check Procedures

5.1.1 Temperature Sensor Check

Disconnect the temperature sensor from PCB, measure the resistance value with a tester.

Temperature Sensors.

Room temp.(T1) sensor,

Indoor coil temp.(T2) sensor,

Outdoor coil temp.(T3) sensor,

Outdoor ambient temp.(T4) sensor,

Measure the resistance value of each winding by using the multi-meter.

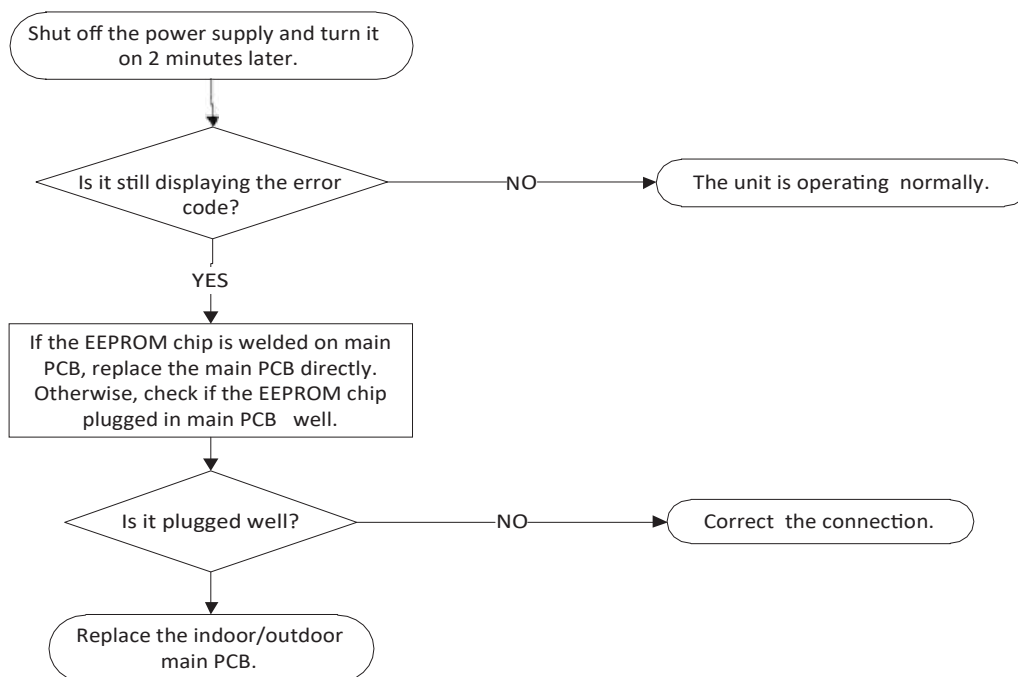
5.2 E0 (EEPROM parameter error)

Description: Indoor or outdoor PCB main chip does not receive feedback from EEPROM chip.

Recommended parts to prepare:

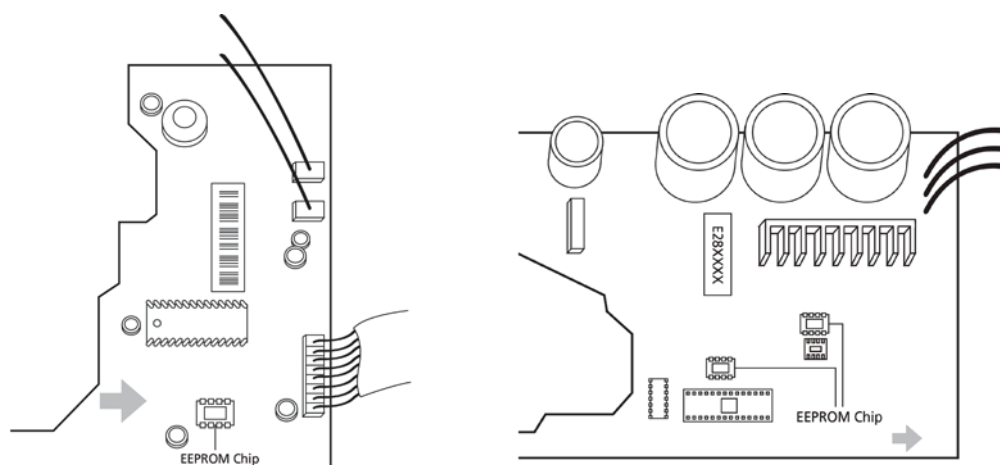
- Indoor PCB
- Outdoor PCB

Troubleshooting and repair:



Remarks:

The location of the EEPROM chip on the indoor and outdoor PCB is shown in the following two images:



Note: These images are for reference only.

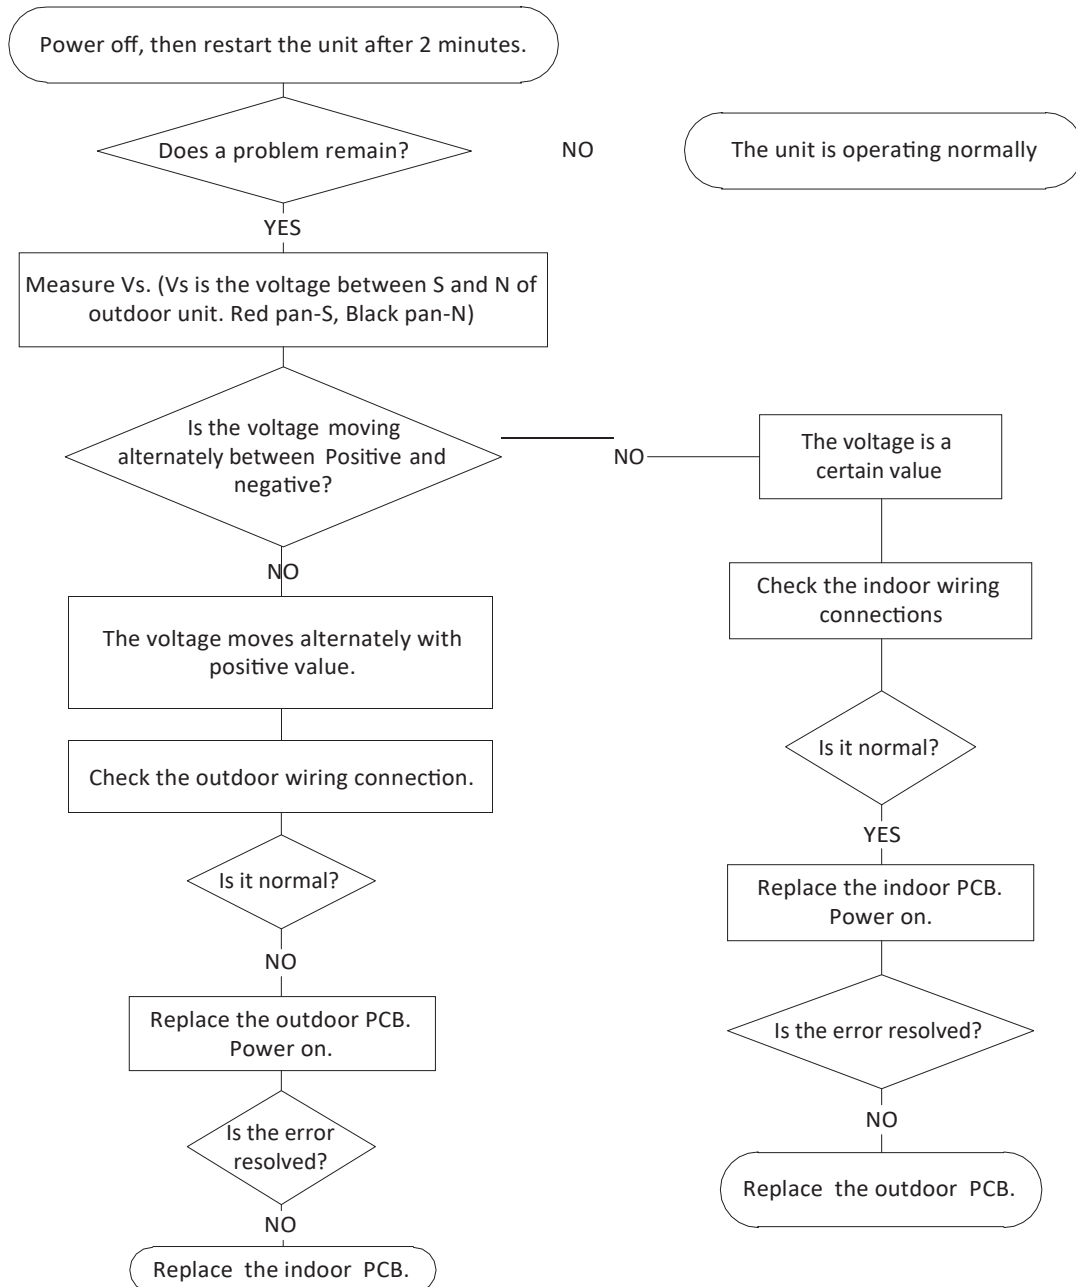
5.3 E1 (Indoor and outdoor unit communication error) (only for ≥22k models)

Description: The indoor unit has not received feedback from the outdoor unit for 120 seconds.

Recommended parts to prepare:

- Indoor PCB
- Outdoor PCB
- Reactor

Troubleshooting and repair:



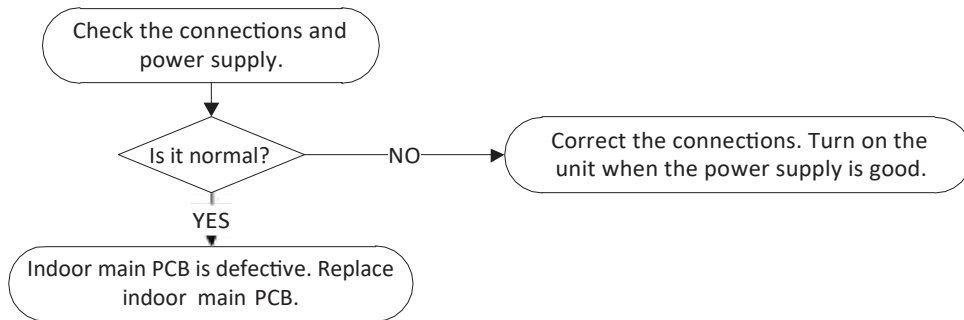
5.4 E2 (Zero crossing detection error diagnosis and solution)

Description: When PCB does not receive zero crossing signal feedback for 4 minutes or the zero crossing signal time interval is abnormal.

Recommended parts to prepare:

- Connection mistake
- PCB faulty

Troubleshooting and repair:



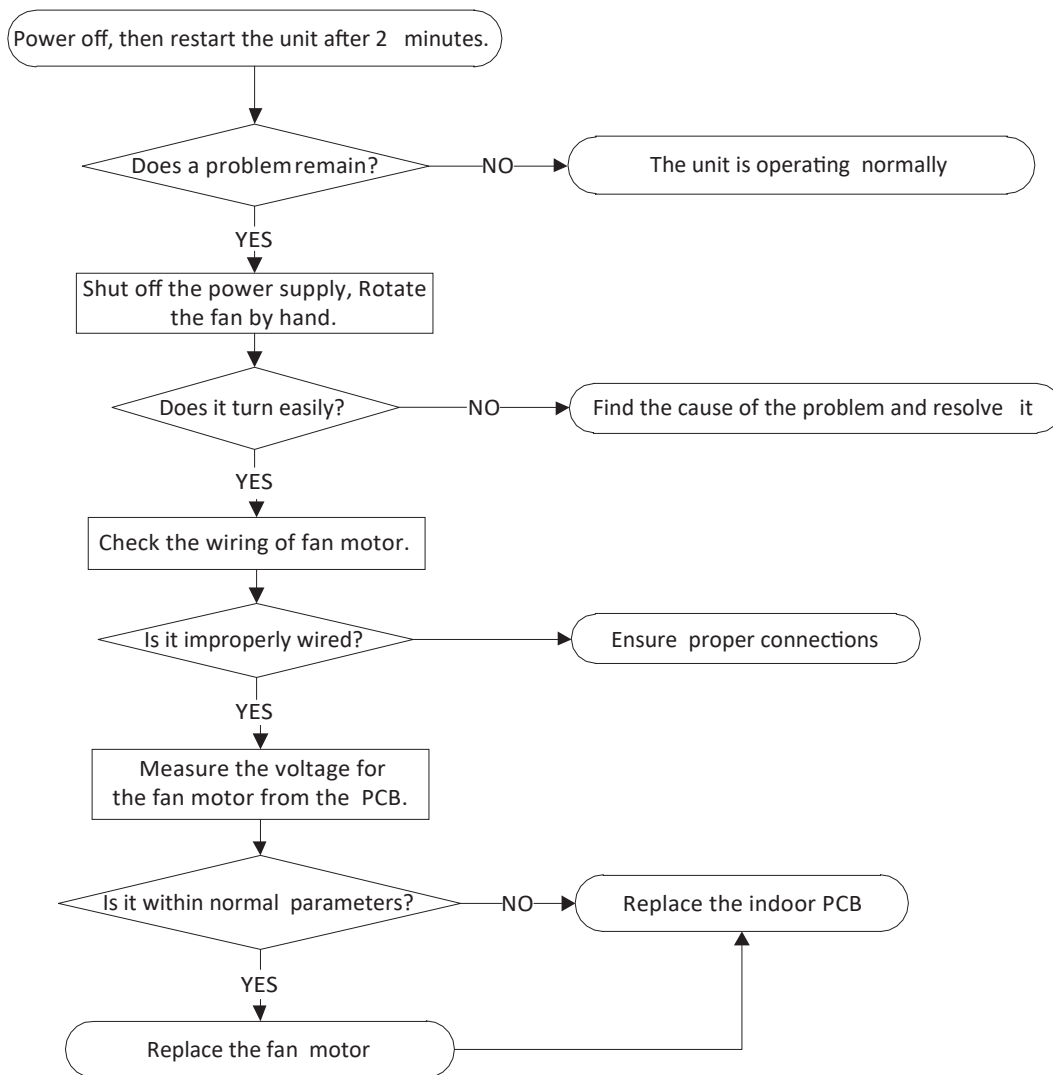
5.5 E3(Fan speed has been out of control diagnosis and solution)

Description: When indoor fan speed keeps too low (300RPM) for certain time, the unit will stop and the LED will display the failure.

Recommended parts to prepare:

- Wiring mistake
- Faulty fan assembly'yfaulty
- Faulty fan motor
- Faulty PCB

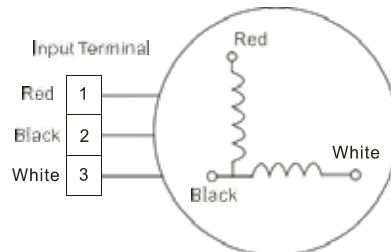
Troubleshooting and repair:



Index:

1. Indoor AC Fan Motor

Power on and set the unit running in fan mode at high fan speed. After running for 15 seconds, measure the voltage of pin1 and pin2. If the value of the voltage is less than 100V(208~240V power supply) or 50V(115V power supply), the PCB must has problems and need to be replaced.



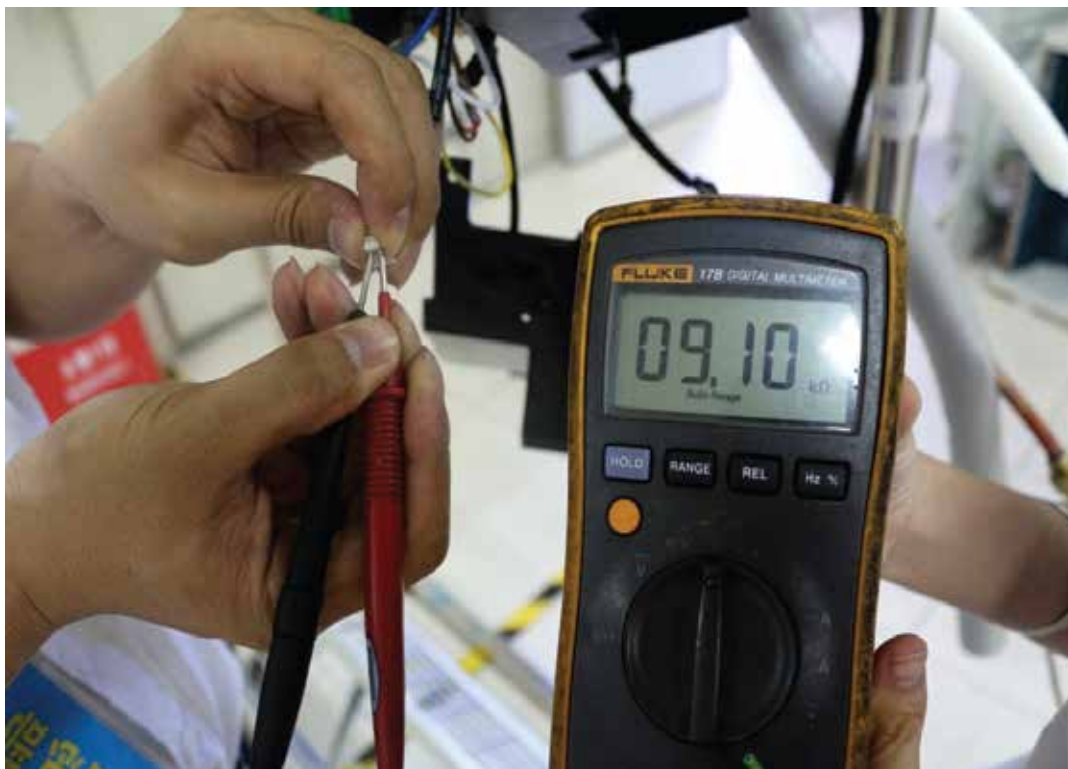
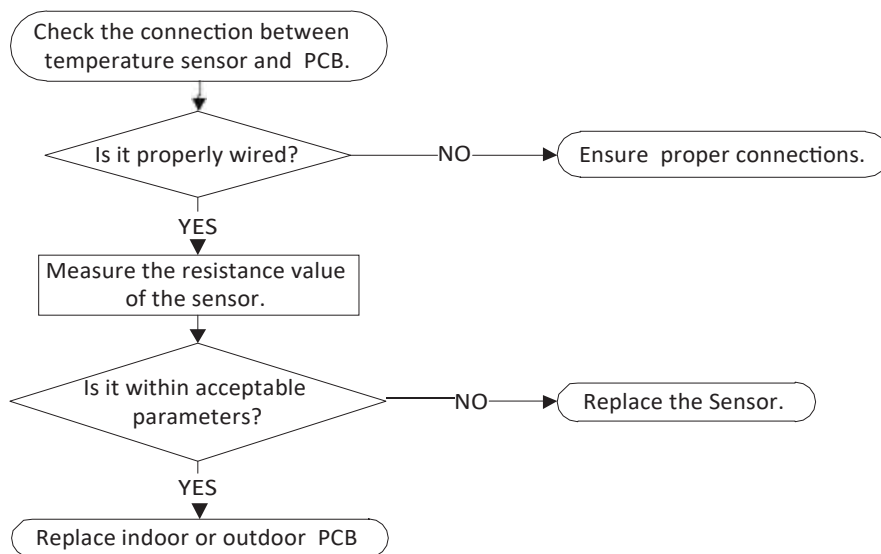
5.6 E4/E5/F2 (Open circuit or short circuit of temperature sensor diagnosis and solution) (F2 is only for $\geq 22k$ models)

Description: If the sampling voltage is lower than 0.06V or higher than 4.94V, the LED will display the failure.

Recommended parts to prepare:

- Wiring mistake
- Faulty sensor
- Faulty PCB

Troubleshooting and repair:



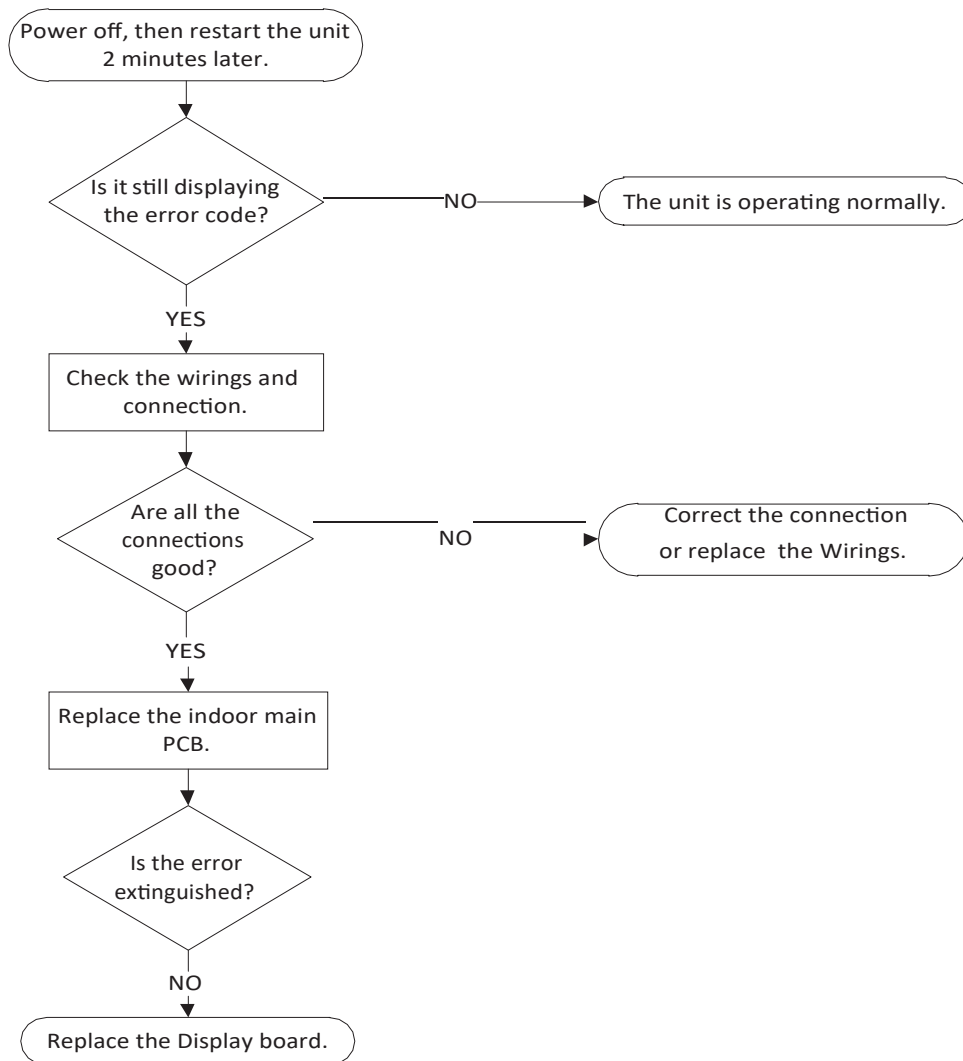
5.7 E7 (Indoor PCB /Display board communication error)

Description: Indoor PCB does not receive feedback from Display board.

Recommended parts to prepare:

- Wiring mistake
- Faulty PCB
- Display board malfunction

Troubleshooting and repair:



5.8 EC (Refrigerant Leakage Detection diagnosis and solution)

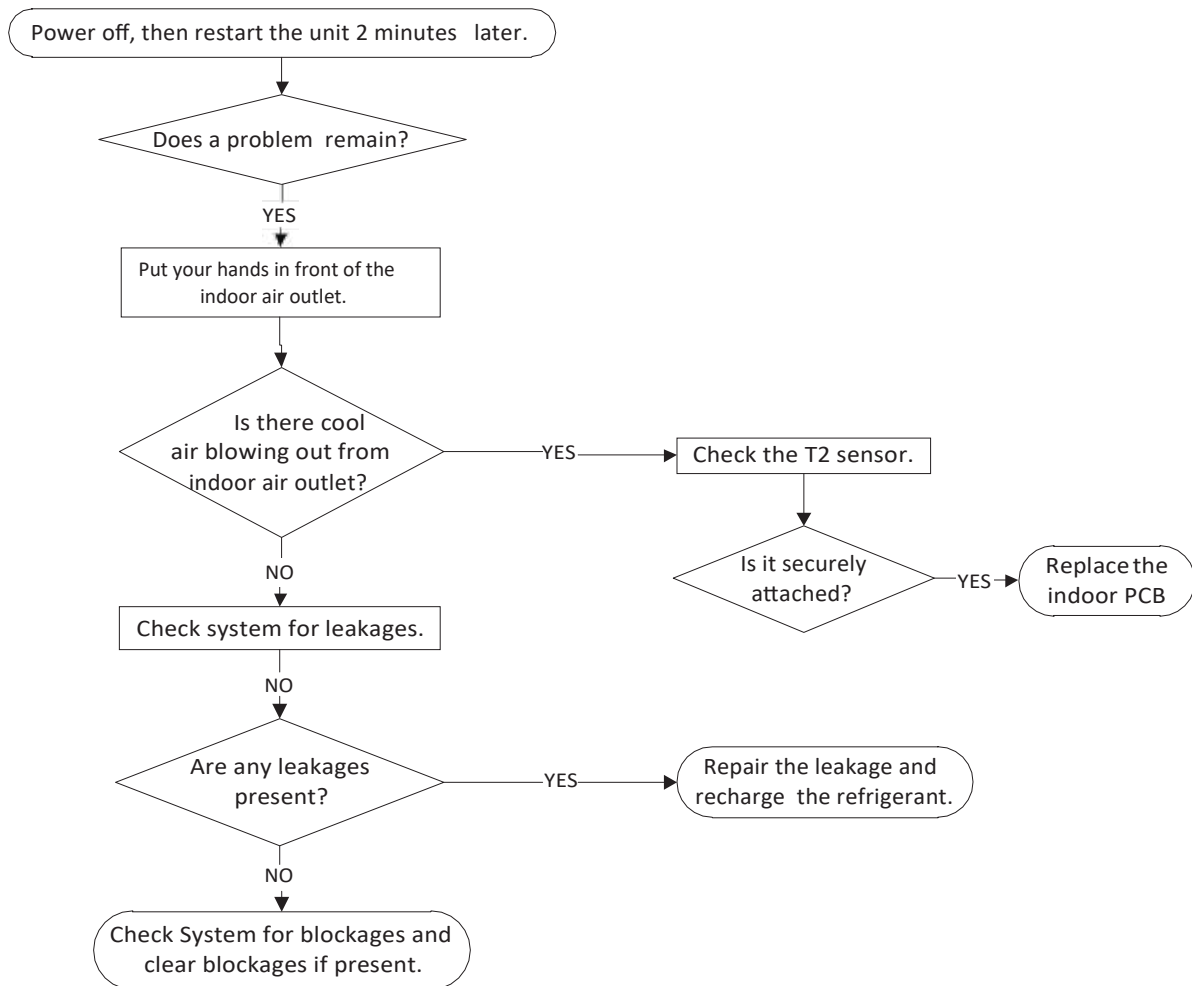
Description: Define the evaporator coil temp.T2 of the compressor just starts running as Tcool.

In the beginning 5 minutes after the compressor starts up, if $T2 < T_{cool} - 2^{\circ}\text{C}$ does not keep continuous 4 seconds and this situation happens 3 times, the display area will show "EC" and AC will turn off.

Recommended parts to prepare:

- Faulty T2 sensor
- Faulty indoor PCB
- System problems, such as leakage or blockages

Troubleshooting and repair:



Contents

- i) **Temperature Sensor Resistance Value Table for T1, T2, T3, and T4 (°C – K)77**

i) Temperature Sensor Resistance Value Table for T1,T2,T3 and T4 (°C – K)

°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm
-20	-4	115.266	20	68	12.6431	60	140	2.35774	100	212	0.62973
-19	-2	108.146	21	70	12.0561	61	142	2.27249	101	214	0.61148
-18	0	101.517	22	72	11.5	62	144	2.19073	102	216	0.59386
-17	1	96.3423	23	73	10.9731	63	145	2.11241	103	217	0.57683
-16	3	89.5865	24	75	10.4736	64	147	2.03732	104	219	0.56038
-15	5	84.219	25	77	10	65	149	1.96532	105	221	0.54448
-14	7	79.311	26	79	9.55074	66	151	1.89627	106	223	0.52912
-13	9	74.536	27	81	9.12445	67	153	1.83003	107	225	0.51426
-12	10	70.1698	28	82	8.71983	68	154	1.76647	108	226	0.49989
-11	12	66.0898	29	84	8.33566	69	156	1.70547	109	228	0.486
-10	14	62.2756	30	86	7.97078	70	158	1.64691	110	230	0.47256
-9	16	58.7079	31	88	7.62411	71	160	1.59068	111	232	0.45957
-8	18	56.3694	32	90	7.29464	72	162	1.53668	112	234	0.44699
-7	19	52.2438	33	91	6.98142	73	163	1.48481	113	235	0.43482
-6	21	49.3161	34	93	6.68355	74	165	1.43498	114	237	0.42304
-5	23	46.5725	35	95	6.40021	75	167	1.38703	115	239	0.41164
-4	25	44	36	97	6.13059	76	169	1.34105	116	241	0.4006
-3	27	41.5878	37	99	5.87359	77	171	1.29078	117	243	0.38991
-2	28	39.8239	38	100	5.62961	78	172	1.25423	118	244	0.37956
-1	30	37.1988	39	102	5.39689	79	174	1.2133	119	246	0.36954
0	32	35.2024	40	104	5.17519	80	176	1.17393	120	248	0.35982
1	34	33.3269	41	106	4.96392	81	178	1.13604	121	250	0.35042
2	36	31.5635	42	108	4.76253	82	180	1.09958	122	252	0.3413
3	37	29.9058	43	109	4.5705	83	181	1.06448	123	253	0.33246
4	39	28.3459	44	111	4.38736	84	183	1.03069	124	255	0.3239
5	41	26.8778	45	113	4.21263	85	185	0.99815	125	257	0.31559
6	43	25.4954	46	115	4.04589	86	187	0.96681	126	259	0.30754
7	45	24.1932	47	117	3.88673	87	189	0.93662	127	261	0.29974
8	46	22.5662	48	118	3.73476	88	190	0.90753	128	262	0.29216
9	48	21.8094	49	120	3.58962	89	192	0.8795	129	264	0.28482
10	50	20.7184	50	122	3.45097	90	194	0.85248	130	266	0.2777
11	52	19.6891	51	124	3.31847	91	196	0.82643	131	268	0.27078
12	54	18.7177	52	126	3.19183	92	198	0.80132	132	270	0.26408
13	55	17.8005	53	127	3.07075	93	199	0.77709	133	271	0.25757
14	57	16.9341	54	129	2.95896	94	201	0.75373	134	273	0.25125
15	59	16.1156	55	131	2.84421	95	203	0.73119	135	275	0.24512
16	61	15.3418	56	133	2.73823	96	205	0.70944	136	277	0.23916
17	63	14.6181	57	135	2.63682	97	207	0.68844	137	279	0.23338
18	64	13.918	58	136	2.53973	98	208	0.66818	138	280	0.22776
19	66	13.2631	59	138	2.44677	99	210	0.64862	139	282	0.22231